

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety information	2
2.1 Safety information	2
2.2 Work that requires high-voltage system to be de-energised	4
2.3 Safety precautions when working on the cooling system	4
2.4 Safety precautions when using testers and measuring instruments during a road test	5
3 Repair instructions	6
3.1 Important notes	6
3.2 General notes	6
3.3 Information on handling fine dust, aluminium dust and steel dust	7
3.4 Routing and attachment of pipes, hoses and wiring	8
3.5 Contact corrosion	8
3.6 Bonding surfaces for self-adhesive components	8
3.7 Secure threaded connections	8
3.8 Identification plates	8
3.9 Impact wrenches	8
3.10 Moulded foam inserts	9
3.11 Bonded joints	11
3.12 Galvanised body panels, high-strength and extra-high-strength steel	12
3.13 Matching the surface contour	18
3.14 Thread repair for M6 pop rivet nut	19
4 Processing body structure adhesive D 180 004 M2	20
4.1 Preparing bonding surfaces	21
5 Using edge milling unit -VAS 882 005-	35
5.1 General information	35
5.2 Assembling unit/changing milling tool	38
5.3 Separating flanged edges	48
5.4 Separating panels at corners and along surfaces	54
5.5 Separating outer edges	57
5.6 Renewing roof	60
5.7 Separating laser weld seams using round head milling unit	62
5.8 Aluminium panels	64
6 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	67
7 Vehicle identification data	69
7.1 Vehicle identification number	69
7.2 Type plate	70
7.3 Vehicle data sticker	70
8 Body panel gaps/shut lines	71
9 Body dimensions	74
9.1 Body - front	74
9.2 Body - centre	76
9.3 Floor group	82
9.4 Body - rear	86
10 Tools	89
11 Straightening jig	93
11.1 Procedure for repairing structural body damage on Audi vehicles	93
50 - Body - front	94



1	Safety information	94
2	Renewing support bracket (right-side)	95
2.1	Tools	95
2.2	Procedure	95
3	Renewing support bracket (left-side)	99
3.1	Tools	99
3.2	Procedure	99
4	Renewing mounting bracket (for subframe)	105
4.1	Tools	105
4.2	Procedure	105
5	Renewing upper wheel housing longitudinal member	110
5.1	Tools	110
5.2	Procedure	111
6	Renewing front wheel housing	117
6.1	Tools	118
6.2	Procedure	118
7	Renewing front longitudinal member	124
7.1	Tools	125
7.2	Procedure	125
8	Renewing front longitudinal member - part section	137
8.1	Tools	137
8.2	Procedure	138
9	Repairing threads for attachment of subframe	148
9.1	Tools	148
51 - Body - centre		155
1	Safety information	155
2	Permitted separating cuts on complete side frame	156
3	Renewing roof	157
3.1	Tools	157
3.2	Procedure	163
4	Renewing roof (version with large sunroof)	178
4.1	Tools	178
4.2	Procedure	179
5	Renewing roof side member	191
5.1	Tools	191
5.2	Procedure	192
6	Renewing front roof cross member	198
6.1	Tools	198
6.2	Procedure	199
7	Renewing rear roof cross member	202
7.1	Tools	202
7.2	Procedure	203
8	Renewing outer A-pillar	208
8.1	Tools	208
8.2	Procedure	209
9	Renewing upper inner A-pillar - partial renewal	213
9.1	Tools	213
9.2	Procedure	214
10	Renewing lower inner A-pillar - partial renewal	224
10.1	Tools	224
10.2	Procedure	225

11	Renewing outer B-pillar	229
11.1	Tools	229
11.2	Procedure	230
12	Renewing inner B-pillar - partial renewal	235
12.1	Tools	235
12.2	Procedure	236
13	Renewing outer side member	249
13.1	Tools	249
13.2	Procedure	250
14	Renewing inner side member	256
14.1	Tools	256
14.2	Procedure	257
15	Renewing web plate for inner side member	262
15.1	Tools	262
15.2	Procedure	263
16	Renewing inner side member reinforcement	266
16.1	Tools	266
16.2	Procedure	267
17	Renewing mounting for outer seat cross member	270
17.1	Tools	270
17.2	Procedure	271
18	Renewing centre seat cross member	275
18.1	Tools	275
18.2	Procedure	276
19	Renewing mounting for inner seat cross member	280
19.1	Tools	280
19.2	Procedure	281
53 - Body - rear		285
1	Safety information	285
2	Permitted separating cuts on complete side frame	286
3	Renewing rear upper cross panel	287
3.1	Tools	287
3.2	Procedure	288
4	Renewing rear cross panel	292
4.1	Tools	292
4.2	Procedure	293
5	Renewing rear longitudinal member - part section	296
5.1	Tools	296
5.2	Procedure	297
6	Renewing side panel	301
6.1	Tools	301
6.2	Procedure	302
7	Renewing luggage compartment floor	310
7.1	Tools	310
7.2	Procedure	311
8	Renewing battery box (RS model only)	317
8.1	Procedure	317
9	Renewing rear wheel housing	323
9.1	Tools	323
9.2	Procedure	324