

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Bevel box identification .....	3
<b>2 Technical data</b> .....	<b>4</b>
2.1 Allocation of gearbox to engine .....	4
2.2 Capacities .....	6
2.3 Calculating gear ratios .....	7
<b>3 Overview - power transmission</b> .....	<b>8</b>
3.1 Overview - power transmission, front-wheel drive .....	8
3.2 Overview - power transmission, four-wheel drive .....	9
<b>4 Safety information</b> .....	<b>10</b>
4.1 Safety precautions when working on vehicles with start/stop system .....	10
<b>5 Repair instructions</b> .....	<b>11</b>
5.1 Use of impact wrenches .....	11
5.2 General repair instructions .....	11
5.3 Contact corrosion .....	14
<b>6 Electrical components</b> .....	<b>16</b>
6.1 Overview of fitting locations - electrical components .....	16
<b>30 - Clutch</b> .....	<b>17</b>
<b>1 Clutch mechanism</b> .....	<b>17</b>
1.1 Assembly overview - pedal cluster .....	17
1.2 Assembly overview - clutch hydraulics .....	19
1.3 Assembly overview - clutch release mechanism .....	24
1.4 Checking clutch master cylinder and clutch slave cylinder .....	27
1.5 Removing and installing clutch position sender G476 .....	28
1.6 Removing and installing over-centre spring .....	29
1.7 Removing and installing clutch pedal .....	33
1.8 Removing and installing mounting bracket .....	34
1.9 Removing and installing clutch master cylinder .....	41
1.10 Removing and installing clutch slave cylinder together with release bearing .....	43
1.11 Removing and installing lines for clutch hydraulics .....	45
1.12 Bleeding clutch hydraulics .....	47
<b>2 Clutch</b> .....	<b>50</b>
2.1 Identifying different makes of clutch .....	50
2.2 Assembly overview - clutch unit .....	51
2.3 Removing and installing clutch .....	56
<b>34 - Controls, housing</b> .....	<b>67</b>
<b>1 Selector mechanism</b> .....	<b>67</b>
1.1 Overview - selector mechanism .....	67
1.2 Assembly overview - gear knob and cover .....	68
1.3 Assembly overview - gear lever and selector housing .....	68
1.4 Exploded view - selector cables .....	70
1.5 Removing and installing gear knob .....	76
1.6 Removing and installing selector mechanism .....	78
1.7 Removing and installing selector cable .....	81
1.8 Dismantling and assembling selector mechanism .....	83
1.9 Adjusting selector mechanism .....	91
1.10 Checking selector mechanism .....	93
1.11 Renewing selector shaft oil seal .....	94



<b>2</b>	<b>Removing and installing gearbox</b>	<b>98</b>
2.1	Removing gearbox	98
2.2	Installing gearbox	179
2.3	Tightening torques for gearbox	183
<b>3</b>	<b>Assembly mountings</b>	<b>187</b>
3.1	Assembly overview - assembly mountings	187
<b>4</b>	<b>Transporting gearbox</b>	<b>190</b>
<b>5</b>	<b>Gear oil</b>	<b>192</b>
5.1	Distinguishing manual gearboxes for oil filling	192
5.2	Checking gear oil level	192
<b>6</b>	<b>Bevel box</b>	<b>198</b>
6.1	Removing bevel box	198
6.2	Installing bevel box	228
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>234</b>
<b>8</b>	<b>Dismantling and assembling gearbox</b>	<b>236</b>
8.1	Dismantling and assembling gearbox	236
8.2	Exploded view - selector unit	236
8.3	Removing and installing selector unit	237
<b>35 - Gears, shafts</b>		<b>241</b>
<b>1</b>	<b>Input shaft</b>	<b>241</b>
1.1	Dismantling and assembling input shaft	241
1.2	Renewing input shaft oil seal	241
<b>2</b>	<b>Output shaft</b>	<b>243</b>
2.1	Dismantling and assembling output shaft	243
<b>39 - Final drive - front differential</b>		<b>244</b>
<b>1</b>	<b>Oil seals</b>	<b>244</b>
1.1	Overview of fitting locations - oil seals	244
1.2	Renewing oil seal (left-side)	246
1.3	Renewing oil seal (right-side)	247
<b>2</b>	<b>Differential</b>	<b>251</b>
2.1	Exploded view - differential	251
2.2	Removing and installing flange shaft (left-side)	252
2.3	Removing and installing flange shaft (right-side)	256
2.4	Dismantling and assembling differential	261
<b>3</b>	<b>Bevel box</b>	<b>262</b>
3.1	Assembly overview - bevel box	262
3.2	Renewing oil seals for bevel box	264
<b>4</b>	<b>Gear oil</b>	<b>278</b>
4.1	Checking gear oil level	278
4.2	Draining and filling gear oil	279