

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of bevel box	2
2 Technical data	3
2.1 Allocation of gearbox to engine	3
2.2 Capacities	4
2.3 Calculating gear ratios	4
3 Overview - power transmission	6
3.1 Overview - power transmission, front-wheel drive	6
3.2 Overview - power transmission, all-wheel drive	7
4 Safety information	8
4.1 Safety precautions when working on vehicles with start/stop system	8
5 Repair instructions	9
5.1 General repair instructions	9
5.2 Contact corrosion	14
6 Electrical components	15
6.1 Overview of fitting locations - electrical components	15
30 - Clutch	17
1 Clutch mechanism	17
1.1 Assembly overview - pedal cluster	17
1.2 Assembly overview - clutch hydraulics	19
1.3 Assembly overview - clutch release mechanism	23
1.4 Function check for clutch master cylinder and slave cylinder	25
1.5 Removing and installing clutch position sender G476	26
1.6 Removing and installing over-centre spring	27
1.7 Removing and installing clutch pedal	30
1.8 Removing and installing mounting bracket	31
1.9 Removing and installing clutch master cylinder	35
1.10 Removing and installing clutch slave cylinder together with release bearing	37
1.11 Removing and installing lines for clutch mechanism	38
1.12 Bleeding clutch mechanism	40
2 Clutch	42
2.1 Assembly overview - clutch	42
2.2 Identifying different makes of clutch	48
2.3 Removing and installing clutch	49
34 - Controls, housing	56
1 Selector mechanism	56
1.1 Overview - selector mechanism	56
1.2 Assembly overview - gear knob and cover	57
1.3 Assembly overview - gear lever and selector housing	58
1.4 Assembly overview - selector cables	60
1.5 Removing and installing gear knob	65
1.6 Removing and installing selector mechanism	66
1.7 Dismantling and assembling selector mechanism	70
1.8 Removing and installing selector cable	75
1.9 Adjusting selector mechanism	76
1.10 Checking selector mechanism	78
1.11 Renewing selector shaft oil seal	78
2 Removing and installing gearbox	82



2.1	Removing gearbox	82
2.2	Installing gearbox	89
2.3	Tightening torques for gearbox	91
3	Assembly mountings	92
3.1	Assembly overview - assembly mountings	92
4	Bevel box	93
4.1	Removing bevel box	93
4.2	Installing bevel box	101
4.3	Removing and installing bevel box (gearbox removed from vehicle)	103
5	Transporting gearbox	107
6	Dismantling and assembling gearbox	108
6.1	Schematic overview - gearbox	108
6.2	Exploded view - gearbox	109
6.3	Assembly overview - selector unit	112
6.4	Assembly overview - input shaft, output shafts, differential and selector rods	113
6.5	Assembly overview - selector forks	115
6.6	Dismantling and assembling gearbox	116
6.7	Removing and installing selector unit with gearbox installed	129
7	Gearbox housing, clutch housing	132
7.1	Assembly overview - gearbox housing	132
7.2	Assembly overview - clutch housing	134
7.3	Servicing gearbox housing	136
7.4	Servicing clutch housing	139
8	Securing to engine and gearbox support	142
9	Gear oil	144
9.1	Checking gear oil level	144
35 - Gears, shafts		145
1	Input shaft	145
1.1	Assembly overview - input shaft	145
1.2	Dismantling and assembling input shaft	147
2	Output shaft	153
2.1	Assembly overview - output shaft	153
2.2	Dismantling and assembling output shaft	159
39 - Final drive - front differential		188
1	Oil seals	188
1.1	Overview of fitting locations - oil seals	188
1.2	Renewing left oil seal	190
1.3	Renewing right oil seal	192
1.4	Renewing input shaft oil seal	194
2	Differential	196
2.1	Assembly overview - differential	196
2.2	Dismantling and assembling differential	199
2.3	Adjusting differential	204
3	Components of bevel box	208
3.1	Assembly overview - components of bevel box	208
3.2	Renewing oil seals for bevel box	210
4	Gear oil	226
4.1	Checking gear oil level	226
4.2	Draining and filling gear oil	227