

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of torque converter	1
1.3 Bevel box identification	2
2 Safety precautions	3
2.1 General safety precautions	3
2.2 Safety precautions when using testers and measuring instruments during a road test	4
2.3 Safety precautions when tow-starting and towing	4
3 Repair instructions	5
3.1 General repair instructions	5
3.2 Rules for cleanliness	6
3.3 Gaskets, seals	7
3.4 Nuts, bolts	7
3.5 Electrical components	7
3.6 Contact corrosion	7
4 Electrical components	9
4.1 Overview of fitting locations - electrical components	9
5 Technical data	13
5.1 Capacities	13
32 - Torque converter	14
1 Torque converter	14
1.1 Identification of torque converter	14
1.2 Removing and installing torque converter	14
1.3 Draining torque converter	15
1.4 Removing and installing oil seal for torque converter	16
1.5 Checking torque converter	17
37 - Controls, housing	18
1 Selector mechanism	18
1.1 Exploded view - selector mechanism	18
1.2 Exploded view - selector lever handle	20
1.3 Checking selector mechanism	20
1.4 Manual release from position P	21
1.5 Removing and installing selector mechanism	22
1.6 Removing and installing selector lever handle	28
1.7 Moving interlock button on selector lever handle into installation position	30
1.8 Checking and adjusting selector lever cable	32
1.9 Removing and installing multifunction switch	35
1.10 Adjusting multifunction switch	37
1.11 Renewing selector shaft oil seal	38
2 ATF circuit	40
2.1 Exploded view - ATF circuit	40
2.2 Removing and installing ATF cooler	41
2.3 Removing and installing bracket for ATF cooler	44
2.4 Removing and installing ATF lines	47
3 ATF	52
3.1 Checking ATF level	52
3.2 Topping up ATF	54
3.3 Draining and filling ATF	55
4 Connecting vehicle diagnostic tester and selecting functions	58



5	Bevel box	59
5.1	Removing bevel box	59
5.2	Installing bevel box	62
6	Removing and installing gearbox	66
6.1	Removing gearbox	66
6.2	Installing gearbox	90
6.3	Tightening torques for gearbox	92
7	Transporting gearbox	94
8	Securing to engine and gearbox support	95
9	Assembly mountings	96
9.1	Exploded view - assembly mountings	96
38 - Gears, control		98
1	ATF system	98
1.1	Removing and installing oil pan	98
1.2	Removing and installing ATF strainer	99
2	Valve body	101
2.1	Exploded view - valve body	101
2.2	Removing and installing valve body	103
2.3	Wiring layout on valve body	109
2.4	Removing and installing wiring harness for solenoid valves and senders	111
2.5	Removing and installing gearbox input speed sender G182	112
2.6	Removing and installing gearbox output speed sender G195	112
39 - Final drive - differential		114
1	Bevel box	114
1.1	Exploded view - bevel box	114
1.2	Renewing oil seals for bevel box	115
2	Gear oil	130
2.1	Checking gear oil level	130
2.2	Draining and filling gear oil	131
3	Oil seals	135
3.1	Overview of fitting locations - oil seals	135
3.2	Renewing oil seal (left-side)	136
3.3	Renewing oil seal (right-side)	138