

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
<b>2 Technical data</b>	<b>3</b>
2.1 Allocation of gearbox to engine	3
2.2 Calculating gear ratios	3
2.3 Capacities	3
<b>3 Safety precautions</b>	<b>5</b>
3.1 General safety precautions	5
3.2 Safety precautions when working on vehicles with start/stop system	5
3.3 Safety precautions when using testers and measuring instruments during a road test	6
3.4 Notes on tow-starting and towing	6
<b>4 Repair instructions</b>	<b>7</b>
4.1 General notes	7
4.2 Safety functions of gearbox control unit	8
4.3 Rules for cleanliness	9
4.4 General repair instructions	9
4.5 Contact corrosion	11
<b>30 - Clutch</b>	<b>12</b>
<b>1 Clutch</b>	<b>12</b>
1.1 Exploded view - dual clutch	12
1.2 Removing dual clutch	14
1.3 Installing dual clutch	17
<b>34 - Controls, housing</b>	<b>26</b>
<b>1 Selector mechanism</b>	<b>26</b>
1.1 Exploded view - selector lever handle	26
1.2 Exploded view - selector mechanism	27
1.3 Manual release from position P	28
1.4 Removing and installing selector lever handle	28
1.5 Removing and installing selector mechanism	31
1.6 Checking selector mechanism	33
1.7 Checking and adjusting selector lever cable	36
1.8 Renewing selector shaft oil seal	39
<b>2 Removing and installing gearbox</b>	<b>42</b>
2.1 Removing gearbox	42
2.2 Installing gearbox	48
2.3 Tightening torques for gearbox	49
<b>3 Transporting gearbox</b>	<b>51</b>
<b>4 Securing to engine and gearbox support</b>	<b>53</b>
<b>5 Assembly mountings</b>	<b>55</b>
5.1 Exploded view - assembly mountings	55
<b>6 Mechatronic unit</b>	<b>57</b>
6.1 Exploded view - mechatronic unit	57
6.2 Removing and installing oil pan	58
6.3 Removing and installing mechatronic unit	60
6.4 Removing and installing gearbox input speed sender G182 / clutch temperature sender G509	64
<b>7 Gear oil circuit</b>	<b>66</b>
7.1 Overview - gear oil circuit	66
7.2 Removing and installing gear oil cooler	67



7.3	Removing and installing gear oil filter .....	69
7.4	Removing and installing gear oil pump .....	69
<b>8</b>	<b>Gear oil</b> .....	<b>73</b>
8.1	Checking gear oil level .....	73
8.2	Draining and filling gear oil .....	78
<b>35</b>	<b>Gears, shafts</b> .....	<b>82</b>
1	Dismantling and assembling gears and shafts .....	82
<b>39</b>	<b>Final drive - differential</b> .....	<b>83</b>
1	<b>Gearbox control system</b> .....	<b>83</b>
1.1	Overview of fitting locations - gearbox control system .....	83
2	<b>Oil seals</b> .....	<b>85</b>
2.1	Overview of fitting locations - oil seals .....	85
2.2	Renewing oil seal (left-side) .....	85
2.3	Renewing oil seal (right-side) .....	87
3	<b>Differential</b> .....	<b>89</b>
3.1	Exploded view - differential .....	89
3.2	Removing and installing flange shaft (left-side) .....	89
3.3	Removing and installing flange shaft (right-side) .....	92