

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Identification of bevel box .....	2
<b>2 Technical data</b> .....	<b>3</b>
2.1 Capacities .....	3
<b>3 Safety information</b> .....	<b>5</b>
3.1 General safety regulations .....	5
3.2 Safety precautions when working on vehicles with start/stop system .....	6
3.3 Safety precautions when using testers and measuring instruments during a road test .....	6
3.4 Safety precautions when tow-starting and towing .....	6
<b>4 Repair instructions</b> .....	<b>8</b>
4.1 General notes .....	8
4.2 Rules for cleanliness .....	9
4.3 General repair instructions .....	9
4.4 Contact corrosion .....	11
4.5 Safety functions of gearbox control unit .....	11
<b>5 Electrical components</b> .....	<b>13</b>
5.1 Overview of fitting locations - electrical components .....	13
<b>30 - Clutch</b> .....	<b>14</b>
<b>1 Clutch</b> .....	<b>14</b>
1.1 Assembly overview - dual clutch .....	14
1.2 Removing and installing clutch end cover .....	15
1.3 Removing dual clutch .....	19
1.4 Installing dual clutch .....	22
<b>34 - Controls, housing</b> .....	<b>30</b>
<b>1 Selector mechanism</b> .....	<b>30</b>
1.1 Assembly overview - selector lever handle .....	30
1.2 Assembly overview - selector mechanism .....	32
1.3 Manual release from position P .....	33
1.4 Removing and installing selector lever handle .....	35
1.5 Removing and installing selector mechanism .....	40
1.6 Checking selector mechanism .....	43
1.7 Checking and adjusting selector lever cable .....	46
<b>2 Removing and installing gearbox</b> .....	<b>48</b>
2.1 Removing gearbox .....	48
2.2 Installing gearbox .....	84
2.3 Tightening torques for gearbox .....	87
<b>3 Transporting gearbox</b> .....	<b>89</b>
<b>4 Securing to engine and gearbox support</b> .....	<b>91</b>
<b>5 Assembly mountings</b> .....	<b>93</b>
5.1 Assembly overview - assembly mountings .....	93
<b>6 Bevel box</b> .....	<b>94</b>
6.1 Removing bevel box .....	94
6.2 Installing bevel box .....	123
<b>7 Gear oil circuit</b> .....	<b>127</b>
7.1 Assembly overview - gear oil circuit .....	127
7.2 Removing and installing gear oil cooler .....	127
7.3 Removing and installing gear oil filter .....	129



<b>8</b>	<b>Mechatronic unit</b> .....	<b>132</b>
8.1	Assembly overview - mechatronic unit .....	132
8.2	Removing and installing oil pan .....	134
8.3	Removing and installing mechatronic unit .....	139
8.4	Removing and installing gearbox input speed sender G182 / clutch temperature sender G509 .....	142
<b>9</b>	<b>Gear oil</b> .....	<b>144</b>
9.1	Checking gear oil level .....	144
9.2	Draining and filling gear oil .....	150
<b>10</b>	<b>Dismantling and assembling gearbox</b> .....	<b>154</b>
10.1	Renewing sealing cap .....	154
<b>35 - Gears, shafts</b> .....		<b>156</b>
1	Dismantling and assembling gears and shafts .....	156
<b>39 - Final drive - differential</b> .....		<b>157</b>
<b>1</b>	<b>Gearbox control system</b> .....	<b>157</b>
1.1	Overview of fitting locations - gearbox control system .....	157
1.2	Overview of fitting locations - mechatronic unit senders .....	159
<b>2</b>	<b>Oil seals</b> .....	<b>160</b>
2.1	Overview of fitting locations - oil seals .....	160
2.2	Renewing left oil seal .....	161
2.3	Renewing right oil seal .....	162
<b>3</b>	<b>Gear oil</b> .....	<b>166</b>
3.1	Checking gear oil level .....	166
3.2	Draining and filling gear oil .....	167
<b>4</b>	<b>Components of bevel box</b> .....	<b>172</b>
4.1	Assembly overview - components of bevel box .....	172
4.2	Renewing oil seals for bevel box .....	176
4.3	Renewing needle bearings for stub shaft (right-side) .....	184
4.4	Removing and installing output flange .....	187