

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	2
2.4 Safety precautions when working on the ignition system	3
2.5 Safety precautions when working on the cooling system	3
2.6 Safety precautions when working on the exhaust system	3
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Foreign material in engine	6
3.5 Cleaning engine	6
3.6 Contact corrosion	6
3.7 Routing and attachment of pipes, hoses and wiring	7
3.8 Installing radiators and condensers	7
3.9 Nuts, bolts	7
3.10 Identification plates	8
3.11 Use of impact wrenches	8
3.12 Checking vacuum system	8
10 - Removing and installing engine	10
1 Removing and installing engine	10
1.1 Removing engine	10
1.2 Separating engine and gearbox	30
1.3 Securing engine to engine and gearbox support	34
1.4 Installing engine	37
2 Assembly mountings	42
2.1 Assembly overview - assembly mountings	42
2.2 Supporting engine in installation position	44
2.3 Removing and installing engine mountings	46
2.4 Removing and installing gearbox mounting	49
2.5 Removing and installing pendulum support	51
2.6 Checking adjustment of assembly mountings	52
2.7 Adjusting assembly mountings	53
3 Engine cover panel	57
3.1 Removing and installing engine cover panel	57
13 - Crankshaft group	58
1 Cylinder block (pulley end)	58
1.1 Assembly overview - poly V-belt drive	58
1.2 Assembly overview - sealing flange (pulley end)	60
1.3 Removing and installing poly V-belt	62
1.4 Removing and installing poly V-belt tensioner	64
1.5 Removing and installing engine support	64
1.6 Removing and installing pulley	67
1.7 Renewing crankshaft oil seal (pulley end)	70
1.8 Removing and installing sealing flange (pulley end)	73
2 Cylinder block (gearbox end)	77



2.1	Assembly overview - cylinder block (gearbox end)	77
2.2	Removing and installing flywheel	79
2.3	Removing and installing sealing flange (gearbox end)	81
3	Crankshaft	93
3.1	Crankshaft dimensions	93
3.2	Renewing needle bearing in crankshaft	93
4	Pistons and conrods	96
4.1	Assembly overview - pistons and conrods	96
4.2	Removing and installing pistons	99
4.3	Removing and installing oil spray jets	100
4.4	Checking pistons and cylinder bores	102
4.5	Separating parts of new conrod	104
4.6	Checking radial clearance of conrod bearings	105
15	Cylinder head, valve gear	106
1	Toothed belt drive	106
1.1	Assembly overview - toothed belt guard	106
1.2	Assembly overview - toothed belt	106
1.3	Detaching toothed belt from camshaft	110
1.4	Removing and installing toothed belt	166
2	Cylinder head	226
2.1	Assembly overview - cylinder head	226
2.2	Assembly overview - camshaft housing	229
2.3	Removing and installing cylinder head	232
2.4	Removing and installing camshaft housing	238
2.5	Checking compression	245
3	Valve gear	248
3.1	Assembly overview - valve gear	248
3.2	Measuring axial clearance of camshaft	250
3.3	Removing and installing camshaft oil seal	251
3.4	Removing and installing cam actuators	262
3.5	Removing and installing camshaft control valve 1 N205	264
3.6	Removing and installing valve stem oil seals	265
4	Inlet and exhaust valves	275
4.1	Checking valve guides	275
4.2	Checking valves	276
4.3	Valve dimensions	276
17	Lubrication	277
1	Sump/oil pump	277
1.1	Assembly overview - sump/oil pump	277
1.2	Engine oil	280
1.3	Removing and installing lower part of sump	280
1.4	Removing and installing upper part of sump	285
1.5	Removing and installing oil pump	289
1.6	Removing and installing oil level and oil temperature sender G266	290
2	Engine oil cooler	292
2.1	Assembly overview - engine oil cooler	292
2.2	Removing and installing engine oil cooler	292
3	Crankcase breather	295
3.1	Assembly overview - crankcase breather system	295
3.2	Removing and installing oil separator	296
4	Oil filter/oil pressure switches	300
4.1	Assembly overview - oil filter/oil pressure switch	300

4.2	Removing and installing oil pressure switch F22	302
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	304
4.4	Checking oil pressure	305
4.5	Removing and installing valve for oil pressure control N428	306
19	- Cooling	307
1	Cooling system/coolant	307
1.1	Connection diagram - coolant hoses	307
1.2	Checking cooling system for leaks	308
1.3	Draining and filling cooling system	311
2	Coolant expansion tank	320
2.1	Assembly overview - coolant expansion tank	320
2.2	Removing and installing coolant expansion tank	321
3	Coolant pump/thermostat assembly	323
3.1	Assembly overview - coolant pump/thermostat	323
3.2	Assembly overview - electric coolant pump	326
3.3	Assembly overview - coolant temperature senders	327
3.4	Removing and installing electric coolant pump	328
3.5	Removing and installing coolant pump	330
3.6	Removing and installing thermostat	336
3.7	Removing and installing toothed belt pulley for coolant pump	339
3.8	Removing and installing coolant temperature sender G62	345
3.9	Removing and installing radiator outlet coolant temperature sender G83	346
4	Coolant pipes	348
4.1	Assembly overview - coolant pipes	348
4.2	Removing and installing coolant pipes	349
5	Radiator/radiator fans	354
5.1	Assembly overview - radiator/radiator fans	354
5.2	Removing and installing radiator	357
5.3	Removing and installing water radiator for charge air cooling circuit	361
5.4	Removing and installing radiator cowl	364
5.5	Removing and installing radiator fans	366
21	- Turbocharging/supercharging	369
1	Turbocharger	369
1.1	Assembly overview - turbocharger	369
1.2	Removing and installing turbocharger	375
1.3	Renewing vacuum unit for turbocharger	382
1.4	Removing and installing charge pressure positioner V465	383
1.5	Removing and installing connection for turbocharger	385
2	Charge air system	390
2.1	Assembly overview - charge air system	390
2.2	Removing and installing charge pressure sender G31	392
2.3	Removing and installing charge air cooler	392
2.4	Checking charge air system for leaks	394
24	- Mixture preparation - injection	398
1	Injection system	398
1.1	Overview of fitting locations - injection system	398
2	Air filter	407
2.1	Assembly overview - air filter housing	407
2.2	Removing and installing air filter housing	408
3	Intake manifold	409
3.1	Assembly overview - intake manifold	409
3.2	Removing and installing intake manifold	411



3.3	Removing and installing throttle valve module J338	421
3.4	Cleaning throttle valve module	424
4	Injectors	426
4.1	Assembly overview - fuel rail with injectors	426
4.2	Removing and installing fuel rail	428
4.3	Removing and installing injectors	429
4.4	Cleaning injectors	436
5	Senders and sensors	438
5.1	Removing and installing intake air temperature sender G42	438
5.2	Removing and installing fuel pressure sender G247	438
5.3	Checking fuel pressure sender G247	439
6	High-pressure pump	443
6.1	Assembly overview - high-pressure pump	443
6.2	Removing and installing high-pressure pump	448
6.3	Removing and installing high-pressure pipe	450
7	Lambda probe	452
7.1	Assembly overview - Lambda probe	452
7.2	Removing and installing Lambda probe	453
8	Engine control unit	455
8.1	Assembly overview - engine control unit	455
8.2	Removing and installing engine/motor control unit J623	456
26	- Exhaust system	460
1	Exhaust pipes/silencers	460
1.1	Assembly overview - silencers	460
1.2	Removing and installing silencers	462
1.3	Stress-free alignment of exhaust system	463
1.4	Checking exhaust system for leaks	465
2	Emission control system	466
2.1	Assembly overview - emission control system	466
2.2	Removing and installing catalytic converter	469
2.3	Removing and installing exhaust flap control unit J883	471
28	- Ignition system	473
1	Ignition system	473
1.1	Assembly overview - ignition system	473
1.2	Test data - spark plugs	475
1.3	Removing and installing ignition coils with output stages	475
1.4	Removing and installing knock sensor 1 G61	478
1.5	Removing and installing Hall sender G40	478
1.6	Removing and installing engine speed sender G28	481