

Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	21
1.3 Securing engine to engine and gearbox support	29
1.4 Installing engine	29
2 Assembly mountings	33
2.1 Exploded view - assembly mountings	33
2.2 Supporting engine in installation position	34
2.3 Removing and installing engine mountings	37
2.4 Removing and installing gearbox mounting	37
2.5 Removing and installing pendulum support	39
2.6 Adjusting assembly mountings	40
2.7 Checking adjustment of assembly mountings (engine/gearbox mountings)	41
3 Engine cover panel	42
13 - Crankshaft group	43
1 Cylinder block (pulley end)	43
1.1 Exploded view - cylinder block (pulley end)	43
1.2 Removing and installing poly V-belt	43
1.3 Removing and installing tensioner for poly V-belt	43
1.4 Removing and installing vibration damper	44
1.5 Removing and installing bracket for ancillaries	44
1.6 Removing and installing engine support	44
2 Cylinder block (gearbox end)	48
3 Crankshaft	49
4 Balance shaft	50
5 Pistons and conrods	51
15 - Cylinder head, valve gear	52
1 Timing chain cover	52
2 Chain drive	53
2.1 Exploded view - camshaft timing chains	53
2.2 Exploded view - drive chain for balance shaft	53
2.3 Removing and installing bearing saddle	53
2.4 Removing camshaft timing chain from camshafts	53
2.5 Removing and installing camshaft timing chain	54
2.6 Removing and installing drive chain for balance shaft	54
2.7 Checking valve timing	54
3 Cylinder head	55
3.1 Exploded view - cylinder head	55
3.2 Removing and installing cylinder head	55
3.3 Checking compression	57
4 Valve gear	58
4.1 Exploded view - valve gear	58
4.2 Removing and installing camshaft	58



4.3	Removing and installing camshaft control valve 1 N205	58
4.4	Removing and installing valve stem oil seals	58
5	Inlet and exhaust valves	59
17 - Lubrication		60
1	Sump/oil pump	60
1.1	Exploded view - sump/oil pump	60
1.2	Engine oil	60
1.3	Removing and installing sump (bottom section)	60
1.4	Removing and installing oil pump	60
1.5	Removing and installing sump (top section)	60
1.6	Removing and installing oil level and oil temperature sender G266	61
2	Engine oil cooler	62
3	Crankcase breather	63
4	Oil filter/oil pressure switches	64
19 - Cooling		65
1	Cooling system/coolant	65
1.1	Connection diagram - coolant hoses	65
1.2	Checking cooling system for leaks	67
1.3	Draining and filling cooling system	67
2	Coolant pump/thermostat assembly	73
2.1	Exploded view - coolant pump/thermostat	73
2.2	Exploded view - electric coolant pump	73
2.3	Removing and installing electric coolant pump	75
2.4	Removing and installing coolant pump	78
2.5	Removing and installing toothed belt for coolant pump	79
2.6	Removing and installing thermostat	79
2.7	Checking thermostat	79
2.8	Removing and installing coolant temperature sender G62	79
2.9	Removing and installing radiator outlet coolant temperature sender G83	79
2.10	Removing and installing coolant valves	80
3	Coolant pipes	82
3.1	Exploded view - coolant pipes	82
3.2	Removing and installing coolant pipes	83
4	Radiator/radiator fan	87
4.1	Exploded view - radiator/radiator fan	87
4.2	Removing and installing radiator	89
4.3	Removing and installing radiator cowl	91
4.4	Removing and installing radiator fan V7	93
21 - Turbocharging/supercharging		95
1	Turbocharger	95
1.1	Exploded view - turbocharger	95
1.2	Removing and installing turbocharger	95
1.3	Checking vacuum unit for turbocharger	97
2	Charge air system	98
2.1	Exploded view - charge air system	98
2.2	Exploded view - hose connections for charge air system	99
2.3	Removing and installing air pipe	99
2.4	Removing and installing charge air cooler	100
2.5	Removing and installing charge pressure sender G31	101
2.6	Checking charge air system for leaks	102
24 - Mixture preparation - injection		104

1	Injection system	104
1.1	Overview of fitting locations - injection system	104
2	Vacuum system	109
3	Air cleaner	110
3.1	Exploded view - air cleaner housing	110
3.2	Removing and installing air cleaner housing	110
4	Intake manifold	111
5	Injectors	112
6	Senders and sensors	113
7	High-pressure pump	114
8	Lambda probe	115
8.1	Exploded view - Lambda probe	115
8.2	Removing and installing Lambda probe	115
9	Engine control unit	119
9.1	Removing and installing engine control unit J623	119
9.2	Wiring and component check	120
26	- Exhaust system	121
1	Exhaust pipes/silencers	121
1.1	Exploded view - silencers	121
1.2	Removing and installing front exhaust pipe	123
1.3	Separating exhaust pipes/silencers	126
1.4	Stress-free alignment of exhaust system	127
1.5	Checking exhaust system for leaks	128
2	Exhaust manifold	129
28	- Ignition system	130
1	Ignition system	130