



Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	19
1.3 Securing engine to engine and gearbox support	24
1.4 Installing engine	24
2 Assembly mountings	29
2.1 Exploded view - assembly mountings	29
2.2 Supporting engine in installation position	30
2.3 Removing and installing engine mountings	32
2.4 Removing and installing gearbox mounting	32
2.5 Removing and installing pendulum support	34
2.6 Adjusting assembly mountings	35
2.7 Checking adjustment of assembly mountings (engine/gearbox mountings)	36
3 Engine cover panel	37
13 - Crankshaft group	38
1 Cylinder block (pulley end)	38
1.1 Exploded view - cylinder block (pulley end)	38
1.2 Removing and installing poly V-belt	38
1.3 Removing and installing poly V-belt tensioner	38
1.4 Removing and installing vibration damper	38
1.5 Removing and installing bracket for ancillaries	39
1.6 Removing and installing engine support	39
2 Cylinder block (gearbox end)	41
3 Crankshaft	42
4 Balance shaft	43
5 Pistons and conrods	44
15 - Cylinder head, valve gear	45
1 Timing chain cover	45
1.1 Exploded view - timing chain cover	45
1.2 Removing and installing timing chain cover	45
1.3 Renewing oil seal for vibration damper	46
2 Chain drive	47
2.1 Exploded view - camshaft timing chains	47
2.2 Exploded view - drive chain for balance shaft	47
2.3 Removing and installing bearing saddle	47
2.4 Removing and installing camshaft timing chain	47
2.5 Removing and installing drive chain for balance shaft	47
2.6 Checking timing chain	47
2.7 Checking valve timing	48
3 Cylinder head	49
3.1 Exploded view - cylinder head	49
3.2 Removing and installing cylinder head	49
3.3 Checking compression	53



4	Valve gear	54
4.1	Exploded view - valve gear	54
4.2	Removing and installing camshaft	54
4.3	Installing ball for slider	56
4.4	Removing and installing actuators for camshaft adjustment	56
4.5	Removing and installing camshaft control valve 1 N205	56
4.6	Removing and installing valve stem oil seals	56
5	Inlet and exhaust valves	57
17	- Lubrication	58
1	Sump/oil pump	58
1.1	Exploded view - sump/oil pump	58
1.2	Engine oil	58
1.3	Removing and installing sump (bottom section)	58
1.4	Removing and installing oil pump	58
1.5	Removing and installing sump (top section)	58
1.6	Removing and installing oil level and oil temperature sender G266	59
2	Engine oil cooler	60
3	Crankcase breather	61
4	Oil filter/oil pressure switches	62
4.1	Exploded view - oil filter	62
4.2	Exploded view - oil pressure switches/oil pressure control	62
4.3	Removing and installing oil pressure switch F22	62
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	62
4.5	Removing and installing stage 3 oil pressure switch F447	62
4.6	Removing and installing valve for oil pressure control N428	63
4.7	Removing and installing piston cooling jet control valve N522	63
4.8	Checking oil pressure	63
19	- Cooling	64
1	Cooling system/coolant	64
1.1	Connection diagram - coolant hoses	64
1.2	Checking cooling system for leaks	66
1.3	Draining and filling cooling system	66
2	Coolant pump/thermostat assembly	72
2.1	Exploded view - coolant pump/thermostat	72
2.2	Exploded view - electric coolant pump	72
2.3	Exploded view - coolant valves	73
2.4	Exploded view - coolant temperature senders	76
2.5	Removing and installing electric coolant pump	76
2.6	Removing and installing coolant pump	79
2.7	Removing and installing toothed belt for coolant pump	80
2.8	Removing and installing actuator for engine temperature regulation N493	81
2.9	Removing and installing coolant temperature sender G62	81
2.10	Removing and installing radiator outlet coolant temperature sender G83	81
2.11	Removing and installing coolant valves	82
3	Coolant pipes	85
3.1	Exploded view - coolant pipes	85
3.2	Removing and installing coolant pipes	85
4	Radiator/radiator fans	87
4.1	Exploded view - radiator/radiator fans	87
4.2	Removing and installing radiator	89
4.3	Removing and installing radiator cowl	91
4.4	Removing and installing radiator fan V7	93

21 - Turbocharging/supercharging	95
1 Turbocharger	95
1.1 Exploded view - turbocharger	95
1.2 Removing and installing turbocharger	99
1.3 Removing and installing charge pressure positioner V465	105
2 Charge air system	107
2.1 Exploded view - charge air system	107
2.2 Exploded view - hose connections for charge air system	108
2.3 Removing and installing charge air cooler	109
2.4 Removing and installing charge pressure sender G31	110
2.5 Checking charge air system for leaks	111
24 - Mixture preparation - injection	113
1 Injection system	113
1.1 Overview of fitting locations - injection system	113
2 Air cleaner	122
2.1 Exploded view - air cleaner housing	122
2.2 Removing and installing air cleaner housing	123
3 Intake manifold	124
3.1 Exploded view - intake manifold	124
3.2 Removing and installing intake manifold	124
3.3 Removing and installing throttle valve module J338	125
3.4 Cleaning throttle valve module	126
3.5 Checking intake manifold change-over function	126
4 Injectors	127
5 Senders and sensors	128
5.1 Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	128
5.2 Removing and installing fuel pressure sender G247	128
5.3 Checking fuel pressure sender G247	128
5.4 Removing and installing fuel pressure sender for low pressure G410	128
6 High-pressure pump	129
6.1 Exploded view - high-pressure pump	129
6.2 Removing and installing high-pressure pump	129
7 Lambda probe	130
7.1 Exploded view - Lambda probe	130
7.2 Removing and installing Lambda probe	130
8 Engine control unit	131
8.1 Removing and installing engine control unit J623	131
26 - Exhaust system	134
1 Exhaust pipes/silencers	134
1.1 Exploded view - silencers	134
1.2 Separating exhaust pipes/silencers	136
1.3 Removing and installing silencers	137
1.4 Stress-free alignment of exhaust system	137
1.5 Checking exhaust system for leaks	138
2 Emission control system	139
2.1 Exploded view - emission control system	139
2.2 Removing and installing catalytic converter	140
28 - Ignition system	142
1 Ignition system	142