



Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions for vehicles with start/stop system	2
1.4 Safety precautions when working on the fuel system	3
1.5 Safety precautions when working on the ignition system	4
1.6 Reducing pressure in high-pressure section of injection system	4
1.7 Checking vacuum system	5
2 Injection system	7
2.1 Overview of fitting locations	7
3 Air cleaner	16
3.1 Air cleaner - exploded view	16
3.2 Removing and installing engine cover panel	17
3.3 Removing and installing air filter element	17
3.4 Removing and installing air cleaner housing	18
4 Intake manifold	20
4.1 Exploded view - intake manifold	20
4.2 Exploded view - fuel rail	21
4.3 Removing and installing intake manifold with fuel rail	22
4.4 Removing and installing fuel rail	28
4.5 Removing and installing throttle valve module J338	28
4.6 Cleaning throttle valve module J338	29
4.7 Checking intake manifold change-over function	30
4.8 Checking dual non-return valve	32
5 High-pressure pump	34
5.1 High-pressure pump - exploded view	34
5.2 Removing and installing high-pressure pump	35
6 Injectors	38
6.1 Removing and installing injectors	38
6.2 Cleaning injectors	41
7 Senders and sensors	43
7.1 Removing and installing air mass meter G70	43
7.2 Removing and installing fuel pressure sender G247	43
7.3 Checking fuel pressure sender G247	45
8 Lambda probe	48
8.1 Lambda probes - overview	48
8.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter	49
8.3 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	50
9 Engine control unit	52
9.1 Wiring and component check with test box V.A.G 1598/42	52
9.2 Renewing engine control unit J623	54
28 - Ignition system	57
1 General notes and safety precautions	57
1.1 General notes on ignition system	57
1.2 Safety precautions when using testers and measuring instruments during a road test	57
2 Servicing ignition system	59
2.1 Test data	59
2.2 Ignition system - exploded view	60

2.3	Removing and installing ignition coils with output stages	60
2.4	Removing and installing knock sensor 1 G61	62
2.5	Removing and installing engine speed sender G28	62