

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
1.2 Engine versions	2
<b>2 Safety information</b>	<b>6</b>
2.1 Safety precautions when working on the fuel supply system	6
2.2 Safety precautions when working on vehicles with start/stop system	6
2.3 Safety precautions when using testers and measuring instruments during a road test	7
2.4 Safety precautions when working on the cooling system	7
2.5 Safety precautions when working on the exhaust system	7
2.6 Safety precautions when working on the ignition system	8
2.7 Safety precautions when working on the subframe	8
<b>3 Repair instructions</b>	<b>9</b>
3.1 Rules for cleanliness	9
3.2 Foreign material in engine	9
3.3 Contact corrosion	9
3.4 Routing and attachment of pipes, hoses and wiring	10
3.5 Installing radiators and condensers	10
3.6 Nuts, bolts	10
3.7 Identification plates	10
3.8 Use of impact wrenches	11
<b>10 - Removing and installing engine</b>	<b>12</b>
<b>1 Removing and installing engine</b>	<b>12</b>
1.1 Removing engine	12
1.2 Separating engine and gearbox	12
1.3 Securing engine to engine and gearbox support	12
1.4 Installing engine	14
<b>2 Assembly mountings</b>	<b>15</b>
<b>3 Engine cover panel</b>	<b>16</b>
3.1 Removing and installing engine cover panel	16
<b>13 - Crankshaft group</b>	<b>17</b>
<b>1 Cylinder block (pulley end)</b>	<b>17</b>
1.1 Assembly overview - cylinder block (pulley end)	17
1.2 Removing and installing poly V-belt	22
1.3 Removing and installing poly V-belt tensioner	24
1.4 Removing and installing vibration damper	26
1.5 Removing and installing bracket for ancillaries	34
<b>2 Cylinder block (gearbox end)</b>	<b>36</b>
2.1 Assembly overview - flywheel	36
2.2 Assembly overview - drive plate	38
2.3 Removing and installing flywheel	39
2.4 Removing and installing drive plate	40
2.5 Removing and installing sealing flange (gearbox end)	44
<b>3 Crankshaft</b>	<b>53</b>
3.1 Assembly overview - crankshaft	53
3.2 Crankshaft dimensions	56
3.3 Allocation of main bearing shells	56
3.4 Renewing needle bearing in crankshaft	58
3.5 Measuring axial clearance of crankshaft	60
3.6 Measuring radial clearance of crankshaft	61



3.7	Removing and installing sender wheel	62
<b>4</b>	<b>Balance shaft</b>	<b>64</b>
4.1	Assembly overview - balance shaft	64
4.2	Removing and installing balance shaft	65
4.3	Renewing oil seal for balance shaft (inlet side)	72
<b>5</b>	<b>Pistons and conrods</b>	<b>74</b>
5.1	Assembly overview - pistons and conrods	74
5.2	Removing and installing pistons	78
5.3	Removing and installing oil spray jets	80
5.4	Checking pistons and cylinder bores	82
5.5	Separating parts of new conrod	84
5.6	Checking radial clearance of conrod bearings	85
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>86</b>
<b>1</b>	<b>Timing chain cover</b>	<b>86</b>
1.1	Assembly overview - timing chain cover	86
1.2	Removing and installing timing chain cover	89
1.3	Renewing oil seal for vibration damper	95
<b>2</b>	<b>Chain drive</b>	<b>98</b>
2.1	Assembly overview - camshaft timing chains	98
2.2	Assembly overview - drive chain for balance shaft	100
2.3	Removing and installing bearing saddle	102
2.4	Removing camshaft timing chain from camshafts	109
2.5	Removing and installing camshaft timing chain	122
2.6	Removing and installing drive chain for balance shaft	137
2.7	Checking valve timing	140
<b>3</b>	<b>Cylinder head</b>	<b>144</b>
3.1	Assembly overview - cylinder head	144
3.2	Removing and installing cylinder head	148
3.3	Removing and installing non-return valve	156
3.4	Checking compression	157
<b>4</b>	<b>Valve gear</b>	<b>160</b>
4.1	Assembly overview - valve gear	160
4.2	Removing and installing camshaft	165
4.3	Installing ball for slider	183
4.4	Removing and installing cam adjustment actuators	184
4.5	Removing and installing camshaft control valve 1 N205	185
4.6	Removing and installing valve stem oil seals	186
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>198</b>
5.1	Checking valve guides	198
5.2	Checking valves	199
5.3	Valve dimensions	199
<b>17</b>	<b>Lubrication</b>	<b>200</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>200</b>
1.1	Assembly overview - sump/oil pump	200
1.2	Engine oil	203
1.3	Removing and installing lower part of sump	203
1.4	Removing and installing oil pump	206
1.5	Removing and installing upper part of sump	208
1.6	Removing and installing oil level and oil temperature sender G266	213
<b>2</b>	<b>Engine oil cooler</b>	<b>214</b>
2.1	Assembly overview - engine oil cooler	214
2.2	Removing and installing engine oil cooler	214

<b>3</b>	<b>Crankcase breather</b> .....	<b>216</b>
3.1	Assembly overview - crankcase breather system .....	216
3.2	Removing and installing oil separator .....	218
<b>4</b>	<b>Oil filter/oil pressure switches</b> .....	<b>222</b>
4.1	Assembly overview - oil filter .....	222
4.2	Assembly overview - oil pressure switches/oil pressure control .....	222
4.3	Removing and installing oil pressure switch F22 .....	224
4.4	Removing and installing oil pressure switch for reduced oil pressure F378 .....	225
4.5	Removing and installing valve for oil pressure control N428 .....	226
4.6	Checking oil pressure and oil pressure switch .....	227
<b>19</b>	<b>- Cooling</b> .....	<b>230</b>
<b>1</b>	<b>Cooling system/coolant</b> .....	<b>230</b>
1.1	Connection diagram - coolant hoses .....	230
1.2	Checking cooling system for leaks .....	230
1.3	Draining and filling cooling system .....	233
<b>2</b>	<b>Coolant pump/thermostat assembly</b> .....	<b>236</b>
2.1	Assembly overview - coolant pump/thermostat .....	236
2.2	Assembly overview - electric coolant pump .....	239
2.3	Removing and installing electric coolant pump .....	239
2.4	Removing and installing coolant pump .....	239
2.5	Detaching and attaching coolant pump at thermostat housing .....	240
2.6	Removing and installing toothed belt for coolant pump .....	243
2.7	Removing and installing thermostat .....	246
2.8	Checking thermostat .....	249
2.9	Removing and installing coolant temperature sender G62 .....	250
2.10	Removing and installing radiator outlet coolant temperature sender G83 .....	251
<b>3</b>	<b>Coolant pipes</b> .....	<b>252</b>
<b>4</b>	<b>Radiator/radiator fans</b> .....	<b>253</b>
<b>21</b>	<b>- Turbocharging/supercharging</b> .....	<b>254</b>
<b>1</b>	<b>Turbocharger</b> .....	<b>254</b>
1.1	Assembly overview - turbocharger .....	254
1.2	Removing and installing turbocharger .....	261
1.3	Checking vacuum unit for turbocharger .....	264
1.4	Renewing vacuum unit for turbocharger .....	266
1.5	Adjusting vacuum unit for turbocharger .....	266
<b>2</b>	<b>Charge air system</b> .....	<b>272</b>
2.1	Assembly overview - charge air system .....	272
2.2	Assembly overview - hose connections for charge air system .....	272
2.3	Removing and installing air pipe .....	274
2.4	Removing and installing charge air cooler .....	275
2.5	Removing and installing charge pressure sender G31 .....	275
2.6	Checking charge air system for leaks .....	275
<b>24</b>	<b>- Mixture preparation - injection</b> .....	<b>277</b>
<b>1</b>	<b>Injection system</b> .....	<b>277</b>
1.1	Overview of fitting locations - injection system .....	277
1.2	Checking fuel system for leaks .....	277
<b>2</b>	<b>Vacuum system</b> .....	<b>278</b>
2.1	Checking vacuum system .....	278
2.2	Checking dual non-return valve .....	278
<b>3</b>	<b>Air filter</b> .....	<b>281</b>
3.1	Assembly overview - air filter housing .....	281



3.2	Removing and installing air filter housing .....	283
<b>4</b>	<b>Intake manifold .....</b>	<b>284</b>
4.1	Assembly overview - intake manifold .....	284
4.2	Removing and installing intake manifold with fuel rail .....	288
4.3	Removing and installing intake manifold flap potentiometer G336 .....	294
4.4	Removing and installing throttle valve module J338 .....	294
4.5	Cleaning throttle valve module .....	295
4.6	Checking intake manifold change-over function .....	296
<b>5</b>	<b>Injectors .....</b>	<b>299</b>
5.1	Assembly overview - fuel rail with injectors .....	299
5.2	Removing and installing fuel rail .....	301
5.3	Removing and installing injectors .....	302
5.4	Cleaning injectors .....	307
<b>6</b>	<b>Senders and sensors .....</b>	<b>309</b>
6.1	Removing and installing intake air temperature sender G42 .....	309
6.2	Removing and installing air mass meter G70 .....	310
6.3	Removing and installing intake manifold pressure sender G71 .....	311
6.4	Removing and installing fuel pressure sender G247 .....	311
6.5	Checking fuel pressure sender G247 .....	313
<b>7</b>	<b>High-pressure pump .....</b>	<b>316</b>
7.1	Assembly overview - high-pressure pump .....	316
7.2	Removing and installing high-pressure pump .....	318
<b>8</b>	<b>Lambda probe .....</b>	<b>322</b>
<b>9</b>	<b>Engine control unit .....</b>	<b>323</b>
9.1	Removing and installing engine control unit J623 .....	323
9.2	Wiring and component check .....	323
<b>26 - Exhaust system .....</b>		<b>325</b>
<b>1</b>	<b>Exhaust pipes/silencers .....</b>	<b>325</b>
1.1	Assembly overview - silencers .....	325
1.2	Separating exhaust pipes/silencers .....	325
1.3	Removing and installing front silencers .....	325
1.4	Removing and installing silencers .....	325
1.5	Stress-free alignment of exhaust system .....	325
1.6	Checking exhaust system for leaks .....	325
<b>2</b>	<b>Exhaust manifold .....</b>	<b>326</b>
<b>28 - Ignition system .....</b>		<b>327</b>
<b>1</b>	<b>Ignition system .....</b>	<b>327</b>
1.1	Assembly overview - ignition system .....	327
1.2	Removing and installing ignition coils with output stages .....	328
1.3	Removing and installing knock sensor 1 G61 .....	332
1.4	Removing and installing Hall senders .....	333
1.5	Removing and installing engine speed sender G28 .....	333