

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Safety precautions when working on vehicles with start/stop system	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Bolts/nuts	7
3.5 Identification plates	7
3.6 Use of impact wrenches	7
3.7 Foreign material in engine	8
3.8 Contact corrosion	8
3.9 Routing and attachment of pipes, hoses and wiring	8
3.10 Installing radiators and condensers	9
10 - Removing and installing engine	10
1 Removing and installing engine	10
1.1 Removing engine	10
1.2 Separating engine and gearbox	34
1.3 Securing engine to engine and gearbox support	40
1.4 Installing engine	42
2 Assembly mountings	47
2.1 Assembly overview - assembly mountings	47
2.2 Removing and installing engine mountings	49
2.3 Removing and installing engine support	53
2.4 Removing and installing gearbox mounting	55
2.5 Removing and installing pendulum support	60
2.6 Adjusting assembly mountings	61
2.7 Checking adjustment of assembly mountings	64
3 Engine cover panel	65
3.1 Removing and installing engine cover panel	65
13 - Crankshaft group	66
1 Cylinder block (pulley end)	66
1.1 Assembly overview - cylinder block (pulley end)	66
1.2 Assembly overview - sealing flange (pulley end)	69
1.3 Removing and installing poly V-belt	70
1.4 Removing and installing poly V-belt tensioner	72
1.5 Removing and installing vibration damper	74
1.6 Removing and installing bracket for ancillaries	75
1.7 Renewing crankshaft oil seal (pulley end)	77
1.8 Removing and installing sealing flange (pulley end)	80
2 Cylinder block (gearbox end)	84
2.1 Assembly overview - cylinder block (gearbox end)	84
2.2 Removing and installing flywheel	85
2.3 Removing and installing sealing flange (gearbox end)	87

3	Crankshaft	98
3.1	Assembly overview - crankshaft	98
3.2	Crankshaft dimensions	99
3.3	Renewing needle bearing in crankshaft	100
3.4	Measuring axial clearance of crankshaft	102
3.5	Measuring radial clearance of crankshaft	103
3.6	Removing and installing spur gear	103
4	Pistons and conrods	108
4.1	Assembly overview - pistons and conrods	108
4.2	Removing and installing pistons	112
4.3	Measuring piston projection at TDC	113
4.4	Checking pistons and cylinder bores	115
4.5	Checking radial clearance of conrod bearings	117
15 - Cylinder head, valve gear		118
1	Toothed belt drive	118
1.1	Assembly overview - toothed belt	118
1.2	Removing and installing toothed belt	120
2	Cylinder head	134
2.1	Assembly overview - cylinder head	134
2.2	Assembly overview - cylinder head cover	138
2.3	Removing and installing cylinder head	140
2.4	Removing and installing cylinder head cover	155
2.5	Removing and installing seals for injectors	158
2.6	Checking compression	159
3	Valve gear	162
3.1	Assembly overview - valve gear	162
3.2	Measuring axial clearance of camshaft	164
3.3	Measuring radial clearance of camshaft	165
3.4	Removing and installing camshaft oil seal	166
3.5	Removing and installing camshaft	170
3.6	Removing and installing valve stem oil seals	178
4	Inlet and exhaust valves	188
4.1	Reworking valve seats	188
4.2	Checking valve guides	188
4.3	Checking valves	189
4.4	Valve dimensions	189
17 - Lubrication		191
1	Sump/oil pump	191
1.1	Assembly overview - sump/oil pump	191
1.2	Engine oil	195
1.3	Removing and installing sump	195
1.4	Removing and installing oil pump	201
1.5	Removing and installing oil level and oil temperature sender G266	202
2	Oil filter/oil pressure switches	204
2.1	Exploded view - oil filter housing/oil pressure switch	204
2.2	Removing and installing oil filter housing	205
2.3	Removing and installing oil pressure switch F1	210
2.4	Checking oil pressure and oil pressure switch	211
3	Balance shaft module	214
3.1	Removing and installing balance shaft module	214
19 - Cooling		222
1	Cooling system/coolant	222

1.1	Connection diagram - coolant hoses	222
1.2	Checking cooling system for leaks	223
1.3	Draining and filling cooling system	226
2	Coolant pump/thermostat assembly	235
2.1	Assembly overview - coolant pump/thermostat	235
2.2	Removing and installing coolant pump	236
2.3	Removing and installing 4/2-way valve with thermostat	236
2.4	Removing and installing electric coolant pump	242
2.5	Removing and installing coolant temperature sender G62	245
2.6	Removing and installing radiator outlet coolant temperature sender G83	247
3	Coolant pipes	249
3.1	Assembly overview - coolant pipes	249
3.2	Removing and installing upper coolant pipes	251
4	Radiator/radiator fan	264
4.1	Exploded view - radiator/radiator fan	264
4.2	Removing and installing radiator	267
4.3	Removing and installing radiator cowl	272
4.4	Removing and installing radiator fan	274
21 - Turbocharging/supercharging	277	
1	Turbocharger	277
1.1	Exploded view - turbocharger	277
1.2	Removing and installing turbocharger	279
1.3	Renewing vacuum unit for turbocharger	286
2	Charge air system	294
2.1	Assembly overview - charge air system	294
2.2	Removing and installing charge air cooler	296
2.3	Removing and installing charge pressure sender G31 / intake air temperature sender G42	299
2.4	Checking charge air system for leaks	299
23 - Mixture preparation - injection	303	
1	Injection system	303
1.1	Overview of fitting locations - injection system	303
1.2	Overview - fuel system	312
1.3	Filling and bleeding fuel system	313
1.4	Checking fuel system for leaks	314
2	Vacuum system	316
2.1	Connection diagram - vacuum system	316
2.2	Checking vacuum system	316
3	Air filter	318
3.1	Assembly overview - air filter housing	318
3.2	Removing and installing air filter housing	320
4	Intake manifold	322
4.1	Exploded view - intake manifold	322
4.2	Removing and installing intake manifold	324
4.3	Removing and installing throttle valve module J338	329
4.4	Cleaning throttle valve module J338	330
5	High-pressure pump	333
5.1	Assembly overview - high-pressure pump	333
5.2	Removing and installing high-pressure pump	335
6	Injectors/high-pressure reservoir (rail)	340
6.1	Assembly overview - injectors	340
6.2	Checking injectors	343
6.3	Performing adaptation of correction values for injectors	343

6.4	Checking for injectors sticking open	344
6.5	Checking return flow rate of injectors with engine running	346
6.6	Checking return flow rate of injectors at starter cranking speed	350
6.7	Removing and installing injectors	352
6.8	Removing and installing high-pressure pipes	355
6.9	Removing and installing high-pressure reservoir (rail)	357
7	Senders and sensors	361
7.1	Checking fuel pressure regulating valve N276	361
7.2	Removing and installing fuel pressure regulating valve N276	362
7.3	Removing and installing fuel pressure sender G247	364
7.4	Removing and installing air mass meter G70	367
8	Lambda probe	369
8.1	Assembly overview - Lambda probe	369
8.2	Removing and installing Lambda probe	371
9	Engine control unit	373
9.1	Wiring and component check with test box 1598/42	373
9.2	Removing and installing engine/motor control unit J623	375
26 - Exhaust system	381	
1	Exhaust pipes/silencers	381
1.1	Exploded view - silencer	381
1.2	Stress-free alignment of exhaust system	383
1.3	Checking exhaust system for leaks	385
2	Emission control system	386
2.1	Assembly overview - emission control system	386
2.2	Removing and installing particulate filter	387
2.3	Removing and installing pressure differential sender G505	394
3	Exhaust gas temperature regulation	396
3.1	Assembly overview - exhaust gas temperature regulation	396
3.2	Removing and installing exhaust gas temperature sender	398
4	Exhaust gas recirculation	404
4.1	Assembly overview - exhaust gas recirculation system	404
4.2	Removing and installing exhaust gas recirculation cooler	406
4.3	Checking exhaust gas recirculation cooler change-over	408
4.4	Cleaning exhaust gas recirculation system	410
28 - Glow plug system	420	
1	Glow plug system	420
1.1	Assembly overview - glow plug system	420
1.2	Removing and installing glow plug	421
1.3	Removing and installing automatic glow period control unit J179	425
1.4	Removing and installing Hall sender G40	425
1.5	Removing and installing engine speed sender G28	427