

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions for vehicles with start/stop system	1
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on the injection and glow plug system	3
1.5 Checking vacuum system	4
2 Overview of fitting locations - injection system	5
3 Fuel system - overview	12
4 Filling and bleeding fuel system	14
5 Air cleaner	15
5.1 Exploded view - air cleaner	15
5.2 Removing and installing engine cover panel	16
5.3 Removing and installing air filter element	17
5.4 Removing and installing air cleaner housing	18
5.5 Removing and installing air mass meter G70	20
6 Intake manifold	21
6.1 Exploded view - intake manifold	21
6.2 Removing and installing intake manifold	22
7 High-pressure pump	26
7.1 Exploded view - high-pressure pump	26
7.2 Removing and installing high-pressure pump	27
7.3 Performing first fuel filling after installing high-pressure pump	29
7.4 Checking fuel system for leaks	30
8 Injectors/high-pressure reservoir (rail)	32
8.1 Exploded view - injectors	32
8.2 Checking injectors	34
8.3 Performing adaption of correction values for injectors	34
8.4 Checking return flow rate of injectors with engine running	35
8.5 Checking return flow rate of injectors at starter cranking speed	38
8.6 Checking for injectors sticking open	40
8.7 Removing and installing injectors	41
9 Senders and sensors	46
9.1 Removing and installing throttle valve module J338	46
9.2 Installing high-pressure pipes	47
9.3 Checking fuel pressure regulating valve N276	49
9.4 Removing and installing fuel pressure regulating valve N276	51
9.5 Removing and installing fuel pressure sender G247	52
9.6 Removing and installing fuel rail	55
10 Lambda probe	58
10.1 Lambda probe and exhaust gas temperature senders - exploded view	58
10.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	58
10.3 Removing and installing pressure differential sender G505	60
11 Engine control unit	61
11.1 Wiring and component check with test box V.A.G 1598/42	61
11.2 Removing and installing engine control unit J623	62
28 - Glow plug system	66
1	66
1.1 Removing and installing glow plugs	66
1.2 Removing and installing automatic glow period control unit J179	68



1.3	Removing and installing Hall sender G40	69
1.4	Removing and installing engine speed sender G28	70