

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 Test conditions	4
2.3 Bleeding fuel system	4
2.4 Contact corrosion	5
2.5 Routing and attachment of pipes, hoses and wiring	5
20 - Fuel supply system	6
1 Fuel tank	6
1.1 Exploded view - fuel tank	6
1.2 Draining fuel tank	10
1.3 Removing and installing fuel tank	15
2 Fuel delivery unit/fuel gauge senders	23
2.1 Exploded view - fuel delivery unit/fuel gauge senders	23
2.2 Removing and installing fuel delivery unit/fuel gauge senders	27
2.3 Checking fuel gauge sender G	35
2.4 Removing and installing fuel gauge sender G	38
2.5 Checking fuel gauge sender 2 G169	39
2.6 Removing and installing fuel gauge sender 2 G169	43
2.7 Exploded view - fuel quality sender G446	46
2.8 Removing and installing fuel quality sender G446	46
3 Plug-in connectors	48
3.1 Disconnecting plug-in connectors	48
4 Fuel filter	52
4.1 Exploded view - fuel filter	52
4.2 Removing and installing fuel filter	54
5 Activated charcoal filter system	62
5.1 Connection diagram - activated charcoal filter system	62
5.2 Exploded view - activated charcoal filter system	64
5.3 Removing and installing activated charcoal filter	66
6 Fuel pump	69
6.1 Checking fuel system pressurisation pump G6	69
6.2 Removing and installing suction-jet pump	77
6.3 Removing and installing fuel pump control unit J538	78
7 Accelerator mechanism	80
7.1 Exploded view - accelerator pedal module	80
7.2 Removing and installing accelerator pedal module with accelerator position sender G79 / G185	80