

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the SCR system	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 Test conditions	4
2.3 Contact corrosion	5
20 - Fuel supply system	6
1 Fuel tank	6
1.1 Exploded view - fuel tank	6
1.2 Draining fuel tank	8
1.3 Removing and installing fuel tank	12
1.4 Removing and installing misfuelling prevention device	20
1.5 Deactivating misfuelling prevention device	24
2 Fuel delivery unit/fuel gauge senders	25
2.1 Exploded view - fuel delivery unit/fuel gauge senders	25
2.2 Removing and installing fuel delivery unit/fuel gauge senders	27
2.3 Checking fuel gauge sender G	33
2.4 Removing and installing fuel gauge sender G	36
2.5 Checking fuel gauge sender 2 G169	37
2.6 Removing and installing fuel gauge sender 2 G169	40
3 Plug-in connectors	44
3.1 Disconnecting plug-in connectors	44
4 Fuel filter	50
4.1 Exploded view - fuel filter	50
4.2 Removing and installing fuel filter	52
5 Fuel pump	55
5.1 Checking fuel system pressurisation pump G6	55
5.2 Removing and installing suction-jet pump	62
5.3 Removing and installing fuel pump control unit J538	70
6 Accelerator mechanism	73
6.1 Exploded view - accelerator pedal module	73
6.2 Removing and installing accelerator pedal module with accelerator position sender G79/G185	73