

001 - Basic equipment	1-32
1. Basic equipment	1
2. Immobiliser reader coil, Control unit in dash panel insert	2
3. Brake fluid level warning contact, Coolant shortage indicator switch, Control unit in dash panel insert	3
4. Ambient temperature sensor, Windscreen washer fluid level sender, Control unit in dash panel insert	4
5. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	5
6. Turn signal switch, Steering angle sender, Horn plate, Steering column electronics control unit	6
7. Ignition/starter switch, Steering column electronics control unit	7
8. Onboard supply control unit, Steering column electronics control unit	8
9. Onboard supply control unit	9
10. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit	10
11. Brake light switch, Brake pedal switch, Radio controlled clock receiver, Onboard supply control unit, Tank filler flap locking motor	11
12. Switch and instrument illumination regulator, Front and rear fog light switch, Onboard supply control unit	12
13. Headlight range control regulator, Onboard supply control unit, Bulb for left daytime running light and side light, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	13
14. Bonnet contact switch, Front left brake pad wear sender, Rear right brake pad wear sender, Bass horn, Onboard supply control unit, Left fog light bulb	14
15. Rain and light sensor, Headlight washer system relay, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump	15
16. Onboard supply control unit, Front roof module, Rear interior light	16
17. Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	17
18. Onboard supply control unit, Bulb for right daytime running light and side light, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	18
19. Bonnet contact switch 2, Treble horn, Horn relay, Onboard supply control unit, Right fog light bulb	19
20. Reversing light switch, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Bulb 2 for rear left turn signal, Bulb 2 for rear right turn signal, Left washer jet heater element, Right washer jet heater element	20
21. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	21
22. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Left brake and tail light bulb 2, Right brake and tail light bulb 2	22
23. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, High-level brake light bulb, Bulb 2 for rear left turn signal, Bulb 2 for rear right turn signal, Left brake and tail light bulb 3, Right brake and tail light bulb 3	23
24. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, Bulb 2 for rear left turn signal, Bulb 2 for rear right turn signal, Left brake and tail light bulb 3, Right brake and tail light bulb 3	24
25. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Right luggage compartment light	25
26. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	26
27. Heated rear window relay, Onboard supply control unit, Data bus diagnostic interface, Heated rear window	27
28. Onboard supply control unit, Data bus diagnostic interface	28
29. Driver side central locking lock unit, Rear left central locking lock unit, Driver door control unit, Rear left door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	29
30. Front passenger side central locking lock unit, Rear right central locking lock unit, Front passenger door control unit, Rear right door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	30
31. Onboard supply control unit, Fuse holder C	31
32. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	32
002 - Convenience system, left-hand drive	33-58
1. Convenience system, left-hand drive	33
2. Fuse holder C	34

3. Fuse holder C	35
4. Storage compartment illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb, Rear vent illumination bulb	36
5. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Interior monitoring sensor, Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	37
6. Front roof module, Rear interior light	38
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	39
8. Glass breakage sensor for rear window, Alarm horn, Luggage compartment light on left, Right luggage compartment light	40
9. Control unit in dash panel insert, Data bus diagnostic interface	41
10. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Button for left childproof lock, Button for right childproof lock, Driver door control unit	42
11. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Interior monitoring switch, Driver side interior locking button for central locking system, Driver door control unit	43
12. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Driver side door warning lamp, Front left entry light	44
13. Driver door control unit, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Loudspeaker background lighting bulb 1, Loudspeaker background lighting bulb 2, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side window regulator motor	45
14. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	46
15. Driver side central locking lock unit, Driver door control unit	47
16. Rear left door control unit, Rear left door opener illumination bulb, Rear left door ambient lighting bulb, Rear left door storage compartment illumination bulb, Rear left entry light, Rear left door warning lamp	48
17. Rear left window regulator switch, in door, Rear left door control unit, Rear left door ambient lighting bulb, Rear left door storage compartment illumination bulb, Rear left window regulator motor	49
18. Rear left central locking lock unit, Rear left childproof lock contact switch, Rear left door control unit, Rear left childproof lock motor	50
19. Front passenger side central locking lock unit, Front passenger door control unit	51
20. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	52
21. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	53
22. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Front right entry light, Front passenger side door warning lamp	54
23. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Loudspeaker background lighting bulb 3, Loudspeaker background lighting bulb 4, Front passenger side window regulator motor	55
24. Rear right door control unit, Rear right door opener illumination bulb, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right entry light, Rear right door warning lamp	56
25. Rear right window regulator switch, in door, Rear right door control unit, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right window regulator motor	57
26. Rear right central locking lock unit, Rear right childproof lock contact switch, Rear right door control unit, Rear right childproof lock motor	58
003 - 2.0l diesel engine , CFFA,CFFB,CFG A,CFGB,CFG C,CFG D,CLLA,CLLB,CLJA	59-80
1. 2.0l diesel engine , CFFA,CFFB,CFG A,CFGB,CFG C,CFG D,CLLA,CLLB,CLJA	59
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	60
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	61
4. Clutch position sender, Onboard supply control unit, Engine/motor control unit	62
5. Brake light switch, Brake pedal switch, Onboard supply control unit, Engine/motor control unit	63
6. Onboard supply control unit. Engine/motor control unit	64

7. Terminal 15 voltage supply relay, Engine/motor control unit	65
8. Automatic glow period control unit, Engine/motor control unit	66
9. Terminal 30 voltage supply relay, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	67
10. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Engine/motor control unit	68
11. Low heat output relay, High heat output relay, Engine/motor control unit, Auxiliary air heater element	69
12. Air mass meter, Engine/motor control unit, Heater element for crankcase breather, Pump for exhaust gas recirculation cooler	70
13. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	71
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	72
15. Engine/motor control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve	73
16. Throttle valve module, Throttle valve potentiometer, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	74
17. Accelerator pedal module, Engine speed sender, Accelerator position sender, Fuel temperature sender, Exhaust gas recirculation potentiometer, Pressure differential sender, Engine/motor control unit, Exhaust gas recirculation control motor	75
18. Charge pressure sender, Charge pressure sender, Intake air temperature sender 2, Pressure differential sender, Gearbox neutral position sender, Engine/motor control unit	76
19. Lambda probe 1 before catalytic converter, Lambda probe, Hall sender, Gearbox neutral position sender, Engine/motor control unit, Lambda probe heater	77
20. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	78
21. Control unit in dash panel insert, Data bus diagnostic interface	79
22. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	80
004 - 2.0l petrol engine , CCZC,CGMA,CPSA,CRHA	81-100
1. 2.0l petrol engine , CCZC,CGMA,CPSA,CRHA	81
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	82
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	83
4. Clutch position sender, Onboard supply control unit, Engine control unit	84
5. Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	85
6. Onboard supply control unit, Engine control unit	86
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Terminal 15 voltage supply relay, Engine control unit	87
8. Main relay, Additional coolant pump relay, Engine control unit	88
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	89
10. Engine control unit, Engine component current supply relay, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Valve for oil pressure control	90
11. Intake air temperature sender, Coolant temperature sender, Air mass meter, Radiator outlet coolant temperature sender, Engine control unit	91
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine control unit	92
13. Accelerator pedal module, Hall sender, Knock sensor 1, Accelerator position sender, Accelerator position sender 2, Fuel pressure sender, Engine control unit	93
14. Throttle valve module, Engine speed sender, Charge pressure sender, Intake manifold flap potentiometer, Throttle valve module, Engine control unit	94
15. Oil pressure switch for reduced oil pressure, Brake servo pressure sensor, Gearbox neutral position sender, Engine control unit	95
16. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	96
17. Engine control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	97
18. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	98
19. Control unit in dash panel insert, Data bus diagnostic interface	99
20. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	100
005 - Airbag systems	101-110
1. Airbag systems	101
2. Terminal 15 voltage supply relay, Onboard supply control unit, Front passenger side airbag deactivated warning lamp	102
3. Driver side belt switch. Front passenger side belt switch. Seat occupied sensor. front passenger	103

side, Battery isolation igniter	
4. Key operated switch to deactivate front passenger side airbag, Rear belt switch, driver side, Rear belt switch, front passenger side	104
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side	105
6. Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	106
7. Side airbag igniter on driver side, Side airbag igniter on front passenger side	107
8. Rear side airbag igniter on driver side, Rear side airbag igniter on front passenger side	108
9. Steering column electronics control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	109
10. Control unit in dash panel insert, Data bus diagnostic interface, Airbag warning lamp	110
006 - 7-speed dual clutch gearbox 0BH (S tronic) , (0EX)	111-116
1. 7-speed dual clutch gearbox 0BH (S tronic) , (0EX)	111
2. Selector lever, Terminal 15 voltage supply relay, Onboard supply control unit	112
3. Selector lever, Mechatronic unit for dual clutch gearbox	113
4. Selector lever, Selector lever locked in position P switch, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Selector lever position display	114
5. Selector lever, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	115
6. Selector lever, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface	116
007 - Trailer coupling , (1D4),(1D8),(GP1)	117-121
1. Trailer coupling , (1D4),(1D8),(GP1)	117
2. Terminal 15 voltage supply relay	118
3. Brake light switch, Trailer detector control unit	119
4. Contact switch on locking pin, Trailer detector control unit, Towing bracket locked warning lamp, Towing bracket released warning lamp, Trailer socket	120
5. Terminal 30 fuse, trailer towing attachment	121
008 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	122-130
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	122
2. ABS control unit, Fuse holder B	123
3. ABS control unit, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B	124
4. Button for TCS and electronic stabilisation program, Hill descent control button, ABS control unit, Onboard supply control unit, Fuse holder B	125
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Fuse holder B	126
6. ABS control unit, Control unit for electromechanical parking brake, ABS hydraulic unit, Fuse holder B	127
7. Brake pressure sender 1, ABS control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder B	128
8. Steering angle sender, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder B	129
9. Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, Warning lamp for electronic stabilisation program and TCS, Fuse holder B	130
009 - Sliding sunroof (open-sky system)	131-135
1. Sliding sunroof (open-sky system)	131
2. Fuse holder C	132
3. Sunroof button, Sliding sunroof adjustment control unit, Sliding sunroof motor	133
4. Sunroof roller blind control unit	134
5. Front roof module, Rear interior light	135
010 - Rear parking aid (PDC) , (7X1)	136-139
1. Rear parking aid (PDC) , (7X1)	136
2. Terminal 15 voltage supply relay, Parking aid control unit	137
3. Parking aid control unit, Data bus diagnostic interface	138
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	139
011 - Front and rear parking aid (PDC) , (7X4),(7X8)	140-144
1. Front and rear parking aid (PDC) , (7X4),(7X8)	140
2. Terminal 15 voltage supply relay, Parking aid control unit	141
3. Parking aid button, Parking aid control unit, Data bus diagnostic interface	142
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	143
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	144

012 - Parking aid (PDC) with park assist steering (Park Assist) , (7X5),(8A3)	145-150
1. Parking aid (PDC) with park assist steering (Park Assist) , (7X5),(8A3)	145
2. Terminal 15 voltage supply relay, Park assist steering control unit	146
3. Parking aid button, Park assist steering button, Data bus diagnostic interface, Park assist steering control unit	147
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Park assist steering control unit	148
5. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Park assist steering control unit	149
6. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Park assist steering control unit	150
013 - Automatic air conditioning system , (9AK),(9AP)	151-159
1. Automatic air conditioning system , (9AK),(9AP)	151
2. Terminal 15 voltage supply relay	152
3. High-pressure sender, Air quality sensor, Climatronic control unit	153
4. Potentiometer for left temperature flap control motor, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Left temperature flap control motor	154
5. Potentiometer for centre flap control motor, Potentiometer for right temperature flap control motor, Climatronic control unit, Centre flap control motor, Right temperature flap control motor	155
6. Potentiometer for air flow flap control motor, Potentiometer for defroster flap control motor, Potentiometer for air recirculation flap control motor, Climatronic control unit, Air flow flap control motor, Defroster flap control motor, Air recirculation flap control motor	156
7. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Climatronic control unit	157
8. Climatronic control unit, Air conditioner compressor regulating valve	158
9. Fresh air blower control unit, Climatronic control unit, Data bus diagnostic interface, Fresh air blower	159
014 - Air conditioning system with manual regulation , (9AC),(KH6)	160-166
1. Air conditioning system with manual regulation , (9AC),(KH6)	160
2. X-contact relief relay, Terminal 15 voltage supply relay	161
3. Air conditioning system control unit, Air conditioner compressor regulating valve	162
4. High-pressure sender, Air conditioning system control unit	163
5. Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit	164
6. Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	165
7. Heated rear window relay, Air conditioning system control unit, Data bus diagnostic interface, Heated rear window	166
015 - Automatic anti-dazzle interior mirror , (4L2),(4L6),(LOL)	167-170
1. Automatic anti-dazzle interior mirror , (4L2),(4L6),(LOL)	167
2. Terminal 15 voltage supply relay, Onboard supply control unit, Data bus diagnostic interface, Automatic anti-dazzle interior mirror	168
3. Voltage stabiliser, Relay for automatic anti-dazzle interior mirror, Automatic anti-dazzle interior mirror	169
4. Driver door control unit, Front passenger door control unit, Automatic anti-dazzle interior mirror	170
016 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8Q5),(8Q6),(GP1)	171-178
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8Q5),(8Q6),(GP1)	171
2. Terminal 15 voltage supply relay, Onboard supply control unit	172
3. Onboard supply control unit, Control unit for cornering light and headlight range control, Front left side marker bulb, Front right side marker bulb	173
4. Rear left vehicle level sender, Front left vehicle level sender, Onboard supply control unit, Control unit for cornering light and headlight range control	174
5. Onboard supply control unit, Output module for left headlight, Left gas discharge (xenon) bulb, Front left headlight, Left headlight range control motor, Left dip beam screen motor, Left dynamic cornering light control motor	175
6. Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb	176
7. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Right gas discharge (xenon) bulb, Front right headlight, Right headlight range control motor, Right dip beam screen motor, Right dynamic cornering light control motor	177
8. Onboard supply control unit, Front right headlight, Front right turn signal bulb	178

017 - Battery in engine compartment with start/stop system and energy recovery	179-186
1. Battery in engine compartment with start/stop system and energy recovery	179
2. Alternator, Fuse 1 on fuse holder A	180
3. Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A	181
4. Battery, Starter, Engine/motor control unit, Starter relay 1, Starter relay 2	182
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	183
6. Start/Stop operation button	184
7. Voltage stabiliser, Relay for automatic anti-dazzle interior mirror	185
8. Voltage stabiliser	186
018 - Gas discharge headlights with automatic headlight range control , (8Q3),(GP1)	187-193
1. Gas discharge headlights with automatic headlight range control , (8Q3),(GP1)	187
2. Terminal 15 voltage supply relay, Headlight range control unit, Onboard supply control unit	188
3. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit, Onboard supply control unit	189
4. Left gas discharge bulb control unit, Headlight range control unit, Onboard supply control unit, Front left headlight, Left headlight range control motor, Left dip beam screen motor	190
5. Headlight range control unit, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight	191
6. Right gas discharge bulb control unit, Headlight range control unit, Onboard supply control unit, Right gas discharge (xenon) bulb, Front right headlight, Right headlight range control motor, Right dip beam screen motor	192
7. Onboard supply control unit, Front right headlight, Front right turn signal bulb	193
019 - Adjustable lumbar support with no electric adjustable seat , (7P1),(7P7),(7P8)	194-196
1. Adjustable lumbar support with no electric adjustable seat , (7P1),(7P7),(7P8)	194
2. Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	195
3. Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	196
020 - Seat heating for models with manual air conditioning system , (4A3)	197-200
1. Seat heating for models with manual air conditioning system , (4A3)	197
2. Heated front seats control unit	198
3. Heated front seats control unit	199
4. Heated front seats control unit	200
021 - Seat heating for models with automatic air conditioning system , (4A3)	201-204
1. Seat heating for models with automatic air conditioning system , (4A3)	201
2. Climatronic control unit, Fuse holder C	202
3. Front left seat temperature sender, Climatronic control unit, Heated backrest for driver seat, Heated seat cushion for front left seat	203
4. Front right seat temperature sender, Climatronic control unit, Heated backrest for front passenger seat, Heated seat cushion for front right seat	204
022 - Adjustable driver and front passenger seats , (3L5)	205-209
1. Adjustable driver and front passenger seats , (3L5)	205
2. Driver seat adjustment operating unit	206
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Driver seat adjustment operating unit	207
4. Front passenger seat adjustment operating unit, Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1	208
5. Front passenger seat adjustment operating unit	209
023 - Interface for special functions , (7G9)	210-211
1. Interface for special functions , (7G9)	210
2. Data bus diagnostic interface, Interface control unit for vehicle location system	211
024 - Data bus network	212-222
1. Data bus network	212
2. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness	213-222
025 - Radiator fan	223-224
1. Radiator fan	223
2. Radiator fan control unit, Radiator fan, Radiator fan 2	224
026 - Entry and start authorisation , (4F2),(4I3),(L0L)	225-230
1. Entry and start authorisation , (4F2),(4I3),(L0L)	225
2. Control unit for electronic steering column lock	226
3. Entry and start authorisation button, Entry and start authorisation control unit, Onboard supply control unit, Control unit for electronic steering column lock	227
4. Driver exterior door handle contact sensor. Front passenger exterior door handle contact sensor.	228

Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	
5. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	229
6. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	230
027 - Electromechanical steering	231-235
1. Electromechanical steering	231
2. Terminal 15 voltage supply relay, Power steering control unit, Onboard supply control unit, Electromechanical power steering motor	232
3. Steering moment sender, Power steering control unit, Onboard supply control unit, Engine control unit	233
4. Steering angle sender, Onboard supply control unit, Steering column electronics control unit	234
5. Control unit in dash panel insert, Data bus diagnostic interface, Electromechanical power steering warning lamp	235
028 - Electromechanical parking brake	236-240
1. Electromechanical parking brake	236
2. Terminal 15 voltage supply relay	237
3. Control unit for electromechanical parking brake, Left parking brake motor, Right parking brake motor	238
4. Electromechanical parking brake button, Auto hold button, ABS control unit, Control unit for electromechanical parking brake	239
5. Control unit in dash panel insert, Data bus diagnostic interface, Brake system warning lamp, Electric parking brake and handbrake fault warning lamp	240
029 - Lane departure warning , (7Y4),(7Y5)	241-243
1. Lane departure warning , (7Y4),(7Y5)	241
2. Terminal 15 voltage supply relay	242
3. Data bus diagnostic interface, Lane departure warning control unit, Windscreen heater for front sensors	243
030 - Lane change assist , (7Y1),(7Y5)	244-248
1. Lane change assist , (7Y1),(7Y5)	244
2. Terminal 15 voltage supply relay	245
3. Data bus diagnostic interface, Lane change assist control unit	246
4. Button for lane change assist, Lane change assist control unit, Lane change assist control unit 2	247
5. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror	248
031 - Radio chorus , (8UA)	249-253
1. Radio chorus , (8UA)	249
2. Radio, Fuse holder C	250
3. Data bus diagnostic interface, Radio, Connection for external audio sources	251
4. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	252
5. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Aerial amplifier, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	253
032 - Radio concert (CAN bus) , (8AL)	254-267
1. Radio concert (CAN bus) , (8AL)	254
2. Fuse holder C	255
3. Radio	256
4. Radio	257
5. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	258
6. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	259
7. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Centre loudspeaker	260
8. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Aerial amplifier, Aerial amplifier 3, Aerial amplifier 4, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	261
9. Radio, Connection for external audio sources	262
10. Radio, Connection for external audio sources	263
11. Radio, Connection for external audio sources	264
12. Internet access control unit, Radio, Connection for external audio sources, Internet access aerial	265
13. Data bus diagnostic interface, Internet access control unit, Emergency call module control unit and communication unit, Radio	266
14. Radio, Aerial amplifier for mobile telephone, Telephone bracket, Microphone unit in front roof module, Roof aerial	267
033 - Radio concert (MOST bus) . (8DS).(16A).(8AL)	268-286

1. Radio concert (MOST bus) , (8DS),(I6A),(8AL)	268
2. CD changer, Fuse holder C	269
3. Control unit 1 for information electronics	270
4. Control unit 1 for information electronics, Connection for external audio sources	271
5. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	272
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	273
7. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Centre loudspeaker	274
8. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	275
9. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 3, Aerial amplifier 4	276
10. Control unit 1 for information electronics, Roof aerial	277
11. Control unit 1 for information electronics, Connection for external audio sources	278
12. Internet access control unit, Control unit 1 for information electronics, Connection for external audio sources, Internet access aerial	279
13. Data bus diagnostic interface, Internet access control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit	280
14. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket, Microphone unit in front roof module	281
15. Digital sound package control unit	282
16. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	283
17. Digital sound package control unit, Rear left loudspeaker, Rear right loudspeaker, Centre loudspeaker	284
18. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	285
19. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	286
034 - Cigarette lighter and 12 V sockets	287-289
1. Cigarette lighter and 12 V sockets	287
2. Terminal 15 voltage supply relay, Relay for power sockets	288
3. Electric socket, Cigarette lighter, 12 V socket, 12 V socket 2	289
035 - Automatic adaptive suspension, adjustable dampers , (2H1),(2H6)	290-295
1. Automatic adaptive suspension, adjustable dampers , (2H1),(2H6)	290
2. Terminal 15 voltage supply relay	291
3. Driving mode selection button, Electronically controlled damping control unit, Data bus diagnostic interface	292
4. Front left body acceleration sender, Front right body acceleration sender, Rear body acceleration sender, Electronically controlled damping control unit	293
5. Rear left vehicle level sender, Front left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit	294
6. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	295
036 - Infotainment MOST bus	296-307
1. Infotainment MOST bus	296
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	297
3. Data bus diagnostic interface, Control unit 1 for information electronics, CD changer	298
4. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, CD changer	299
5. Data bus diagnostic interface, Control unit 1 for information electronics, Radio	300
6. Data bus diagnostic interface, Control unit 1 for information electronics, Radio, TV tuner	301
7. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio	302
8. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, TV tuner	303
9. Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer	304
10. Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer, TV tuner	305
11. Digital sound package control unit. Data bus diagnostic interface. Control unit 1 for	306

information electronics, Radio, CD changer	
12. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer, TV tuner	307
037 - Ring break diagnosis	308-310
1. Ring break diagnosis	308
2. Digital sound package control unit, Data bus diagnostic interface, CD changer, Connection 1, in diagnosis wiring harness	309
3. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer, TV tuner, Connection 1, in diagnosis wiring harness	310
038 - MMI navigation plus , (8DY),(8DZ),(I6H),(8AJ),(8UV),(8YF),(8YQ),(LOL)	311-328
1. MMI navigation plus , (8DY),(8DZ),(I6H),(8AJ),(8UV),(8YF),(8YQ),(LOL)	311
2. CD changer, Fuse holder C	312
3. Fuse holder C	313
4. Control unit 1 for information electronics	314
5. Control unit 1 for information electronics	315
6. Control unit 1 for information electronics	316
7. Control unit 1 for information electronics, Roof aerial	317
8. Control unit 1 for information electronics, Connection for external audio sources	318
9. Internet access control unit, Control unit 1 for information electronics, Connection for external audio sources, Internet access aerial	319
10. Data bus diagnostic interface, Internet access control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Microphone unit in front roof module	320
11. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket	321
12. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	322
13. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Aerial amplifier 3, Aerial amplifier 4, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	323
14. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Aerial amplifier, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Centre loudspeaker	324
15. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	325
16. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	326
17. Digital sound package control unit, Rear left loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right mid-range loudspeaker, Centre loudspeaker	327
18. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Front right bass loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	328
039 - Reversing camera (Rear Assist) , (7X8),(8A3)	329-332
1. Reversing camera (Rear Assist) , (7X8),(8A3)	329
2. Fuse holder C	330
3. Data bus diagnostic interface, Reversing camera system control unit	331
4. Reversing camera system control unit, Reversing camera	332
040 - TV tuner (MOST bus) , (QU1),(QU3),(QV1),(QV2),(QU5),(QU6),(QU7),(QU9),(QV5)	333-338
1. TV tuner (MOST bus) , (QU1),(QU3),(QV1),(QV2),(QU5),(QU6),(QU7),(QU9),(QV5)	333
2. Fuse holder C	334
3. Reversing camera system control unit, Control unit 1 for information electronics, TV tuner	335
4. Aerial amplifier, TV tuner, Aerial amplifier 2, Aerial amplifier 4, TV card reader	336
5. Reversing camera system control unit, Control unit 1 for information electronics, TV tuner	337
6. Aerial amplifier, TV tuner, Aerial amplifier 2	338
041 - All-wheel drive	339-341
1. All-wheel drive	339
2. Terminal 15 voltage supply relay, All-wheel drive control unit, Onboard supply control unit, Coupling opening control valve	340
3. All-wheel drive control unit	341
042 - Battery in engine compartment for models with energy recovery	342-347
1. Battery in engine compartment for models with energy recovery	342
2. Alternator, Fuse 1 on fuse holder A	343
3. Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A	344
4. Battery, Starter, Engine/motor control unit, Starter relay 1, Starter relay 2	345
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	346
6. Fuse holder C	347

043 - Fuse assignment	348-370
1. Fuse assignment	348
2. Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A	349
3. Battery, Starter, Battery monitor control unit, Starter relay 2	350
4. Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B	351
5. Fuse 5 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B	352
6. Main relay, Terminal 30 voltage supply relay, Fuse 10 on fuse holder B, Fuse 12 on fuse holder B	353
7. Fuse 13 on fuse holder B, Fuse 14 on fuse holder B	354
8. Fuse 15 on fuse holder B, Fuse 16 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B	355
9. Fuse 19 on fuse holder B, Fuse 20 on fuse holder B, Fuse 21 on fuse holder B	356
10. Fuse 22 on fuse holder B, Fuse 23 on fuse holder B, Fuse 24 on fuse holder B	357
11. Fuse 24 on fuse holder B, Fuse 25 on fuse holder B, Fuse 26 on fuse holder B, Fuse 27 on fuse holder B	358
12. Terminal 15 voltage supply relay, Fuse 28 on fuse holder B, Fuse 29 on fuse holder B, Fuse 30 on fuse holder B	359
13. Fuse 3 on fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C	360
14. Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C	361
15. Fuse 14 on fuse holder C	362
16. Fuse 15 on fuse holder C	363
17. Fuse 16 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C	364
18. Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	365
19. Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 43 on fuse holder C, Fuse 44 on fuse holder C	366
20. Fuse 45 on fuse holder C, Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	367
21. Fuse 28 on fuse holder C, Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 52 on fuse holder C, Fuse 53 on fuse holder C	368
22. Fuse 31 on fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 37 on fuse holder C	369
23. Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C, Fuse 54 on fuse holder C, Fuse 55 on fuse holder C, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C	370
044 - Preparation for driving aids for disabled persons , (F6M)	371-373
1. Preparation for driving aids for disabled persons , (F6M)	371
2. Data bus diagnostic interface, Special vehicle control unit	372
3. Button for driving aids for disabled persons, Operating unit for driving aids for disabled persons, Special vehicle control unit	373
045 - Driving school , (F5F)	374-377
1. Driving school , (F5F)	374
2. Terminal 15 voltage supply relay, Onboard supply control unit	375
3. Voltage supply relay 1, Voltage supply relay 2, Electric socket	376
4. Footwell light switch, Warning buzzer switch, Buzzer and gong, Driving school vehicle footwell illumination	377
046 - Convenience system, left-hand drive	378-402
1. Convenience system, left-hand drive	378
2. Fuse holder C	379
3. Storage compartment illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb, Rear vent illumination bulb	380
4. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Interior monitoring sensor, Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	381
5. Front roof module, Rear interior light	382
6. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	383
7. Glass breakage sensor for rear window, Alarm horn, Luggage compartment light on left, Right luggage compartment light	384
8. Control unit in dash panel insert, Data bus diagnostic interface	385
9. Front left window regulator switch. Rear left window regulator switch. in driver door. Rear right	386

window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Button for left childproof lock, Button for right childproof lock, Driver door control unit	
10. Mirror adjustment switch, Mirror adjustment changeover switch, Rear lid release switch, Adjustment switch for mirror with fold-in feature, Interior monitoring switch, Driver side interior locking button for central locking system, Driver door control unit	387
11. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Driver side door warning lamp, Front left entry light	388
12. Driver door control unit, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Loudspeaker background lighting bulb 1, Loudspeaker background lighting bulb 2, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side window regulator motor	389
13. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	390
14. Driver side central locking lock unit, Driver door control unit	391
15. Rear left door control unit, Rear left door opener illumination bulb, Rear left door ambient lighting bulb, Rear left door storage compartment illumination bulb, Rear left entry light, Rear left door warning lamp	392
16. Rear left window regulator switch, in door, Rear left door control unit, Rear left door ambient lighting bulb, Rear left door storage compartment illumination bulb, Rear left window regulator motor	393
17. Rear left central locking lock unit, Rear left childproof lock contact switch, Rear left door control unit, Rear left childproof lock motor	394
18. Front passenger side central locking lock unit, Front passenger door control unit	395
19. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	396
20. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	397
21. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Front right entry light, Front passenger side door warning lamp	398
22. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Loudspeaker background lighting bulb 3, Loudspeaker background lighting bulb 4, Front passenger side window regulator motor	399
23. Rear right door control unit, Rear right door opener illumination bulb, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right entry light, Rear right door warning lamp	400
24. Rear right window regulator switch, in door, Rear right door control unit, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right window regulator motor	401
25. Rear right central locking lock unit, Rear right childproof lock contact switch, Rear right door control unit, Rear right childproof lock motor	402
047 - Battery in engine compartment with start/stop system and energy recovery , (7L6),(7L8)	403-410
1. Battery in engine compartment with start/stop system and energy recovery , (7L6),(7L8)	403
2. Alternator, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A	404
3. Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A, Fuse 8 on fuse holder A	405
4. Battery, Starter, Engine/motor control unit, Starter relay 1, Starter relay 2	406
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	407
6. Start/Stop operation button	408
7. Voltage stabiliser, Relay for automatic anti-dazzle interior mirror	409
8. Voltage stabiliser	410
048 - Battery in luggage compartment with energy recovery , (7L7)	411-418
1. Battery in luggage compartment with energy recovery , (7L7)	411
2. Alternator, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A	412
3. Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A, Fuse 8 on fuse holder A	413
4. Starter, Engine/motor control unit, Starter relay 1, Starter relay 2	414
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	415
6. Fuse holder C	416

7. Battery, Fuse holder D	417
8. Terminal B+ suppressor, Fuse holder D	418
049 - Radiator fan	419-420
1. Radiator fan	419
2. Radiator fan control unit, Fuse holder B, Radiator fan, Radiator fan 2	420
050 - Battery in engine compartment for models with energy recovery , (7L7)	421-426
1. Battery in engine compartment for models with energy recovery , (7L7)	421
2. Alternator, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A	422
3. Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A, Fuse 8 on fuse holder A	423
4. Battery, Starter, Engine/motor control unit, Starter relay 1, Starter relay 2	424
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	425
6. Fuse holder C	426
051 - Basic equipment, right-hand drive , (LOR)	427-458
1. Basic equipment, right-hand drive , (LOR)	427
2. Immobiliser reader coil, Control unit in dash panel insert	428
3. Brake fluid level warning contact, Coolant shortage indicator switch, Control unit in dash panel insert	429
4. Ambient temperature sensor, Windscreen washer fluid level sender, Control unit in dash panel insert	430
5. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	431
6. Turn signal switch, Steering angle sender, Horn plate, Steering column electronics control unit	432
7. Ignition/starter switch, Steering column electronics control unit	433
8. Onboard supply control unit, Steering column electronics control unit	434
9. Onboard supply control unit	435
10. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit	436
11. Brake light switch, Brake pedal switch, Radio controlled clock receiver, Onboard supply control unit, Tank filler flap locking motor	437
12. Light switch, Switch and instrument illumination regulator, Front and rear fog light switch, Onboard supply control unit	438
13. Headlight range control regulator, Onboard supply control unit, Bulb for left daytime running light and side light, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	439
14. Bonnet contact switch, Front left brake pad wear sender, Rear right brake pad wear sender, Bass horn, Onboard supply control unit, Left fog light bulb	440
15. Rain and light sensor, Headlight washer system relay, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump	441
16. Onboard supply control unit, Front roof module, Rear interior light	442
17. Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	443
18. Onboard supply control unit, Bulb for right daytime running light and side light, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	444
19. Bonnet contact switch 2, Treble horn, Horn relay, Onboard supply control unit, Right fog light bulb	445
20. Reversing light switch, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Bulb 2 for rear left turn signal, Bulb 2 for rear right turn signal, Left washer jet heater element, Right washer jet heater element	446
21. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	447
22. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Left brake and tail light bulb 2, Right brake and tail light bulb 2	448
23. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, High-level brake light bulb, Bulb 2 for rear left turn signal, Bulb 2 for rear right turn signal, Left brake and tail light bulb 3, Right brake and tail light bulb 3	449
24. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, Bulb 2 for rear left turn signal, Bulb 2 for rear right turn signal, Left brake and tail light bulb 3, Right brake and tail light bulb 3	450
25. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Right luggage compartment light	451
26. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Onboard supply control unit. Rear lid central locking motor	452

27. Heated rear window relay, Onboard supply control unit, Data bus diagnostic interface, Heated rear window	453
28. Onboard supply control unit, Data bus diagnostic interface	454
29. Front passenger side central locking lock unit, Rear left central locking lock unit, Front passenger door control unit, Rear left door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	455
30. Driver side central locking lock unit, Rear right central locking lock unit, Driver door control unit, Rear right door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	456
31. Onboard supply control unit, Fuse holder C	457
32. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	458
052 - Convenience system, right-hand drive	459-484
1. Convenience system, right-hand drive	459
2. Fuse holder C	460
3. Fuse holder C	461
4. Storage compartment illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb, Rear vent illumination bulb	462
5. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Interior monitoring sensor, Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	463
6. Front roof module, Rear interior light	464
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	465
8. Glass breakage sensor for rear window, Alarm horn, Luggage compartment light on left, Right luggage compartment light	466
9. Control unit in dash panel insert, Data bus diagnostic interface	467
10. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Button for left childproof lock, But on for right childproof lock, Driver door control unit	468
11. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Interior monitoring switch, Driver side interior locking button for central locking system, Driver door control unit	469
12. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Driver side door warning lamp, Front left entry light	470
13. Driver door control unit, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Loudspeaker background lighting bulb 1, Loudspeaker background lighting bulb 2, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side window regulator motor	471
14. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	472
15. Driver side central locking lock unit, Driver door control unit	473
16. Rear right door control unit, Rear right door opener illumination bulb, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right entry light, Rear right door warning lamp	474
17. Rear right window regulator switch, in door, Rear right door control unit, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right window regulator motor	475
18. Rear right central locking lock unit, Rear right childproof lock contact switch, Rear right door control unit, Rear right childproof lock motor	476
19. Front passenger side central locking lock unit, Front passenger door control unit	477
20. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	478
21. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	479
22. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Front right entry light, Front passenger side door warning lamp	480
23. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Loudspeaker background lighting bulb 3, Loudspeaker background lighting bulb 4, Front passenger side window regulator motor	481
24. Rear left door control unit. Rear left door opener illumination bulb. Rear left door ambient	482

lighting bulb, Rear left door storage compartment illumination bulb, Rear left entry light, Rear left door warning lamp	
25. Rear left window regulator switch, in door, Rear left door control unit, Rear left door ambient lighting bulb, Rear left door storage compartment illumination bulb, Rear left window regulator motor	483
26. Rear left central locking lock unit, Rear left childproof lock contact switch, Rear left door control unit, Rear left childproof lock motor	484
053 - Convenience system, right-hand drive	485-509
1. Convenience system, right-hand drive	485
2. Fuse holder C	486
3. Storage compartment illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb, Rear vent illumination bulb	487
4. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Interior monitoring sensor, Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	488
5. Front roof module, Rear interior light	489
6. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	490
7. Glass breakage sensor for rear window, Alarm horn, Luggage compartment light on left, Right luggage compartment light	491
8. Control unit in dash panel insert, Data bus diagnostic interface	492
9. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Button for left childproof lock, Button for right childproof lock, Driver door control unit	493
10. Mirror adjustment switch, Mirror adjustment changeover switch, Rear lid release switch, Adjustment switch for mirror with fold-in feature, Interior monitoring switch, Driver side interior locking button for central locking system, Driver door control unit	494
11. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Driver side door warning lamp, Front left entry light	495
12. Driver door control unit, Driver door storage compartment illumination bulb, Driver door ambient lighting bulb, Loudspeaker background lighting bulb 1, Loudspeaker background lighting bulb 2, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side window regulator motor	496
13. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	497
14. Driver side central locking lock unit, Driver door control unit	498
15. Rear right door control unit, Rear right door opener illumination bulb, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right entry light, Rear right door warning lamp	499
16. Rear right window regulator switch, in door, Rear right door control unit, Rear right door ambient lighting bulb, Rear right door storage compartment illumination bulb, Rear right window regulator motor	500
17. Rear right central locking lock unit, Rear right childproof lock contact switch, Rear right door control unit, Rear right childproof lock motor	501
18. Front passenger side central locking lock unit, Front passenger door control unit	502
19. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	503
20. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	504
21. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Front right entry light, Front passenger side door warning lamp	505
22. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Front passenger door ambient lighting bulb, Loudspeaker background lighting bulb 3, Loudspeaker background lighting bulb 4, Front passenger side window regulator motor	506
23. Rear left door control unit, Rear left door opener illumination bulb, Rear left door ambient lighting bulb, Rear left door storage compartment illumination bulb, Rear left entry light, Rear left door warning lamp	507
24. Rear left window regulator switch, in door, Rear left door control unit, Rear left door ambient lighting bulb, Rear left door storage compartment illumination bulb, Rear left window regulator motor	508

25. Rear left central locking lock unit, Rear left childproof lock contact switch, Rear left door control unit, Rear left childproof lock motor	509
054 - Fuse assignment	510-532
1. Fuse assignment	510
2. Fuse holder A, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A	511
3. Battery, Battery monitor control unit, Fuse holder A, Fuse 8 on fuse holder A	512
4. Fuse 2 on fuse holder B, Fuse 4 on fuse holder B, Fuse 5 on fuse holder B, Fuse 9 on fuse holder B, Fuse 30 on fuse holder B	513
5. Fuse 1 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B	514
6. Main relay, Terminal 30 voltage supply relay, Fuse 13 on fuse holder B, Fuse 14 on fuse holder B	515
7. Fuel metering valve, Fuse 15 on fuse holder B, Fuse 24 on fuse holder B	516
8. Fuse 3 on fuse holder B, Fuse 6 on fuse holder B, Fuse 10 on fuse holder B, Fuse 19 on fuse holder B	517
9. Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 20 on fuse holder B, Fuse 22 on fuse holder B	518
10. Fuse 16 on fuse holder B, Fuse 21 on fuse holder B	519
11. Fuse 23 on fuse holder B, Fuse 25 on fuse holder B, Fuse 26 on fuse holder B	520
12. Terminal 15 voltage supply relay, Fuse 27 on fuse holder B, Fuse 28 on fuse holder B, Fuse 29 on fuse holder B	521
13. Fuse 3 on fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C	522
14. Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C	523
15. Fuse 14 on fuse holder C	524
16. Fuse 15 on fuse holder C	525
17. Fuse 16 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C	526
18. Starter relay 2, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	527
19. Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 43 on fuse holder C	528
20. Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	529
21. Fuse 28 on fuse holder C, Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 52 on fuse holder C, Fuse 53 on fuse holder C	530
22. Fuse 31 on fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 37 on fuse holder C	531
23. Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C, Fuse 54 on fuse holder C, Fuse 55 on fuse holder C, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C	532
055 - Airbag systems for RHD vehicles , (L0R)	533-542
1. Airbag systems for RHD vehicles , (L0R)	533
2. Terminal 15 voltage supply relay, Onboard supply control unit, Front passenger side airbag deactivated warning lamp	534
3. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor, front passenger side, Battery isolation igniter	535
4. Key operated switch to deactivate front passenger side airbag, Rear belt switch, driver side, Rear belt switch, passenger side	536
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side	537
6. Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	538
7. Side airbag igniter on driver side, Side airbag igniter on front passenger side	539
8. Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	540
9. Steering column electronics control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	541
10. Control unit in dash panel insert, Data bus diagnostic interface, Airbag warning lamp	542
056 - Automatic anti-dazzle interior mirror for RHD vehicles , (4L2),(4L6),(L0R)	543-546
1. Automatic anti-dazzle interior mirror for RHD vehicles , (4L2),(4L6),(L0R)	543
2. Terminal 15 voltage supply relay, Onboard supply control unit, Data bus diagnostic interface, Automatic anti-dazzle interior mirror	544
3. Voltage stabiliser, Relay for automatic anti-dazzle interior mirror, Automatic anti-dazzle interior mirror	545

4. Driver door control unit, Front passenger door control unit, Automatic anti-dazzle interior mirror	546
057 - Lane change assist for RHD vehicles , (7Y1),(7Y5)	547-551
1. Lane change assist for RHD vehicles , (7Y1),(7Y5)	547
2. Terminal 15 voltage supply relay	548
3. Data bus diagnostic interface, Lane change assist control unit	549
4. Button for lane change assist, Lane change assist control unit, Lane change assist control unit 2	550
5. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror	551
058 - Entry and start authorisation for RHD vehicles , (4F2),(4I3),(L0R)	552-557
1. Entry and start authorisation for RHD vehicles , (4F2),(4I3),(L0R)	552
2. Control unit for electronic steering column lock	553
3. Entry and start authorisation button, Entry and start authorisation control unit, Onboard supply control unit, Control unit for electronic steering column lock	554
4. Driver door exterior handle contact sensor, Front passenger door exterior handle contact sensor, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	555
5. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	556
6. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	557
059 - Radio chorus for RHD vehicles , (8UA),(L0R)	558-562
1. Radio chorus for RHD vehicles , (8UA),(L0R)	558
2. Radio, Fuse holder C	559
3. Data bus diagnostic interface, Radio, Connection for external audio sources	560
4. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	561
5. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Aerial amplifier, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	562
060 - Radio concert (CAN bus) for RHD vehicles , (8AL),(L0R)	563-576
1. Radio concert (CAN bus) for RHD vehicles , (8AL),(L0R)	563
2. Voltage stabiliser, Fuse holder C	564
3. Radio	565
4. Radio, Connection for external audio sources	566
5. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	567
6. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	568
7. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Centre loudspeaker	569
8. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Aerial amplifier, Aerial amplifier 3, Aerial amplifier 4, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	570
9. Radio, Connection for external audio sources	571
10. Radio, Connection for external audio sources	572
11. Radio, Connection for external audio sources	573
12. Internet access control unit, Radio, Connection for external audio sources, Internet access aerial	574
13. Data bus diagnostic interface, Internet access control unit, Radio	575
14. Radio, Aerial amplifier for mobile telephone, Telephone bracket, Microphone unit in front roof module, Roof aerial	576
061 - Radio concert (MOST bus) for RHD vehicles , (8AL),(L0R)	577-595
1. Radio concert (MOST bus) for RHD vehicles , (8AL),(L0R)	577
2. Voltage stabiliser, CD changer, Fuse holder C	578
3. Control unit 1 for information electronics	579
4. Control unit 1 for information electronics, Connection for external audio sources	580
5. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	581
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	582
7. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Centre loudspeaker	583
8. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	584
9. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 3, Aerial amplifier 4	585

10. Control unit 1 for information electronics, Roof aerial	586
11. Control unit 1 for information electronics, Connection for external audio sources	587
12. Internet access control unit, Control unit 1 for information electronics, Connection for external audio sources, Internet access aerial	588
13. Data bus diagnostic interface, Internet access control unit, Control unit 1 for information electronics	589
14. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket, Microphone unit in front roof module	590
15. Digital sound package control unit	591
16. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	592
17. Digital sound package control unit, Rear left loudspeaker, Rear right loudspeaker, Centre loudspeaker	593
18. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	594
19. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	595
062 - MMI navigation plus for RHD vehicles , (8DY),(8DZ),(8AJ),(8YF),(8YQ),(L0R)	596-617
1. MMI navigation plus for RHD vehicles , (8DY),(8DZ),(8AJ),(8YF),(8YQ),(L0R)	596
2. CD changer, Fuse holder C	597
3. Control unit 1 for information electronics, Fuse holder C	598
4. Control unit 1 for information electronics	599
5. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	600
6. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	601
7. Control unit 1 for information electronics	602
8. Control unit 1 for information electronics, Roof aerial	603
9. Control unit 1 for information electronics, Connection for external audio sources	604
10. Internet access control unit, Control unit 1 for information electronics, Connection for external audio sources, Internet access aerial	605
11. Data bus diagnostic interface, Internet access control unit, Control unit 1 for information electronics	606
12. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket, Microphone unit in front roof module	607
13. Radio	608
14. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Aerial amplifier 3, Aerial amplifier 4	609
15. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Aerial amplifier, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	610
16. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Centre loudspeaker	611
17. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	612
18. Digital sound package control unit	613
19. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	614
20. Digital sound package control unit, Rear left loudspeaker, Rear right loudspeaker, Centre loudspeaker	615
21. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	616
22. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Subwoofer	617
063 - Battery in luggage compartment with start/stop system and energy recovery , (7L6),(7L8)	618-627
1. Battery in luggage compartment with start/stop system and energy recovery , (7L6),(7L8)	618
2. Alternator, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A	619
3. Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A, Fuse 8 on fuse holder A	620
4. Starter, Engine/motor control unit, Starter relay 1, Starter relay 2	621
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	622
6. Start/Stop operation button	623
7. Voltage stabiliser, Relay for automatic anti-dazzle interior mirror	624
8. Voltage stabiliser	625
9. Battery, Fuse holder D	626
10. Terminal B+ suppressor, Fuse holder D	627
064 - 2.5l petrol engine , CTSA	628-649
1. 2.5l petrol engine . CTSA	628

2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	629
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	630
4. Brake pedal switch, Onboard supply control unit, Engine/motor control unit	631
5. Terminal 15 voltage supply relay, Onboard supply control unit, Engine/motor control unit	632
6. Fuel delivery unit, Engine/motor control unit	633
7. Main relay, Additional coolant pump relay, Engine/motor control unit	634
8. Brake servo pressure sensor, Engine/motor control unit, Exhaust flap control unit	635
9. Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	636
10. Coolant temperature sender, Intake manifold flap potentiometer, Engine/motor control unit	637
11. Charge pressure sender, Charge pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	638
12. Throttle valve module, Hall sender, Hall sender 3, Throttle valve module, Engine/motor control unit	639
13. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Activated charcoal filter solenoid valve 1	640
14. Engine/motor control unit, Charge pressure control solenoid valve, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve	641
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	642
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	643
17. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage	644
18. Oil pressure switch, Engine/motor control unit, Solenoid for coolant circuit, Coolant circulation pump	645
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater	646
20. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	647
21. Control unit in dash panel insert, Data bus diagnostic interface	648
22. Oil level and oil temperature sender, Control unit in dash panel insert	649
065 - 1.4l petrol engine , CPTA,CZEA	650-672
1. 1.4l petrol engine , CPTA,CZEA	650
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	651
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	652
4. Clutch position sender, Onboard supply control unit, Engine/motor control unit	653
5. Brake light switch, Brake pedal switch, Engine/motor control unit	654
6. Terminal 15 voltage supply relay, Engine/motor control unit	655
7. Fuel gauge sender, Fuel delivery unit, Engine/motor control unit	656
8. Main relay, Engine/motor control unit	657
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	658
10. Engine/motor control unit, Fuel pressure regulating valve, Continued coolant circulation pump	659
11. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control	660
12. Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	661
13. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	662
14. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	663
15. Accelerator pedal module, Hall sender, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Charge pressure positioner	664
16. Intake air temperature sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	665
17. Engine speed sender, Charge pressure sender, Engine/motor control unit	666
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	667
19. Gearbox neutral position sender, Engine/motor control unit	668
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Knock sensor 1, Radiator outlet coolant temperature sender, Throttle valve module, Engine/motor control unit	669
21. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	670
22. Control unit in dash panel insert, Data bus diagnostic interface	671
23. Oil level and oil temperature sender, Control unit in dash panel insert	672
066 - 6-speed automatic gearbox . (0EW)	673-680

1. 6-speed automatic gearbox , (0EW)	673
2. Terminal 15 voltage supply relay, Terminal 15 voltage supply relay 2	674
3. Multifunction switch, Automatic gearbox control unit	675
4. Automatic gearbox control unit	676
5. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit	677
6. Tiptronic switch, Automatic gearbox control unit	678
7. Tiptronic switch, Selector lever lock solenoid, Selector lever position display	679
8. Control unit in dash panel insert, Data bus diagnostic interface	680
067 - All-wheel drive , (1X1)	681-683
1. All-wheel drive , (1X1)	681
2. Terminal 15 voltage supply relay	682
3. All-wheel drive control unit, Coupling opening control valve	683
068 - Battery in engine compartment with no start/stop system and no energy recovery	684-689
1. Battery in engine compartment with no start/stop system and no energy recovery	684
2. Alternator, Fuse 1 on fuse holder A	685
3. Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A	686
4. Battery, Starter, Engine/motor control unit, Starter relay 1, Starter relay 2	687
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	688
6. Fuse holder C	689
069 - Battery in engine compartment with no start/stop system and no energy recovery , (7L3)	690-694
1. Battery in engine compartment with no start/stop system and no energy recovery , (7L3)	690
2. Alternator, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A	691
3. Battery, Starter, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse 7 on fuse holder A, Fuse 8 on fuse holder A, Terminal 30 fuse, trailer towing attachment	692
4. Engine/motor control unit, Starter relay 1, Starter relay 2	693
5. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Fuse holder C	694
070 - 1.4l petrol engine , CSSA	695-716
1. 1.4l petrol engine , CSSA	695
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	696
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	697
4. Clutch position sender, Onboard supply control unit, Engine/motor control unit	698
5. Brake light switch, Brake pedal switch, Engine/motor control unit	699
6. Terminal 15 voltage supply relay, Engine/motor control unit	700
7. Fuel gauge sender, Fuel delivery unit, Engine/motor control unit	701
8. Main relay, Engine/motor control unit	702
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	703
10. Engine/motor control unit, Fuel pressure regulating valve, Continued coolant circulation pump	704
11. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control	705
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	706
13. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	707
14. Accelerator pedal module, Hall sender, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Charge pressure control solenoid valve	708
15. Intake air temperature sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	709
16. Engine speed sender, Charge pressure sender, Engine/motor control unit	710
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	711
18. Gearbox neutral position sender, Engine/motor control unit	712
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Knock sensor 1, Radiator outlet coolant temperature sender, Throttle valve module, Engine/motor control unit	713
20. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	714
21. Control unit in dash panel insert, Data bus diagnostic interface	715
22. Oil level and oil temperature sender, Control unit in dash panel insert	716
071 - 1.4l petrol engine , CHPB,CZDA	717-738
1. 1.4l petrol engine , CHPB,CZDA	717
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	718
3. Onboard supply control unit. Steering column electronics control unit. Engine/motor control unit	719

4. Clutch position sender, Onboard supply control unit, Engine/motor control unit	720
5. Brake light switch, Brake pedal switch, Engine/motor control unit	721
6. Terminal 15 voltage supply relay, Engine/motor control unit	722
7. Fuel gauge sender, Fuel delivery unit, Engine/motor control unit	723
8. Main relay, Engine/motor control unit	724
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	725
10. Engine/motor control unit, Fuel pressure regulating valve, Continued coolant circulation pump	726
11. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control	727
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	728
13. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	729
14. Accelerator pedal module, Hall sender, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Charge pressure positioner	730
15. Intake air temperature sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	731
16. Engine speed sender, Charge pressure sender, Engine/motor control unit	732
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	733
18. Gearbox neutral position sender, Engine/motor control unit	734
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Knock sensor 1, Radiator outlet coolant temperature sender, Throttle valve module, Engine/motor control unit	735
20. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	736
21. Control unit in dash panel insert, Data bus diagnostic interface	737
22. Oil level and oil temperature sender, Control unit in dash panel insert	738
072 - Convenience system, left-hand drive , (LOL)	739-763
1. Convenience system, left-hand drive , (LOL)	739
2. Fuse holder C	740
3. Storage compartment illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb, Rear vent illumination bulb	741
4. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Interior monitoring sensor, Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	742
5. Front roof module, Rear interior light	743
6. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	744
7. Glass breakage sensor for rear window, Alarm horn, Left luggage compartment light, Right luggage compartment light	745
8. Control unit in dash panel insert, Data bus diagnostic interface	746
9. Operating unit for window regulator in driver door, Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Button for left childproof lock, Button for right childproof lock, Driver door control unit	747
10. Mirror adjustment switch, Mirror adjustment changeover switch, Rear lid release switch, Adjustment switch for mirror with fold-in feature, Interior monitoring switch, Driver side interior locking button for central locking system, Driver door control unit	748
11. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door storage compartment illumination bulb, Driver door background lighting bulb, Driver side door warning lamp, Front left entry light	749
12. Driver door control unit, Driver door storage compartment illumination bulb, Driver door background lighting bulb, Loudspeaker background lighting bulb 1, Loudspeaker background lighting bulb 2, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side window regulator motor	750
13. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	751
14. Driver side central locking lock unit, Driver door control unit	752
15. Rear left door control unit, Rear left door opener illumination bulb, Rear left door background lighting bulb, Rear left door storage compartment illumination bulb, Rear left entry light, Rear left door warning lamp	753
16. Rear left window regulator switch, in door, Rear left door control unit, Rear left door background lighting bulb, Rear left door storage compartment illumination bulb, Rear left window regulator motor	754
17. Rear left central locking lock unit. Rear left childproof lock contact switch. Rear left door	755

control unit, Rear left childproof lock motor	
18. Front passenger side central locking lock unit, Front passenger door control unit	756
19. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	757
20. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	758
21. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door storage compartment illumination bulb, Front passenger door background lighting bulb, Front right entry light, Front passenger side door warning lamp	759
22. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Front passenger door background lighting bulb, Loudspeaker background lighting bulb 3, Loudspeaker background lighting bulb 4, Front passenger side window regulator motor	760
23. Rear right door control unit, Rear right door opener illumination bulb, Rear right door background lighting bulb, Rear right door storage compartment illumination bulb, Rear right entry light, Rear right door warning lamp	761
24. Rear right window regulator switch, in door, Rear right door control unit, Rear right door background lighting bulb, Rear right door storage compartment illumination bulb, Rear right window regulator motor	762
25. Rear right central locking lock unit, Rear right childproof lock contact switch, Rear right door control unit, Rear right childproof lock motor	763
073 - Convenience system, right-hand drive , (LOR)	764-788
1. Convenience system, right-hand drive , (LOR)	764
2. Fuse holder C	765
3. Storage compartment illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb, Rear vent illumination bulb	766
4. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Interior monitoring sensor, Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	767
5. Front roof module, Rear interior light	768
6. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	769
7. Glass breakage sensor for rear window, Alarm horn, Left luggage compartment light, Right luggage compartment light	770
8. Control unit in dash panel insert, Data bus diagnostic interface	771
9. Operating unit for window regulator in driver door, Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Button for left childproof lock, Button for right childproof lock, Driver door control unit	772
10. Mirror adjustment switch, Mirror adjustment changeover switch, Rear lid release switch, Adjustment switch for mirror with fold-in feature, Interior monitoring switch, Driver side interior locking button for central locking system, Driver door control unit	773
11. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door storage compartment illumination bulb, Driver door background lighting bulb, Driver side door warning lamp, Front right entry light	774
12. Driver door control unit, Driver door storage compartment illumination bulb, Driver door background lighting bulb, Loudspeaker background lighting bulb 1, Loudspeaker background lighting bulb 2, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side window regulator motor	775
13. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	776
14. Driver side central locking lock unit, Driver door control unit	777
15. Rear right door control unit, Rear right door opener illumination bulb, Rear right door background lighting bulb, Rear right door storage compartment illumination bulb, Rear right entry light, Rear right door warning lamp	778
16. Rear right window regulator switch, in door, Rear right door control unit, Rear right door background lighting bulb, Rear right door storage compartment illumination bulb, Rear right window regulator motor	779
17. Rear right central locking lock unit, Rear right childproof lock contact switch, Rear right door control unit, Rear right childproof lock motor	780
18. Front passenger side central locking lock unit, Front passenger door control unit	781
19. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	782

20. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Heated exterior mirror on passenger side	783
21. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door storage compartment illumination bulb, Front passenger door background lighting bulb, Front left entry light, Front passenger side door warning lamp	784
22. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Front passenger door background lighting bulb, Loudspeaker background lighting bulb 3, Loudspeaker background lighting bulb 4, Front passenger side window regulator motor	785
23. Rear left door control unit, Rear left door opener illumination bulb, Rear left door background lighting bulb, Rear left door storage compartment illumination bulb, Rear left entry light, Rear left door warning lamp	786
24. Rear left window regulator switch, in door, Rear left door control unit, Rear left door background lighting bulb, Rear left door storage compartment illumination bulb, Rear left window regulator motor	787
25. Rear left central locking lock unit, Rear left door control unit	788
074 - Dual clutch gearbox 02E , (0ES)	789-794
1. Dual clutch gearbox 02E , (0ES)	789
2. Terminal 15 voltage supply relay	790
3. Gearbox input speed sender, Automatic gearbox hydraulic pressure sender 1, Automatic gearbox hydraulic pressure sender 2, Clutch temperature sender, Mechatronic unit for dual clutch gearbox, Solenoid valve 1, Solenoid valve 2, Solenoid valve 4, Solenoid valve 5	791
4. Selector lever, Selector lever locked in position P switch, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6	792
5. Selector lever, Gearbox output speed sender, Gear selector movement sensor 1, Gear selector movement sensor 2, Gear selector movement sensor 3, Gear selector movement sensor 4, Input shaft speed sender 1, Input shaft speed sender 2, Mechatronic unit for dual clutch gearbox, Selector lever position display	793
6. Gearbox oil temperature sender, Gearbox output speed sender 2, Temperature sender in control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	794
075 - Basic equipment (Canada, Mexico, USA)	795-827
1. Basic equipment (Canada, Mexico, USA)	795
2. Immobiliser reader coil, Control unit in dash panel insert	796
3. Brake fluid level warning contact, Coolant shortage indicator switch, Control unit in dash panel insert	797
4. Ambient temperature sensor, Windscreen washer fluid level sender, Control unit in dash panel insert	798
5. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	799
6. Turn signal switch, Steering angle sender, Horn plate, Steering column electronics control unit	800
7. Ignition/starter switch, Steering column electronics control unit	801
8. Onboard supply control unit, Steering column electronics control unit	802
9. Onboard supply control unit	803
10. Brake light switch, Brake pedal switch, Onboard supply control unit	804
11. Oil level and oil temperature sender, Radio controlled clock receiver, Onboard supply control unit, Tank filler flap locking motor	805
12. Rotary light switch, Switch and instrument illumination regulator, Front and rear fog light switch, Onboard supply control unit	806
13. Rotary light switch, Headlight range control regulator, Onboard supply control unit, Bulb for left daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	807
14. Headlight washer system relay, Onboard supply control unit, Left fog light bulb, Headlight washer system pump	808
15. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor	809
16. Bonnet contact switch, Front left brake pad wear sender, Bass horn, Onboard supply control unit, Front left side marker bulb, Front right side marker bulb	810
17. Onboard supply control unit, Front roof module, Rear interior light	811
18. Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	812
19. Onboard supply control unit, Bulb for right daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	813
20. Bonnet contact switch 2. Treble horn. Horn relay. Onboard supply control unit. Right fog light	814

bulb	
21. Reversing light switch, Onboard supply control unit, Left washer jet heater element, Right washer jet heater element	815
22. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	816
23. Onboard supply control unit, High-level brake light bulb	817
24. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	818
25. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	819
26. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, Rear left side marker bulb, Rear right side marker bulb, Bulb 2 for rear left turn signal, Bulb 2 for rear right turn signal, Left brake and tail light bulb 3, Right brake and tail light bulb 3	820
27. Heated rear window relay, Onboard supply control unit, Right luggage compartment light, Heated rear window	821
28. Onboard supply control unit, Data bus diagnostic interface	822
29. Onboard supply control unit, Data bus diagnostic interface	823
30. Driver side central locking lock unit, Rear left central locking lock unit, Driver door control unit, Rear left door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	824
31. Front passenger side central locking lock unit, Rear right central locking lock unit, Front passenger door control unit, Rear right door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	825
32. Onboard supply control unit, Fuse holder C	826
33. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	827
076 - Towing bracket, only models with US equipment , (1D8),(5C1)	828-831
1. Towing bracket, only models with US equipment , (1D8),(5C1)	828
2. Terminal 15 voltage supply relay	829
3. Brake light switch, Trailer detector control unit	830
4. Trailer detector control unit, Terminal 30 fuse, trailer towing attachment, Trailer socket	831
077 - Airbag systems (US equipment) , (4UM)	832-842
1. Airbag systems (US equipment) , (4UM)	832
2. Hazard warning lights button, Terminal 15 voltage supply relay, Onboard supply control unit	833
3. Driver side belt switch, Driver side seat position sensor	834
4. Front passenger side belt switch, Seat occupied sensor, front passenger side, Front passenger side seat position sensor	835
5. Front passenger side belt switch, Pressure sensor for seat occupied recognition, Seat belt force sensor for seat occupied recognition, Front passenger side seat position sensor, Seat occupied recognition control unit	836
6. Driver side belt force limiter, Front passenger side belt force limiter, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	837
7. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side	838
8. Side airbag igniter on driver side, Side airbag igniter on front passenger side, Isolation unit for passenger seat backrest adjustment	839
9. Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	840
10. Steering column electronics control unit, Driver side airbag igniter, Front passenger side airbag igniter 1, Front passenger side airbag igniter 2	841
11. Control unit in dash panel insert, Data bus diagnostic interface, Airbag warning lamp	842
078 - 2.0l petrol engine , CCTA	843-860
1. 2.0l petrol engine , CCTA	843
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	844
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	845
4. Brake light switch, Brake pedal switch, Terminal 15 voltage supply relay, Onboard supply control unit, Engine/motor control unit	846
5. Engine/motor control unit	847
6. Fuel gauge sender, Fuel delivery unit, Engine/motor control unit	848
7. Main relay, Additional coolant pump relay, Engine/motor control unit	849
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	850
9. Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Fuel pressure regulating valve. Intake manifold flap valve	851

10. Intake air temperature sender, Coolant temperature sender, Air mass meter, Radiator outlet coolant temperature sender, Engine/motor control unit	852
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	853
12. Oil pressure switch, Accelerator pedal module, Hall sender, Knock sensor 1, Accelerator position sender, Accelerator position sender 2, Fuel pressure sender, Engine/motor control unit	854
13. Throttle valve module, Engine speed sender, Charge pressure sender, Intake manifold flap potentiometer, Throttle valve module, Engine/motor control unit	855
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	856
15. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	857
16. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	858
17. Control unit in dash panel insert, Data bus diagnostic interface	859
18. Oil level and oil temperature sender, Control unit in dash panel insert	860
079 - Lane change assist , (7Y1),(7Y5)	861-864
1. Lane change assist , (7Y1),(7Y5)	861
2. Terminal 15 voltage supply relay, Lane change assist control unit	862
3. Button for lane change assist, Data bus diagnostic interface, Lane change assist control unit, Lane change assist warning lamp	863
4. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in passenger side exterior mirror	864
080 - Lane change assist for RHD vehicles , (7Y1),(7Y5)	865-869
1. Lane change assist for RHD vehicles , (7Y1),(7Y5)	865
2. Terminal 15 voltage supply relay	866
3. Data bus diagnostic interface, Lane change assist control unit	867
4. Button for lane change assist, Lane change assist control unit, Lane change assist control unit 2	868
5. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror	869
081 - Tyre Pressure Monitoring System, only models with USA equipment	870-872
1. Tyre Pressure Monitoring System, only models with USA equipment	870
2. Tyre Pressure Monitoring System button, ABS control unit, Terminal 15 voltage supply relay	871
3. ABS control unit, Control unit in dash panel insert, Data bus diagnostic interface, Tyre Pressure Loss Indicator warning lamp	872
082 - Electrically operated rear lid , (4E7),(4E9)	873-876
1. Electrically operated rear lid , (4E7),(4E9)	873
2. Rear lid control unit	874
3. Rear lid closure button, Rear lid control unit	875
4. Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	876
083 - Infotainment MOST bus	877-888
1. Infotainment MOST bus	877
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	878
3. Data bus diagnostic interface, Control unit 1 for information electronics, CD changer	879
4. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, CD changer	880
5. Data bus diagnostic interface, Control unit 1 for information electronics, Radio	881
6. Data bus diagnostic interface, Control unit 1 for information electronics, Radio, TV tuner	882
7. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio	883
8. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, TV tuner	884
9. Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer	885
10. Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer, TV tuner	886
11. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer	887
12. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer, TV tuner	888
084 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (GP2)	889-894
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (GP2)	889
2. Button for TCS and electronic stabilisation program, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	890
3. Electromechanical parking brake button, ABS control unit, Onboard supply control unit	891
4. ABS control unit, Front left ABS inlet valve, Left parking brake motor, Right parking brake motor	892
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Rear right ABS outlet valve, ABS hydraulic pump	893
6. Vacuum sender, ABS control unit, Data bus diagnostic interface, ABS warning lamp, Warning lamp for electronic stabilisation program and TCS	894

085 - Manually controlled heater , (9AC)	895-898
1. Manually controlled heater , (9AC)	895
2. Heater control unit, Data bus diagnostic interface, Fuse holder C	896
3. Heater control unit, Air recirculation flap control motor	897
4. Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Heater control unit, Temperature flap control motor, Air distribution flap control motor	898
086 - 2.0l diesel engine , CUVB,CUVC,CUVD,CUWA,DFTA,DFTB,DFTC,DFUA	899-919
1. 2.0l diesel engine , CUVB,CUVC,CUVD,CUWA,DFTA,DFTB,DFTC,DFUA	899
2. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	900
3. Onboard supply control unit, Steering column electronics control unit	901
4. Terminal 30 voltage supply relay, Relay for reducing agent metering system, Fuse holder C	902
5. Automatic glow period control unit	903
6. Engine/motor control unit, Fuse 18 on fuse holder B	904
7. Engine/motor control unit, Glow plug 1, Glow plug 2	905
8. Low heat output relay, High heat output relay, Fuel pump control unit, Engine/motor control unit, Glow plug 3, Glow plug 4	906
9. Fuel gauge sender, Fuel delivery unit, Air mass meter, Engine/motor control unit, Heater element for crankcase breather, Fuel pressure regulating valve	907
10. Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head, Auxiliary pump for heating	908
11. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Charge air cooling pump	909
12. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Charge air temperature sender before charge air cooler, Engine/motor control unit, Injector, cylinder 1	910
13. Pressure differential sender, Engine/motor control unit, Exhaust flap control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	911
14. Brake light switch, Brake pedal switch, Hall sender, Fuel pressure sender for low pressure, Position sender for charge pressure positioner, Engine/motor control unit	912
15. Throttle valve module, Engine speed sender, Throttle valve potentiometer, Fuel pressure sender, Exhaust gas recirculation potentiometer 2, Throttle valve module, Engine/motor control unit, Exhaust gas recirculation control motor 2	913
16. Lambda probe 1 before catalytic converter, Lambda probe, Control unit for NOx sender, Engine/motor control unit, Injector for reducing agent, Exhaust gas recirculation control motor, Lambda probe heater	914
17. Charge pressure sender, Water level sender, Exhaust gas pressure sensor 1, Charge air temperature sender after charge air cooler, Control unit for NOx sender, Engine/motor control unit	915
18. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Heater for reducing agent line (heater circuit 2)	916
19. Reducing agent level sender, Engine/motor control unit, Pump for reducing agent, Reducing agent return flow pump, Heater for reducing agent tank (heater circuit 1)	917
20. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	918
21. Control unit in dash panel insert	919
087 - 2.0l petrol engine , CULB,CULC	920-939
1. 2.0l petrol engine , CULB,CULC	920
2. Main relay, Terminal 15 voltage supply relay, Fuse holder C	921
3. Engine component current supply relay, Fuse 10 on fuse holder B, Fuse 23 on fuse holder B	922
4. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	923
5. Clutch position sender, Onboard supply control unit, Engine/motor control unit	924
6. Brake light switch, Brake pedal switch, Fuel gauge sender, Fuel delivery unit, Clutch position sender, Engine/motor control unit	925
7. Start/Stop operation button, Vacuum sender, Engine/motor control unit	926
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	927
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Piston cooling jet control valve, Continued coolant circulation pump	928
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	929
11. Engine/motor control unit, Ignition coil 4 with output stage, Injector 2, cylinder 1, Injector 2, cvlinder 2. Iniector 2. cvlinder 3. Iniector 2. cvlinder 4	930

12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	931
13. Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	932
14. Coolant temperature sender, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit	933
15. Engine speed sender, Hall sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	934
16. Accelerator pedal module, Intake air temperature sender, Intake manifold pressure sender, Accelerator position sender, Engine/motor control unit, Actuator for engine temperature regulation	935
17. Accelerator pedal module, Throttle valve module, Lambda probe 1 before catalytic converter, Lambda probe, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	936
18. Lambda probe 1 after catalytic converter, Charge pressure sender, Knock sensor 1, Lambda probe after catalytic converter, Gearbox neutral position sender, Engine/motor control unit	937
19. Oil pressure switch, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	938
20. Oil level and oil temperature sender, Control unit in dash panel insert	939
088 - LED headlights , (8IT),(GP2)	940-951
1. LED headlights , (8IT),(GP2)	940
2. Rear left vehicle level sender, Control unit for cornering light and headlight range control, Fuse 27 on fuse holder B	941
3. Temperature sender 1 for left headlight, Control unit for cornering light and headlight range control, Front left headlight, Left headlight dipped beam bulb, Left headlight fan	942
4. Temperature sender 2 for left headlight, Temperature sender 3 for left headlight, Front left headlight, Left static cornering light	943
5. Output module for left headlight, Front left headlight, Left headlight main beam bulb	944
6. Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight range control motor	945
7. Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Front left side marker bulb	946
8. Front right headlight	947
9. Front right headlight	948
10. Front right headlight	949
11. Front right headlight	950
12. Front right headlight, Front right turn signal bulb	951
089 - Gas discharge headlights with automatic headlight range control , (8IH),(GP2)	952-956
1. Gas discharge headlights with automatic headlight range control , (8IH),(GP2)	952
2. Terminal 15 voltage supply relay, Onboard supply control unit, Connection 1, in lower front bumper wiring harness	953
3. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit	954
4. Left gas discharge bulb control unit, Headlight range control unit, Onboard supply control unit, Left LED module for daytime running light and side light, Left headlight range control motor, Left dip beam screen motor	955
5. Right gas discharge bulb control unit, Headlight range control unit, Onboard supply control unit, Right gas discharge (xenon) bulb, Right headlight range control motor, Right dip beam screen motor	956
090 - Trailer coupling , (1D4),(1D8),(GP2)	957-960
1. Trailer coupling , (1D4),(1D8),(GP2)	957
2. Brake light switch, Trailer detector control unit, Trailer voltage supply relay	958
3. Contact switch on locking pin, Trailer detector control unit, Towing bracket locked warning lamp, Towing bracket released warning lamp, Terminal 30 fuse, trailer towing attachment	959
4. Trailer detector control unit, Trailer socket	960
091 - Multifunction steering wheel	961-964
1. Multifunction steering wheel	961
2. Airbag control unit, Steering column electronics control unit	962
3. Tiptronic switch (shift up), Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	963
4. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift down), Multifunction steering wheel control unit	964
092 - 2.5l petrol engine , CZGA,CZGB	965-979
1. 2.5l petrol engine , CZGA,CZGB	965
2. Ignition/starter switch, Cruise control system switch, Main relay, Steering column electronics control unit	966
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	967
4. Brake pedal switch. Terminal 15 voltage supply relay. Engine/motor control unit	968

5. Fuel delivery unit, Additional coolant pump relay, Fuel pump control unit, Engine/motor control unit	969
6. Coolant temperature sender, Intake manifold flap potentiometer, Engine/motor control unit, Exhaust flap control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	970
7. Charge pressure sender, Charge pressure sender, Hall sender, Fuel pressure sender, Engine/motor control unit	971
8. Hall sender 3, Engine/motor control unit	972
9. Throttle valve module, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Intake manifold flap valve	973
10. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Charge pressure control solenoid valve, Turbocharger air recirculation valve, Fuel metering valve	974
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 1 with output stage, Injector, cylinder 5	975
12. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Ignition coil 5 with output stage	976
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Solenoid for coolant circuit, Continued coolant circulation pump, Lambda probe heater	977
14. Lambda probe 1 after catalytic converter, Lambda probe after catalytic converter, Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	978
15. Control unit in dash panel insert	979
093 - 2.0l diesel engine , CYLA,DBBA	980-997
1. 2.0l diesel engine , CYLA,DBBA	980
2. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	981
3. Onboard supply control unit, Steering column electronics control unit, Control unit for electronic steering column lock	982
4. Fuse holder C	983
5. Automatic glow period control unit	984
6. Engine/motor control unit, Fuse 18 on fuse holder B	985
7. Engine/motor control unit, Glow plug 1, Glow plug 2	986
8. Low heat output relay, High heat output relay, Fuel pump control unit, Engine/motor control unit, Glow plug 3, Glow plug 4	987
9. Fuel gauge sender, Fuel delivery unit, Air mass meter, Engine/motor control unit, Heater element for crankcase breather, Fuel pressure regulating valve, Fuel metering valve	988
10. Engine/motor control unit, Charge pressure control solenoid valve, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	989
11. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 1, Temperature sender before particulate filter, Temperature sender after particulate filter, Engine/motor control unit	990
12. Coolant temperature sender, Charge air temperature sender before charge air cooler, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	991
13. Brake light switch, Brake pedal switch, Pressure differential sender, Engine/motor control unit, Exhaust flap control unit	992
14. Hall sender, Fuel pressure sender, Fuel pressure sender for low pressure, Position sender for charge pressure positioner, Engine/motor control unit	993
15. Throttle valve module, Lambda probe 1 before catalytic converter, Engine speed sender, Lambda probe, Throttle valve potentiometer, Exhaust gas recirculation potentiometer 2, Throttle valve module, Engine/motor control unit, Exhaust gas recirculation control motor 2	994
16. Lambda probe 1 before catalytic converter, Charge pressure sender, Water level sender, Exhaust gas pressure sensor 1, Charge air temperature sender after charge air cooler, Engine/motor control unit, Lambda probe heater	995
17. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	996
18. Control unit in dash panel insert, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	997
094 - 2.0l petrol engine , DBRA,DBSA	998-1017
1. 2.0l petrol engine , DBRA,DBSA	998
2. Main relay, Terminal 15 voltage supply relay, Fuse holder C	999
3. Engine component current supply relay, Fuse 10 on fuse holder B, Fuse 23 on fuse holder B	1000
4. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	1001
5. Clutch position sender. Onboard supply control unit. Engine/motor control unit	1002

6. Brake light switch, Brake pedal switch, Fuel delivery unit, Clutch position sender, Fuel pump control unit, Engine/motor control unit	1003
7. Start/Stop operation button, Vacuum sender, Fuel pump control unit, Engine/motor control unit	1004
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	1005
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Piston cooling jet control valve, Continued coolant circulation pump	1006
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	1007
11. Engine/motor control unit, Ignition coil 4 with output stage, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	1008
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1009
13. Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	1010
14. Coolant temperature sender, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit	1011
15. Engine speed sender, Hall sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	1012
16. Accelerator pedal module, Intake manifold sender, Intake air temperature sender, Intake manifold pressure sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Actuator for engine temperature regulation	1013
17. Accelerator pedal module, Throttle valve module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Throttle valve module, Engine/motor control unit	1014
18. Lambda probe 1 after catalytic converter, Charge pressure sender, Knock sensor 1, Lambda probe after catalytic converter, Gearbox neutral position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1015
19. Oil pressure switch, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1016
20. Control unit in dash panel insert	1017
095 - 1.4l petrol engine , CSSA	1018-1034
1. 1.4l petrol engine , CSSA	1018
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	1019
3. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Fuse holder B	1020
4. Main relay, Fuse holder B	1021
5. Brake light switch, Brake pedal switch, Engine/motor control unit	1022
6. Fuel delivery unit, Clutch position sender, Fuel pump control unit, Engine/motor control unit	1023
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	1024
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control, Continued coolant circulation pump	1025
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1026
10. Accelerator pedal module, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Charge pressure control solenoid valve	1027
11. Hall sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	1028
12. Engine speed sender, Charge pressure sender, Intake air temperature sender, Knock sensor 1, Engine/motor control unit	1029
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1030
14. Throttle valve module, Gearbox neutral position sender, Throttle valve module, Engine/motor control unit	1031
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1032
16. Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface	1033
17. Control unit in dash panel insert	1034
096 - 1.4l petrol engine , CWLA	1035-1050
1. 1.4l petrol engine . CWLA	1035

2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	1036
3. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Fuse holder B	1037
4. Main relay, Fuse holder B	1038
5. Brake light switch, Brake pedal switch, Engine/motor control unit	1039
6. Fuel delivery unit, Clutch position sender, Fuel pump control unit, Engine/motor control unit	1040
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	1041
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control, Continued coolant circulation pump	1042
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1043
10. Accelerator pedal module, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	1044
11. Hall sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	1045
12. Engine speed sender, Charge pressure sender, Intake air temperature sender, Knock sensor 1, Engine/motor control unit	1046
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1047
14. Throttle valve module, Engine/motor control unit	1048
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1049
16. Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface	1050
097 - 1.4l petrol engine , CPTA,CZEA	1051-1066
1. 1.4l petrol engine , CPTA,CZEA	1051
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	1052
3. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Fuse holder B	1053
4. Main relay, Fuse holder B, Fuse holder C	1054
5. Brake light switch, Brake pedal switch, Engine/motor control unit	1055
6. Fuel delivery unit, Clutch position sender, Fuel pump control unit, Engine/motor control unit	1056
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	1057
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control, Continued coolant circulation pump	1058
9. Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	1059
10. Coolant temperature sender, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1060
11. Accelerator pedal module, Hall sender, Accelerator position sender 2, Engine/motor control unit, Charge pressure positioner	1061
12. Intake manifold sender, Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	1062
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Knock sensor 1, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1063
14. Oil pressure switch for reduced oil pressure, Throttle valve module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Throttle valve module, Engine/motor control unit	1064
15. Oil pressure switch, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1065
16. Fuel gauge sender 2, Oil level and oil temperature sender, Control unit in dash panel insert	1066
098 - 1.4l petrol engine , CHPB,CZDA,CZDB	1067-1082
1. 1.4l petrol engine , CHPB,CZDA,CZDB	1067
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	1068
3. Terminal 15 voltage supply relay, Onboard supply control unit, Steering column electronics control unit, Fuse holder B	1069
4. Main relay, Fuse holder B	1070
5. Brake light switch, Brake pedal switch, Engine/motor control unit	1071
6. Fuel delivery unit, Clutch position sender, Fuel pump control unit, Engine/motor control unit	1072
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4. Fuel pressure regulating valve	1073

8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control, Continued coolant circulation pump	1074
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1075
10. Accelerator pedal module, Coolant temperature sender, Accelerator position sender 2, Engine/motor control unit, Charge pressure positioner	1076
11. Hall sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	1077
12. Engine speed sender, Charge pressure sender, Intake air temperature sender, Knock sensor 1, Engine/motor control unit	1078
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Gearbox neutral position sender, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1079
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Radiator outlet coolant temperature sender, Engine/motor control unit	1080
15. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1081
16. Oil level and oil temperature sender, Control unit in dash panel insert	1082
099 - USB charging sockets	1083-1085
1. USB charging sockets	1083
2.	1084
3. Voltage converter for USB charge module, USB charging socket 1	1085
100 - Emergency call module , (NZ3)	1086-1088
1. Emergency call module , (NZ3)	1086
2. Airbag control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Radio, Fuse holder C	1087
3. Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, Microphone unit in front roof module, GPS aerial 2, Loudspeaker for emergency call module, Front roof module	1088
101 - Airbag systems , (NZ3)	1089-1093
1. Airbag systems , (NZ3)	1089
2. Key operated switch to deactivate front passenger side airbag, Terminal 15 voltage supply relay, Onboard supply control unit, Emergency call module control unit and communication unit, Front passenger side airbag deactivated warning lamp, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	1090
3. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor, front passenger side, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side ai bag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side	1091
4. Front passenger side airbag igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Rear side airbag igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1092
5. Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, Airbag warning lamp, Driver side airbag igniter	1093
102 - All-wheel drive , (1X1)	1094-1096
1. All-wheel drive , (1X1)	1094
2. Terminal 15 voltage supply relay	1095
3. All-wheel drive control unit, Coupling opening control valve	1096
801 - - Fitting locations: Earth points - 3	1097-1114
1. Earth points	1097-1114
1.1 Overview of earth points	1097-1114
802 - -Fitting locations: Fuses - 3	1115-1140
1. Fuses	1115-1140
1.1 Overview of fuses	1115
1.2 Fuse holder A -SA-, with battery in engine compartment, from August 2011, up to October 2012	1116
1.3 Fuses in fuse holder A -SA-, from August 2011, up to October 2012	1117
1.4 Fuse holder A -SA-, with battery in engine compartment, from November 2012	1117
1.5 Fuses in fuse holder A -SA-, with battery in engine compartment, from November 2012	1118
1.6 Fuse holder A -SA-, with battery in luggage compartment, from May 2013	1119
1.7 Fuses in fuse holder A -SA-, with battery in luggage compartment, from May 2013	1120
1.8 Fuse holder B -SB-, from August 2011, up to October 2012	1121
1.9 Fuses in fuse holder B -SB-, from August 2011, up to October 2012	1122-1124
1.10 Fuse holder B -SB-, with battery in engine compartment, from November 2012	1125
1.11 Fuses in fuse holder B -SB-, from November 2012	1126-1129
1.12 Fuse holder C -SC-	1130
1.13 Fuses in fuse holder C -SC-	1131-1135
1.14 Fuse holder D -SD-. with batterv in luqaace compartment. from Mav 2013	1136

1.15 Fuses in fuse holder D -SD-, with battery in luggage compartment, from May 2013	1137
1.16 Fuses on left under dash panel	1138-1139
1.17 Fuses on right under dash panel	1140
803 - - Fitting locations: Relays - 3	1141-1147
1. Relays	1141-1147
1.1 Overview of relays	1141
1.2 Relay slot assignment on electronics box, from August 2011, up to October 2012	1142
1.3 Relay slot assignment on electronics box, with battery in engine compartment, from November 2012	1143
1.4 Relay slot assignment on electronics box, with battery in luggage compartment, from May 2013	1144
1.5 Relay slot assignment under electronics box	1145
1.6 Relay slot assignment, relay carrier on onboard power supply control unit, under left dash panel	1146
1.7 Relay slot assignment under left dash panel	1147
804 - - Fitting locations: Control units in front part of vehicle - 3	1148-1157
1. Control units in front part of vehicle	1148-1157
1.1 Overview of control units in front part of vehicle	1148-1149
1.2 ABS control unit -J104- (38-pin) up to October 2014	1150
1.3 ABS control unit -J104- (46-pin) from November 2014	1151
1.4 Engine control unit -J623- (154-pin)	1152
1.5 Engine control unit -J623- (196-pin)	1153
1.6 Power steering control unit -J500-	1154
1.7 Battery monitor control unit -J367-	1155
1.8 Vacuum pump relay -J57-	1156
1.9 Control unit for NOx sender -J583-	1157
805 - - Fitting locations: Control units in middle part of vehicle - 3	1158-1194
1. Control units in middle part of vehicle	1158-1194
1.1 Overview of control units in middle part of vehicle	1158-1160
1.2 Electromechanical parking brake control unit -J540-	1161
1.3 Radio -R- (chorus radio system)	1162
1.4 Rear right door control unit -J389-	1163
1.5 Rear left door control unit -J388-	1164
1.6 Front passenger door control unit -J387-	1165
1.7 Driver door control unit -J386-	1166
1.8 Lane departure warning control unit -J759-	1167
1.9 Steering column electronics control unit -J527-	1168
1.10 Heated front seats control unit -J774-	1169
1.11 Airbag control unit -J234-, only models with US equipment or emergency call module	1170
1.12 Airbag control unit -J234-, only models with US equipment or emergency call module	1171
1.13 Fresh air blower control unit -J126-	1172
1.14 Control unit in dash panel insert -J285-	1173
1.15 Air conditioning system control unit -J301-	1174
1.16 Data bus diagnostic interface -J533-, for left-hand drive models	1175
1.17 Data bus diagnostic interface -J533-, for right-hand drive models	1176
1.18 Onboard supply control unit -J519-	1177
1.19 Climatronic control unit -J255-	1178
1.20 Headlight range control unit -J431-/ control unit for cornering light and headlight range -J745-	1179
1.21 Entry and start authorisation control unit -J518-	1180
1.22 Control unit for electronic steering column lock -J764-	1181
1.23 Electronically controlled damping control unit -J250-	1182
1.24 Voltage stabiliser -J532-	1183
1.25 Fuel pump control unit -J538- (diesel engine)	1184
1.26 Fuel pump control unit -J538- (petrol engine)	1185
1.27 Internet access control unit -J666-	1186
1.28 Sliding sunroof control unit -J245-	1187
1.29 Sunroof roller blind control unit -J394-	1188
1.30 Display unit for front information display and operating unit control unit -J685-	1189
1.31 Main beam assist control unit -J844-	1190
1.32 Selector lever -E313-	1191
1.33 Chip card reader control unit -J676-	1192
1.34 Control unit for emergency call module and communication unit -J949-	1193
1.35 Control unit 1 for information electronics -J794-	1194
806 - - Fitting locations: Control units in rear part of vehicle - 3	1195-1213
1. Control units in rear part of vehicle	1195-1213
1.1 Overview of control units in rear part of vehicle	1195-1196
1.2 CD changer -R41-	1197
1.3 Radio -R- (MMI)	1198

1.4 TV tuner -R78- (hybrid tuner)	1199
1.5 TV tuner -R78- (digital tuner)	1200
1.6 Reversing camera system control unit -J772-	1201
1.7 Aerial amplifier for mobile telephone -R86-	1202
1.8 Parking aid control unit -J446-/ park assist steering control unit -J791-	1203
1.9 Trailer detector control unit -J345-	1204
1.10 Lane change assist control unit -J769-	1205
1.11 Lane change assist control unit 2 -J770-	1206
1.12 Digital sound package control unit -J525-	1207
1.13 Battery monitor control unit -J367-	1208
1.14 Special vehicle control unit -J608-	1209
1.15 All-wheel drive control unit -J492-	1210
1.16 Control unit for reducing agent heater -J891-	1211
1.17 Rear lid control unit -J605-	1212
1.18 Radio controlled clock receiver -J489-	1213
807 - - Fitting locations: Coupling stations - 3	1214-1234
1. Coupling stations	1214-1234
1.1 Overview of coupling stations	1214-1216
1.2 Front door wiring harness coupling station, right	1217
1.3 Coupling station, glove box	1218
1.4 Coupling station, glove box	1219
1.5 Seat wiring coupling station, right	1220
1.6 Coupling station for roof wiring harness	1221
1.7 Rear right coupling station for door wiring harness	1222
1.8 Rear right coupling station, rear lid	1223
1.9 Coupling station, right of rear bumper	1224
1.10 Coupling station, rear left side of rear lid	1225
1.11 Rear left coupling station for door wiring harness	1226
1.12 Seat wiring coupling station, left	1227
1.13 Front door wiring harness coupling station, left	1228
1.14 Coupling station for engine pre-wiring	1229
1.15 Coupling station, left of front bumper	1230
1.16 Coupling station, alternator	1231
1.17 Coupling station, electric steering	1232
1.18 Coupling station, preparation for trailer hitch	1233
1.19 Haldex coupling station	1234