

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	2
1.3	Cleaning engine	2
1.4	Engine number	2
1.5	Vehicle identification number	4
1.6	Vehicle data sticker	4
1.7	Warnings for high-voltage vehicles	5
2	Preparations	10
2.1	Vehicle: raising	10
2.2	Engine cover panel: removing and installing	11
2.3	Noise insulation: removing and installing	13
2.4	Static event memory: working through	14
2.5	Window regulators: activating automatic open/close function	14
2.6	Vehicle diagnostic tester: connecting	14
3	Maintenance	17
3.1	Diesel particulate filter: reading out ash deposit volume	21
3.2	ERA-GLONASS: checking emergency call function	21
3.3	Emergency call function: checking status LED (must be green before delivery to customer)	22
3.4	Certificate of conformity (COC): checking COC is present in vehicle	23
3.5	Event memory: reading out	23
3.6	Service interval display: resetting service event	23
3.7	Diagnostic work: performing	24
3.8	Flight mode: deactivating	24
3.9	Transport mode: deactivating	25
3.10	Transport mode: checking activation and activating if necessary	26
3.11	Battery: reading out status	26
3.12	ECE towing bracket: checking (if fitted)	27
3.13	Protective display films: removing if present	27
3.14	Vehicle diagnosis: completing	27
3.15	Battery: checking electrolyte level	28
3.16	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	29
3.17	Battery: determining and recording state of charge (SOC)	31
3.18	Mirror hanger indicating defective battery: renewing battery on affected vehicles	34
3.19	Data sheet for Radio Equipment Directive: printing and placing in glove compartment	34
3.20	Brake fluid: changing	34
3.21	Brake fluid (vehicles older than 12 months): changing	39
3.22	Brake fluid: checking fluid level	39
3.23	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	39
3.24	Bevel box: changing gear oil	40
3.25	Emergency battery: reading out status	40
3.26	Brake pads: checking thickness	40
3.27	Roof insert for panoramic sliding sunroof: checking operation	41
3.28	Water drains - panoramic sliding sunroof: checking	41
3.29	Toothed belt for coolant pump drive: checking	42
3.30	Brake discs: checking for surface rust and operating brakes to clean if necessary	43
3.31	Emergency flare: fitted so it is visible from driver's seat or driver's entrance	44
3.32	Parking brake: releasing	44
3.33	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	44
3.34	Tyres: checking tyre pressures and adjusting if necessary	46
3.35	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	47

3.36	Tyre Pressure Loss Indicator: storing changed tyre pressures	48
3.37	Tyre repair kit: checking that set is complete, and checking and recording expiry date ..	49
3.38	Wheel bolts: tightening to specified torque	49
3.39	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	50
3.40	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	51
3.41	Engine, gearbox, final drive and steering: checking for leaks and damage	55
3.42	Vehicle (from below): checking for damage	56
3.43	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage and corrosion, and checking that they are properly secured	56
3.44	Roof insert: checking operation	57
3.45	Door hinges with separate door arrester: cleaning and lubricating	57
3.46	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	58
3.47	Wiper blades: checking for damage	59
3.48	Headlight washer system: checking operation	60
3.49	Headlights: checking for correct adjustment	60
3.50	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	61
3.51	Luggage compartment lighting: checking operation	62
3.52	Luggage compartment: removing protective film and felt pieces	62
3.53	Glove compartment light, interior lighting and reading light: checking operation	63
3.54	Horn: checking operation	63
3.55	Passenger airbag: checking key switch on/off and setting to "on"	63
3.56	Owner's literature: checking that all documents are present	64
3.57	Service Schedule: affixing vehicle data sticker	64
3.58	Owner's Manual: attaching vehicle data sticker	64
3.59	Readiness for sending and receiving information: establishing	64
3.60	Service Schedule: entering Delivery Inspection	65
3.61	Service disconnect: checking for dirt and damage	65
3.62	Seat belts: checking retainers for latch plate and belt buckle, and checking locking action of automatic belt retractor	66
3.63	Vehicle interior: removing protective film (if present) and protective covers for seats	67
3.64	Vehicle interior: checking that it is clean and cleaning if necessary	67
3.65	Vehicle interior: removing any objects other than those protecting interior surfaces	67
3.66	Vehicle interior and exterior: checking for and documenting any damage	67
3.67	Instrument cluster: checking warning lamps	68
3.68	Warning triangle: checking availability	68
3.69	First-aid kit: checking and recording expiry date	68
3.70	Vehicle keys: checking operation and recording number of keys given to customer	68
3.71	Vehicle key: removing from ignition lock	69
3.72	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	69
3.73	Sun visors: checking that they are folded up and folding up if necessary	69
3.74	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	69
3.75	Engine oil: draining	70
3.76	Engine oil: extracting	74
3.77	Engine oil: renewing oil filter	75
3.78	Engine oil: filling up	79
3.79	Engine oil: checking oil level and correcting if necessary	80
3.80	Spark plugs: renewing	81
3.81	Charging cable: checking that cable is present and complete	90
3.82	Charging system: checking that system is present and complete	91
3.83	Charging socket: checking for dirt and damage	91
3.84	Cooling system for high-voltage system: checking anti-freeze protection and coolant level, and correcting if necessary	91

3.85	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	95
3.86	Air filter: renewing filter element and cleaning housing	98
3.87	Dust and pollen filter: renewing	104
3.88	Fuel filter: renewing	105
3.89	Fuel filter: draining	106
3.90	Fuel tank: adding fuel additive	107
3.91	Reducing agent (AdBlue®): filling up tank completely	108
3.92	Vehicle doors: removing edge protection	112
3.93	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	112
3.94	Vehicle identification numbers: checking numbers match and are embossed properly	113
3.95	Vehicle: cleaning interior and exterior	113
3.96	Vehicle exterior: removing protective film, if present	113
3.97	Vehicle cover: checking position and correcting if necessary	113
3.98	Vehicle cover: removing according to manufacturer's instructions	114
3.99	Paintwork, trims, side windows and wiper blades: checking cleanliness	114
3.100	High-voltage battery: charging	114
3.101	High-voltage battery: checking state of charge (recommendation: approx. 80% when delivering to customer)	114
3.102	High-voltage battery on electric vehicles and hybrid vehicles: determining and recording state of charge (SOC)	114
3.103	High-voltage battery on electric vehicles and hybrid vehicles: charging to a state of charge (SOC) of 3/4 according to manufacturer's instructions	115
3.104	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	115
3.105	Vehicles parked outdoors: locking	115
3.106	Road test	115
3.107	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	116
3.108	Accessories: installing	116
3.109	"TQS – Documentation of the vehicle care" checklist: checking that list is present	117
3.110	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	117
3.111	Cleaning and care: checking that required measures have been carried out on time	117
3.112	Stock vehicle care management: deciding and recording date of next check	117
3.113	Front final drive: changing gear oil	117
3.114	Display instruments: setting time and date	117
3.115	Manual gearbox/automatic gearbox: selecting 1st gear/park	117
3.116	Dual clutch gearbox (S tronic): changing ATF	118
3.117	Dual clutch gearbox (S tronic): changing gear oil and renewing oil filter	118
3.118	All-wheel drive coupling: changing oil	118
3.119	Interior mirror: calibrating compass	118
3.120	Instrument cluster: resetting driver information system	118
3.121	Poly V-belt for ancillaries: renewing	118
3.122	Toothed belt for camshaft drive: renewing	118
3.123	Toothed belt for camshaft drive and tensioning roller: renewing	119
3.124	Exhaust emissions test	119
3.125	Diesel engines: performing exhaust emissions test - from EU6 onwards	136
4	Periodic technical inspection (PTI)	138