

Contents

00 - Technical data	1
1 Identification	1
1.1 PR number and type of brake system	1
2 Safety information	2
2.1 Safety precautions when working in the vicinity of high-voltage components	2
2.2 Safety precautions when working on the high-voltage system	2
2.3 Safety precautions when working on vehicles with start/stop system	3
2.4 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Identification plates	5
3.2 Use of impact wrenches	5
3.3 Rules for cleanliness	6
3.4 General repair instructions	6
3.5 Nuts, bolts	6
3.6 Contact corrosion	6
4 Technical data	8
4.1 Technical data for brakes	8
5 Brake test	10
5.1 General notes	10
5.2 Checking vehicles on roller dynamometer	10
5.3 Checking parking brake	11
5.4 Checking brake discs	11
6 Electrical components	18
6.1 Starting diagnosis	18
45 - Anti-lock brake system	20
1 Safety information	20
2 General notes	21
2.1 Notes for repair work on ABS	21
3 Overview of fitting locations	22
3.1 Overview of fitting locations - ABS/ESP	22
4 Control unit and hydraulic unit	27
4.1 Assembly overview - control unit and hydraulic unit	27
4.2 Removing and installing ABS control unit J104 / ABS hydraulic unit N55	33
4.3 Separating control unit from hydraulic unit	44
4.4 Attaching control unit to hydraulic unit	45
5 Sensors	47
5.1 Assembly overview - speed sensors on front axle	47
5.2 Assembly overview - speed sensors on rear axle	48
5.3 Removing and installing brake light switch	49
5.4 Removing and installing front wheel speed sensor G45 / G47	52
5.5 Removing and installing rear wheel speed sensor G44 / G46	52
5.6 Checking ABS sensor ring	53
46 - Brakes - mechanism	55
1 Safety information	55
2 Front brakes	56
2.1 Assembly overview - front brakes	56
2.2 Removing and installing brake pads	63
2.3 Removing and installing brake caliper	74
2.4 Renewing brake caliper	81



2.5	Removing and installing brake carrier	91
2.6	Removing and installing brake disc	92
2.7	Removing and installing splash plate	94
2.8	Removing and installing pad wear indicator wire	95
3	Rear brakes	98
3.1	Assembly overview - rear brakes	98
3.2	Removing and installing brake pads	101
3.3	Removing and installing brake caliper	107
3.4	Renewing brake caliper	109
3.5	Removing and installing brake carrier	113
3.6	Removing and installing brake disc	114
3.7	Removing and installing splash plate	114
4	Parking brake	116
4.1	Assembly overview - parking brake	116
4.2	Removing and installing parking brake motor V282 / V283	116
4.3	Releasing parking brake manually	118
5	Brake pedal	119
5.1	Assembly overview - brake pedal	119
5.2	Separating brake pedal from brake servo	122
5.3	Connecting brake pedal to brake servo	123
5.4	Removing and installing brake pedal	124
5.5	Removing and installing mounting bracket	126
47 - Brakes - hydraulics		130
1	Safety information	130
2	Front brake caliper	131
2.1	Assembly overview - front brake caliper	131
2.2	Removing and installing brake caliper piston	132
2.3	Renewing bearing bushes and guide pins	137
3	Rear brake caliper	138
3.1	Assembly overview - rear brake caliper	138
3.2	Removing and installing protective cap	138
3.3	Renewing bearing bushes and guide pins	141
4	Brake servo/brake master cylinder	142
4.1	Assembly overview - brake servo/brake master cylinder	142
4.2	Removing and installing brake servo	148
4.3	Removing and installing brake master cylinder	158
4.4	Removing and installing brake fluid reservoir	166
4.5	Removing and installing brake fluid level warning contact F34	172
5	Vacuum system	174
5.1	Assembly overview - electric vacuum pump	174
5.2	Assembly overview - vacuum pump	175
5.3	Checking non-return valve	178
5.4	Removing and installing non-return valve	178
5.5	Removing and installing vacuum sender G608	181
5.6	Checking vacuum system	182
5.7	Removing and installing electric vacuum pump	186
5.8	Removing and installing vacuum pump	186
6	Brake lines	190
6.1	Connection points	190
7	Hydraulic system	191
7.1	General notes on brake fluid	191
7.2	Bleeding hydraulic system	192
7.3	Bleeding hydraulic system (additional bleeding procedure)	195

7.4 Leak test 198