

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 Contact corrosion	4
2.3 Routing and attachment of lines and wiring	5
2.4 Identification plates	5
2.5 Use of impact wrenches	5
98 - Assist systems	7
1 Safety information	7
2 Fitting locations	8
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	8
2.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	9
2.3 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	10
3 Senders/sensors/control units	13
3.1 Removing and installing front parking aid sender G252/G253/G254/G255	13
3.2 Removing and installing rear parking aid sender G203/G204/G205/G206	14
3.3 Removing and installing front park assist steering sender G568/G569	16
3.4 Removing and installing rear park assist steering sender G716/G717	17
3.5 Removing and installing rear parking aid warning buzzer H15	18
3.6 Removing and installing front parking aid warning buzzer H22	18
3.7 Removing and installing adaptive cruise control unit J428	20
3.8 Removing and installing parking aid control unit J446	21
3.9 Removing and installing lane change assist control unit J769/J770	23
3.10 Removing and installing reversing camera system control unit J772	24
3.11 Removing and installing control unit for overhead view camera J928	24
3.12 Removing and installing lane change assist warning lamp in exterior mirror K233/K234	25
3.13 Removing and installing reversing camera R189	26
3.14 Assembly overview - front camera for driver assist systems	26
3.15 Removing and installing front camera for driver assist systems R242	28
3.16 Removing and installing front overhead view camera R243	33
3.17 Removing and installing right/left overhead view camera R244/R245	34
3.18 Removing and installing rear overhead view camera R246	35
4 Adaptive cruise control	36
4.1 Layout - adaptive cruise control	36
4.2 Adjusting adaptive cruise control	36
5 Parking aid/park assist steering/autonomous parking	42
5.1 Layout - parking aid/park assist steering/autonomous parking	42
6 Front camera for driver assist systems	43
6.1 Layout - front camera for driver assist systems	43
6.2 Calibrating front camera for driver assist systems	43
7 Reversing camera system	52
7.1 Layout - reversing camera system	52
7.2 Calibrating reversing camera system	52
8 Lane change assist	59
8.1 Layout - lane change assist	59



8.2	Calibrating lane change assist	59
9	Overhead view camera	68
9.1	Layout - overhead view camera	68
9.2	Calibrating overhead view camera	68