

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
1.5 Notes on use and safety for LED headlights and Audi laser lights	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
2.8 Cleaning engine	6
3 Battery	8
3.1 Battery - general notes	8
3.2 Battery types	8
27 - Starter, current supply, CCS	9
1 Safety information	9
2 Battery	10
2.1 Assembly overview - battery	10
2.2 Disconnecting and connecting battery	15
2.3 Removing and installing earth cable with battery monitor control unit J367	20
2.4 Removing and installing battery	23
2.5 Removing and installing battery tray	37
2.6 Removing and installing protective housing for battery, 48 V A6	38
2.7 Removing and installing battery fan 1 V457 (0K4)	39
2.8 Inspecting and classifying battery, 48 V A6	41
2.9 Charging battery	42
2.10 Removing and installing battery cut-off relay/battery isolation igniter	45
2.11 Removing and installing battery isolation igniter, 48 V N751	45
3 Jump-start connection point	46
3.1 Assembly overview - jump-start connection point	46
3.2 Removing and installing jump-start connection point	46
4 Voltage converter	48
4.1 Assembly overview - voltage converter	48
4.2 Removing and installing voltage converter (48 V/12 V) A7	48
5 Alternator	50
5.1 Assembly overview - alternator	50
5.2 Removing and installing alternator	53
5.3 Checking alternator	61
6 Starter	63
6.1 Assembly overview - starter	63
6.2 Removing and installing starter	65
7 Start/stop system	71
7.1 Overview of fitting locations - start/stop system	71
8 Adaptive cruise control	72
90 - Gauges, instruments	73



1	Safety information	73
2	Dash panel insert	74
2.1	Assembly overview - dash panel insert	74
2.2	Removing and installing dash panel insert with control unit in dash panel insert J285	76
3	Horn	78
3.1	Assembly overview - horn	78
3.2	Removing and installing treble horn H2 / bass horn H7	79
92	Windscreen wash/wipe system	80
1	Safety information	80
2	Windscreen wiper system	81
2.1	Overview of fitting locations - windscreen wiper system	81
2.2	Assembly overview - windscreen wiper system	84
2.3	Moving wipers to service position	88
2.4	Removing and installing wiper blade	89
2.5	Removing and installing wiper arms	89
2.6	Adjusting wiper arms	92
2.7	Removing and installing wiper motor V	94
2.8	Removing and installing rain and light sensor	95
3	Windscreen washer system	100
3.1	Assembly overview - windscreen washer system	100
3.2	Removing and installing washer fluid reservoir	104
3.3	Removing and installing windscreen washer fluid level sender	107
3.4	Removing and installing washer pump	108
3.5	Removing and installing washer jets	109
3.6	Adjusting washer jets	110
4	Rear window wiper system	111
4.1	Assembly overview - rear window wiper system	111
4.2	Removing and installing wiper blade	112
4.3	Removing and installing wiper arm	112
4.4	Adjusting wiper arm	113
4.5	Removing and installing rear window wiper motor V12	114
5	Rear window washer system	115
5.1	Assembly overview - rear window washer system	115
5.2	Removing and installing washer jet	116
5.3	Adjusting washer jet	116
6	Headlight washer system	117
6.1	Assembly overview - headlight washer system	117
6.2	Removing and installing headlight washer system pump V11	118
6.3	Removing and installing washer jets	119
7	Washer fluid hoses	120
7.1	Repairing washer fluid hoses	120
94	Lights, bulbs, switches - exterior	121
1	Safety information	121
2	Headlights	122
2.1	Assembly overview - headlight	122
2.2	Removing and installing headlights	127
2.3	Adjusting headlights	129
2.4	Removing and installing front turn signal bulb M5 / M7	140
2.5	Removing and installing LED module for daytime running light and side light L176 / L177	140
2.6	Removing and installing output module 1 for LED headlight A27 / A31	142
2.7	Removing and installing headlight fan V407 / V408	144
2.8	Removing and installing headlight range control motor V48 / V49	146

2.9	Installing repair kit for headlight housing	149
2.10	Adapting headlights for driving on the left side of the road	149
2.11	Adapting headlights for driving on the right side of the road	149
3	Lights in exterior mirror	150
3.1	Assembly overview - lights in exterior mirror	150
3.2	Removing and installing exterior mirror turn signal bulb L131 / L132	150
4	Tail light clusters	152
4.1	Assembly overview - tail light cluster on body	152
4.2	Assembly overview - tail light cluster on rear lid	153
4.3	Removing and installing tail light cluster	155
4.4	Removing and installing tail light cluster on rear lid	156
4.5	Removing and installing bulb carrier	157
4.6	Correcting installation position of tail light cluster	158
5	High-level brake light	161
5.1	Assembly overview - high-level brake light	161
5.2	Removing and installing high-level brake light bulb	161
6	Number plate light	163
6.1	Removing and installing number plate light X4 / X5	163
7	Entry and start authorisation	164
7.1	Overview of fitting locations - entry and start authorisation system	164
7.2	Overview of fitting locations - keyless entry system	166
7.3	Assembly overview - exterior door handle for keyless entry system	167
7.4	Removing and installing entry and start authorisation control unit J518	168
7.5	Removing and installing rear bumper aerial for entry and start system R136	170
7.6	Removing and installing luggage compartment aerial for entry and start system R137	170
7.7	Removing and installing interior aerial 1 for entry and start system R138	170
7.8	Removing and installing interior aerial 2 for entry and start system R139	171
7.9	Alcohol interlock	171
8	Steering column switch module	182
8.1	Assembly overview - steering column switch module	182
8.2	Removing and installing lock cylinder	185
8.3	Removing and installing ignition key withdrawal lock solenoid N376	185
8.4	Removing and installing ignition/starter switch	186
8.5	Removing and installing steering column switch module	188
8.6	Removing and installing steering lock housing	189
9	Parking aid	191
10	Park assist steering	192
11	Automatic headlight range control	193
11.1	Assembly overview - automatic headlight range control	193
11.2	Removing and installing headlight range control unit	194
96 - Lights, bulbs, switches - interior		196
1	Safety information	196
2	Lights	198
2.1	Overview of fitting locations - lights in dash panel	199
2.2	Overview of fitting locations - lights in front doors	200
2.3	Overview of fitting locations - lights in rear doors	202
2.4	Overview of fitting locations - background lighting in doors	204
2.5	Overview of fitting locations - lights in centre console	207
2.6	Overview of fitting locations - lights in luggage compartment	208
2.7	Overview of fitting locations - lights in roof trim	209
2.8	Removing and installing glove compartment light W6	210
2.9	Renewing bulb for glove compartment light W6	211
2.10	Removing and installing footwell light W9 / W10	211



2.11	Removing and installing central locking SAFELOCK function warning lamp K133	212
2.12	Removing and installing light for front interior door handle illumination	212
2.13	Removing and installing front entry light W92 / W93	213
2.14	Removing and installing light for rear interior door handle illumination	213
2.15	Removing and installing rear entry light W83 / W84	213
2.16	Removing and installing light 3 for dash panel contour lighting L245	214
2.17	Removing and installing front door background lighting bulb	214
2.18	Removing and installing light 2 for front door background lighting	215
2.19	Removing and installing rear door background lighting bulb	216
2.20	Removing and installing light 2 for rear door background lighting	217
2.21	Removing and installing light for cup holder background lighting	218
2.22	Removing and installing light for centre console background lighting	219
2.23	Removing and installing rear left footwell light W45 / rear right footwell light W46	221
2.24	Removing and installing luggage compartment light W3	221
2.25	Removing and installing surround lighting in rear lid W61 / W62	221
2.26	Removing and installing illuminated vanity mirror W20 / W14	222
3	Controls	224
3.1	Overview of fitting locations - controls in dash panel	225
3.2	Overview of fitting locations - controls in front doors	227
3.3	Overview of fitting locations - controls in rear doors	231
3.4	Overview of fitting locations - controls in centre console	232
3.5	Overview of fitting locations - controls in luggage compartment	233
3.6	Overview of fitting locations - controls in roof trim	234
3.7	Assembly overview - front roof module WX3	235
3.8	Removing and installing light switch E1	236
3.9	Removing and installing switches in centre console - centre switch module in dash panel EX22	237
3.10	Removing and installing glove compartment light switch E26	238
3.11	Removing and installing exterior mirror adjuster EX11	238
3.12	Removing and installing operating unit for window regulator in driver door EX36	239
3.13	Removing and installing window regulator switch in front passenger door EX27	239
3.14	Removing and installing interior locking button for central locking system E308 / E309	240
3.15	Removing and installing rear lid remote release button E233 / fuel tank flap release button E319	241
3.16	Removing and installing operating unit in rear door EX60 / EX61	241
3.17	Removing and installing rear interior locking button for central locking system E717 / E718	242
3.18	Removing and installing parking brake button EX12	242
3.19	Removing and installing entry and start authorisation button E408	243
3.20	Removing and installing towing bracket release button E754	243
3.21	Removing and installing rear lid handle release button E234	244
3.22	Removing and installing operating unit for rear lid control EX58	245
3.23	Removing and installing rear lid warning buzzer H32	245
3.24	Removing and installing sunroof button E325	246
3.25	Removing and installing front interior light/reading light	246
3.26	Dismantling and assembling front interior light/reading light	247
3.27	Removing and installing rear interior light/reading light	248
4	Anti-theft alarm system	250
4.1	Assembly overview - interior monitoring	250
4.2	Removing and installing alarm horn H12	250
4.3	Removing and installing anti-theft alarm sensor G578	251
5	Immobiliser	253
5.1	Removing and installing immobiliser reader coil	253
6	Lane change assist	254
7	Front camera for driver assist systems	255

8	Cigarette lighter, socket	256
8.1	Assembly overview - cigarette lighter, 12 V socket	256
8.2	Removing and installing cigarette lighter U1	256
8.3	Removing and installing 12 V socket U5	258
8.4	Removing and installing 12 V socket 2 U18	260
8.5	Renewing 12 V socket 2 U18	260
8.6	Removing and installing cigarette lighter/socket illumination bulb	262
97	- Wiring	263
1	Safety information	263
2	Relay carriers, fuse carriers, electronics boxes	264
2.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	264
2.2	Removing and installing electronics box	271
2.3	Removing and installing fuse holder B SB in electronics box	272
2.4	Removing and installing fuse holder A SA	274
2.5	Removing and installing fuse holder C SC under dash panel (left-side)	274
2.6	Removing and installing battery fuse holder	275
2.7	Removing and installing bracket for control unit	276
2.8	Removing and installing wiring junction TV1	277
2.9	Removing and installing main fuse carrier on battery	277
3	Control units	280
3.1	Overview of fitting locations - control units	280
3.2	Assembly overview - data bus diagnostic interface	283
3.3	Removing and installing onboard supply control unit J519	285
3.4	Removing and installing garage door operation control unit	288
3.5	Removing and installing data bus diagnostic interface J533	289
4	Connectors	292
4.1	Overview of fitting locations - connectors	292
4.2	Unplugging left door coupling point	292
4.3	Removing and installing coupling station at left A-pillar	293
4.4	Removing and installing coupling station at right A-pillar	293
4.5	Repairing electrical wiring harnesses and electrical connectors	294
5	Releasing and dismantling connector housings	295
6	Cleaning contact surfaces	296
7	Repairing aerial wires	297
8	Fibre optic cables	298
9	Vehicle diagnostic, testing and information systems	299