

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	5
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
91 - Radio, telephone, navigation	7
1 Safety information	7
2 Infotainment system	8
2.1 Layout - infotainment system	8
2.2 Overview of fitting locations - infotainment system	15
2.3 Removing and installing infotainment system display	16
2.4 Removing and installing control unit 1 for information electronics J794	17
2.5 Removing and installing driver side volume regulator E67	18
3 Sound system	20
3.1 Layout - sound system	20
3.2 Overview of fitting locations - sound system	26
3.3 Removing and installing digital sound package control unit/amplifier	29
3.4 Removing and installing bracket for digital sound package control unit J525	32
3.5 Removing and installing rear treble loudspeakers R14 / R16	32
3.6 Removing and installing front treble loudspeakers R20 / R22	33
3.7 Removing and installing front mid-range loudspeakers	33
3.8 Removing and installing rear bass loudspeakers R15 / R17	34
3.9 Removing and installing front bass loudspeakers R21 / R23	34
3.10 Removing and installing subwoofer R211	35
3.11 Removing and installing effect loudspeakers	36
3.12 Removing and installing centre loudspeaker R208	36
3.13 Removing and installing centre loudspeaker 2 R219	37
3.14 Removing and installing internal microphone R74	38
4 Aerial systems	39
4.1 Layout - aerial systems	39
4.2 Overview of fitting locations - aerial systems	42
4.3 Removing and installing aerial amplifier	48
4.4 Removing and installing window aerial suppression filter C18	49
4.5 Removing and installing roof aerial	50
4.6 Removing and installing GPS aerial	50
4.7 Removing and installing LTE aerials	51
4.8 Removing and installing satellite tuner aerial R172	53
4.9 Removing and installing digital radio aerial R183	53
4.10 Removing and installing emergency call module aerials	53
4.11 Removing and installing bumper aerials	53
4.12 Removing and installing internal vehicle communication aerial R364	55
4.13 Removing and installing internal vehicle communication aerial 2 R365	56



4.14	Removing and installing traffic data aerial	56
4.15	Removing and installing dedicated short-range communication aerial R269	58
5	Radio	59
5.1	Layout - radio	59
5.2	Overview of fitting locations - radio	59
5.3	Removing and installing radio	59
5.4	Removing and installing digital radio/satellite radio	59
6	Telephone system	60
6.1	Layout - telephone	60
6.2	Overview of fitting locations - telephone system	70
6.3	Assembly overview - microphone unit	73
6.4	Removing and installing front microphones	74
6.5	Removing and installing aerial amplifier for mobile telephone R86	75
6.6	Removing and installing telephone bracket	76
7	Navigation system	78
7.1	Layout - navigation system	78
7.2	Overview of fitting locations - navigation system	78
7.3	Removing and installing control unit for navigation system	78
7.4	Removing and installing chip card reader control unit	78
8	TV system	80
8.1	Layout - TV system	80
8.2	Overview of fitting locations - TV system	80
8.3	Removing and installing TV tuner R78	81
8.4	Removing and installing bracket for TV tuner R78	82
9	Reversing camera system	84
10	Multifunction steering wheel	85
10.1	Layout - multifunction steering wheel	85
10.2	Assembly overview - multi-function steering wheel	85
10.3	Removing and installing multifunction buttons in steering wheel E441 / E440	86
10.4	Removing and installing Tiptronic switches in steering wheel	88
11	Connection for external multimedia devices	89
11.1	Layout - external multimedia devices	89
11.2	Removing and installing connection for external multimedia devices	90
11.3	Removing and installing USB charging socket 2 U38	91
11.4	Removing and installing control unit with Android operating system J1243	91
12	Overhead view camera	93
13	Online services	94
13.1	Layout - online services	94
13.2	Overview of fitting locations - mobile online services	97
13.3	Removing and installing emergency call module control unit and communication unit J949	99
13.4	Removing and installing emergency battery, telematics A16	100
13.5	Loudspeaker for emergency call module R335	101