

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working in the vicinity of high-voltage components	1
1.2 Safety precautions when working on the high-voltage system	1
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
1.5 Safety precautions when working on the cooling system	3
2 Repair instructions	4
2.1 Routing and attachment of pipes, hoses and wiring	4
2.2 Contact corrosion	4
2.3 Preparations for installation of self-adhesive components	4
2.4 General information on using adhesives	6
2.5 Secure threaded connections	7
2.6 Identification plates	7
2.7 Use of impact wrenches	7
50 - Body - front	9
1 Safety information	9
2 Lock carrier	10
2.1 Assembly overview - lock carrier	10
2.2 Removing and installing lock carrier	12
2.3 Removing and installing headlight mounting	14
2.4 Removing and installing air duct for radiator	15
3 Wing	19
3.1 Assembly overview - wing	19
3.2 Removing and installing wing	21
3.3 Removing and installing wing panel brace	23
3.4 Removing and installing wing bracket	23
3.5 Removing and installing cover for wing	24
3.6 Removing and installing closure plate	24
4 Bulkhead	26
4.1 Assembly overview - bulkhead	26
4.2 Assembly overview - plenum chamber cover	26
4.3 Removing and installing plenum chamber bulkhead	27
4.4 Removing and installing plenum chamber cover	29
55 - Bonnet, rear lid	31
1 Safety information	31
2 Bonnet	32
2.1 Assembly overview - bonnet	32
2.2 Overview of fitting locations - Bowden cable	34
2.3 Assembly overview - Bowden cable	35
2.4 Removing and installing bonnet	39
2.5 Adjusting bonnet	40
2.6 Removing and installing hinges	44
2.7 Removing and installing striker	44
2.8 Removing and installing gas strut	45
2.9 Releasing gas from gas strut	46
2.10 Removing and installing insulation	46
2.11 Removing and installing impact guard	46
2.12 Removing and installing Bowden cable	47
2.13 Removing and installing bonnet lock	53



2.14	Removing and installing operating lever for bonnet lock	54
2.15	Removing and installing operating lever for arrester	55
2.16	Removing and installing mounting bracket for operating lever for bonnet lock	55
2.17	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	56
3	Rear lid	57
3.1	Assembly overview - rear lid	57
3.2	Assembly overview - rear lid power opening	59
3.3	Removing and installing rear lid	61
3.4	Adjusting rear lid	62
3.5	Removing and installing hinges	65
3.6	Removing and installing mounting for gas strut/motor for rear lid	65
3.7	Removing and installing rear lid seal	66
3.8	Removing and installing adjusting buffer	67
3.9	Removing and installing stop for adjusting buffer	67
3.10	Removing and installing gas strut	67
3.11	Releasing gas from gas strut	68
3.12	Removing and installing rear lid lock	68
3.13	Removing and installing striker	69
3.14	Removing and installing power latching for rear lid VX16	69
3.15	Removing and installing Bowden cable for power latching system	70
3.16	Removing and installing drive unit for rear lid VX69 / VX77	71
3.17	Adapting rear lid drive unit VX69 / VX77	72
3.18	Preparing rear lid drive unit VX69 / rear lid drive unit 2 VX77 for disposal	72
3.19	Removing and installing rear lid control unit J605	73
3.20	Removing and installing rear lid power opening control unit J938	74
3.21	Removing and installing rear lid power opening sender G750 / G760	74
4	Tank flap unit	76
4.1	Assembly overview - tank flap unit	76
4.2	Removing and installing tank flap unit	76
4.3	Removing and installing trim panel for tank flap	78
4.4	Removing and installing drain hose for tank flap unit	78
4.5	Removing and installing manual release cable	79
5	Charging flap unit	80
5.1	Assembly overview - charging flap unit	80
5.2	Removing and installing charging flap unit	80
5.3	Removing and installing charging flap unit trim	81
5.4	Removing and installing LED module for charging socket 1 L263	81
57	Front doors, door components, central locking	83
1	Safety information	83
2	Door	84
2.1	Assembly overview - door	84
2.2	Assembly overview - door seals	87
2.3	Removing and installing door	88
2.4	Adjusting door	89
2.5	Removing and installing door arrester	95
2.6	Removing and installing impact bar	96
2.7	Removing and installing inner door seal	97
2.8	Removing and installing outer door seal	98
3	Door components	101
3.1	Assembly overview - window regulator	101
3.2	Assembly overview - door handle and door lock	102
3.3	Assembly overview - window guides and window slot seals	104
3.4	Removing and installing window regulator	105

3.5	Removing and installing window regulator motor	107
3.6	Removing and installing door handle	107
3.7	Removing and installing mounting bracket	108
3.8	Removing and installing operating cable for exterior door handle	110
3.9	Removing and installing lock cylinder	111
3.10	Removing and installing housing	111
3.11	Removing and installing door lock	112
3.12	Removing and installing cover for door lock	113
3.13	Removing and installing striker	114
3.14	Removing and installing operating cable for interior door handle	114
3.15	Removing and installing inner door cover	115
3.16	Removing and installing window guide	116
3.17	Removing and installing inner window slot seal	117
3.18	Removing and installing outer window slot seal	117
4	Central locking system	119
4.1	Overview of fitting locations - central locking system	119
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	123
4.3	Removing and installing rear left door control unit J926 and rear right door control unit J927	123
4.4	Removing and installing interface control unit for vehicle location system J843	124
4.5	Removing and installing tank filler flap locking motor V155	124
4.6	Removing and installing actuator for high-voltage charging flap lock 1 F496	125
58	Rear doors, door components	126
1	Safety information	126
2	Door	127
2.1	Assembly overview - door	127
2.2	Assembly overview - door seals	129
2.3	Removing and installing door	130
2.4	Adjusting door	131
2.5	Removing and installing door arrester	136
2.6	Removing and installing inner door seal	137
2.7	Removing and installing outer door seal	138
2.8	Removing and installing side member seal	140
3	Door components	141
3.1	Assembly overview - window regulator	141
3.2	Assembly overview - door handle and door lock	142
3.3	Assembly overview - window guides and window slot seals	143
3.4	Removing and installing window regulator	144
3.5	Removing and installing window regulator motor	145
3.6	Removing and installing door handle	146
3.7	Removing and installing mounting bracket	147
3.8	Removing and installing operating cable for exterior door handle	148
3.9	Removing and installing housing	149
3.10	Removing and installing door lock	150
3.11	Removing and installing striker	151
3.12	Removing and installing operating cable for interior door handle	151
3.13	Removing and installing inner door cover	151
3.14	Removing and installing window guide	152
3.15	Removing and installing guide rail for door window	153
3.16	Removing and installing inner window slot seal	154
3.17	Removing and installing outer window slot seal	155
60	Sunroof	157
1	Safety information	157

2	Repair instructions	158
2.1	Minimum drying times for bonded sunroofs	158
2.2	Tools and materials required for installation and removal	158
2.3	Preparing new glass trim for installation	161
2.4	Preparing undamaged sunroof frame for installation	162
2.5	Preparing a new sunroof frame for installation	163
2.6	Cleaning off adhesive sealant	164
3	Sliding sunroof	166
3.1	Assembly overview - sliding sunroof	166
3.2	Assembly overview - slide and tilt mechanism	170
3.3	Assembly overview - adhesive beads on sliding sunroof	171
3.4	Assembly overview - sunroof roller blind	172
3.5	Assembly overview - wind deflector	174
3.6	Removing and installing sliding sunroof frame	176
3.7	Removing and installing glass trim	182
3.8	Removing and installing glass panel	186
3.9	Adjusting glass panel	189
3.10	Removing and installing sliding sunroof adjustment control unit J245	193
3.11	Adapting sliding sunroof adjustment control unit J245	194
3.12	Removing and installing sliding sunroof motor V1	194
3.13	Adapting sliding sunroof motor V1	196
3.14	Removing and installing side trim	196
3.15	Removing and installing slide and tilt mechanism	197
3.16	Removing and installing cable for slide and tilt mechanism	199
3.17	Removing and installing sliding sunroof seals	200
3.18	Removing and installing sunroof roller blind	204
3.19	Removing and installing cables for sunroof roller blind	209
3.20	Removing and installing sunroof roller blind motor V260	210
3.21	Adapting sunroof roller blind motor V260	211
3.22	Removing and installing wind deflector	212
3.23	Emergency opening	214
4	Water drain hoses	215
4.1	Assembly overview - water drain hoses	215
4.2	Cleaning water drain hoses	217
4.3	Removing and installing water drain hoses	218
63	Bumpers	221
1	Safety information	221
2	Front bumper	222
2.1	Assembly overview - bumper cover	222
2.2	Assembly overview - bumper carrier	228
2.3	Removing and installing bumper cover	230
2.4	Removing and installing side panel of bumper cover	233
2.5	Removing and installing front spoiler	234
2.6	Adjusting bumper cover	235
2.7	Removing and installing bumper cover mounting	236
2.8	Removing and installing cover for headlight washer jet	237
2.9	Removing and installing side air intake grille	237
2.10	Removing and installing trim strip for side air intake grille	239
2.11	Removing and installing centre air intake grille	241
2.12	Removing and installing connecting piece for side panel of bumper cover	242
2.13	Removing and installing closure plate for side panel of bumper cover	243
2.14	Removing and installing bumper cover trim	244
2.15	Removing and installing trim strip (centre) for bumper cover	245
2.16	Removing and installing underbody guard	245

2.17	Removing and installing closure plate for bumper cover	247
2.18	Removing and installing lock carrier cover	247
2.19	Removing and installing bumper carrier	248
2.20	Removing and installing bracket for ambient temperature sensor G17	248
3	Rear bumper	250
3.1	Assembly overview - bumper cover	250
3.2	Assembly overview - bumper carrier	264
3.3	Removing and installing bumper cover	265
3.4	Removing and installing upper section of bumper cover	268
3.5	Removing and installing lower section of bumper cover	269
3.6	Removing and installing trim for lower section of bumper cover - Q3 Lines	271
3.7	Removing and installing base plate for bumper cover	271
3.8	Removing and installing reinforcement for bumper cover	273
3.9	Removing and installing bumper cover mounting	274
3.10	Removing and installing trim strip for bumper cover	275
3.11	Removing and installing bumper cover trim	278
3.12	Removing and installing tailpipe trim	280
3.13	Removing and installing reflector	281
3.14	Removing and installing bumper carrier	284
64	- Glazing	286
1	Safety information	286
2	Repair instructions	287
2.1	Minimum drying times for bonded windows	287
2.2	Repairing windows	287
2.3	Tools and materials required for installation and removal	288
2.4	Preparing undamaged windows for installation	291
2.5	Preparing new windows for installation	292
2.6	Preparing body flange for installation	293
2.7	Cleaning off adhesive sealant	294
3	Windscreen	295
3.1	Assembly overview - windscreen	295
3.2	Removing and installing windscreen	296
4	Rear window	301
4.1	Assembly overview - rear window	301
4.2	Removing and installing rear window	301
5	Side windows	307
5.1	Assembly overview - rear side window	307
5.2	Removing and installing rear side window	307
6	Door windows	311
6.1	Assembly overview - front door window	311
6.2	Assembly overview - rear door window	311
6.3	Removing and installing front door window	312
6.4	Removing and installing rear door window	314
66	- Exterior equipment	317
1	Safety information	317
2	Radiator grille/front trim	318
2.1	Assembly overview - radiator grille	318
2.2	Removing and installing radiator grille	321
2.3	Preparing new radiator grille for installation	323
2.4	Removing and installing reinforcement strut	323
2.5	Removing and installing number plate carrier	324
2.6	Removing and installing cover for moulded foam insert	324



3	Spoilers	326
3.1	Assembly overview - spoilers	326
3.2	Removing and installing spoiler	327
3.3	Removing and installing spoiler (side)	330
4	Strips/trim panels/extensions	332
4.1	Assembly overview - trim strips	332
4.2	Assembly overview - covers	333
4.3	Assembly overview - sill panel trim	334
4.4	Assembly overview - water deflector strip	335
4.5	Assembly overview - trim panel for A-pillar	336
4.6	Assembly overview - trim panel for B-pillar	337
4.7	Assembly overview - trim panel for C-pillar	338
4.8	Assembly overview - wheel arch covers	339
4.9	Removing and installing trim strip	341
4.10	Removing and installing cover	342
4.11	Removing and installing sill panel trim	345
4.12	Removing and installing water deflector strip	346
4.13	Removing and installing trim panel for A-pillar	347
4.14	Removing and installing trim panel for B-pillar on door	348
4.15	Removing and installing trim panel for C-pillar on door	349
4.16	Removing and installing wheel arch covers	350
5	Noise insulation	352
5.1	Assembly overview - noise insulation	352
6	Underbody cladding	353
6.1	Assembly overview - underbody cladding	353
6.2	Assembly overview - underbody struts	357
6.3	Removing and installing trim for side member trim	358
6.4	Removing and installing tunnel cross-piece	359
6.5	Removing and installing protective bar for high-voltage battery	360
7	Roof strips/roof rails	361
7.1	Assembly overview - roof rail	361
7.2	Removing and installing roof rail	363
7.3	Removing and installing compensation element	364
8	Exterior mirror	366
8.1	Assembly overview - exterior mirror	366
8.2	Removing and installing exterior mirror	368
8.3	Removing and installing mirror glass	369
8.4	Removing and installing mirror adjustment unit	370
8.5	Removing and installing mirror cover	370
8.6	Removing and installing mirror trim	371
9	Wheel housing liner	372
9.1	Assembly overview - front wheel housing liner	372
9.2	Assembly overview - rear wheel housing liner	372
10	Lettering and badges	374
10.1	Assembly overview - lettering and badges	374
10.2	Dimensions - lettering and badges at rear	375
10.3	Dimensions - lettering and badges on sides	376
10.4	General notes on renewing lettering and badges	377
10.5	Removing and installing lettering and badges for radiator grille	378
11	Towing bracket	384
11.1	Assembly overview - towing bracket	384
11.2	Removing and installing trailer detector control unit J345	384
12	Heat shields	386
12.1	Overview of fitting locations - heat shields	386

12.2	Removing and installing heat shield for propshaft	386
12.3	Removing and installing heat shield for tunnel	387