

Contents

00 - Technical data	1
1 Safety information	1
1.1 Checking child seat anchors following an accident	1
2 Repair instructions	2
2.1 Routing and attachment of pipes, hoses and wiring	2
2.2 Contact corrosion	2
2.3 Secure threaded connections	2
2.4 Identification plates	2
2.5 Use of impact wrenches	3
72 - Seat frames	4
1 Front seats	5
1.1 Assembly overview - front seat	5
1.2 Assembly overview - front seat backrest	6
1.3 Assembly overview - seat pan	8
1.4 Assembly overview - head restraint	15
1.5 Overview of fitting locations - electrical and electronic components	15
1.6 Removing and installing front seat	20
1.7 Attaching front seat to seat repair stand	26
1.8 Removing and installing front seat backrest	27
1.9 Removing and installing backrest cover panel	28
1.10 Removing and installing spring mat	30
1.11 Removing and installing backrest adjuster	31
1.12 Removing and installing seat frame trim	35
1.13 Removing and installing seat rail covers	39
1.14 Removing and installing upper seat pan frame	40
1.15 Removing and installing seat longitudinal adjuster	41
1.16 Removing and installing seat height adjustment handle	44
1.17 Removing and installing seat height adjuster	45
1.18 Removing and installing seat rake adjuster	46
1.19 Removing and installing trim for seat depth adjuster	47
1.20 Removing and installing seat depth adjuster	49
1.21 Removing and installing retainer for Owner's Manual	51
1.22 Removing and installing mounting for fire extinguisher	51
1.23 Removing and installing storage compartment	52
1.24 Removing and installing head restraint	52
1.25 Removing and installing head restraint guide	53
1.26 Connecting and disconnecting wiring	54
1.27 Removing and installing seat adjustment operating unit E470 / E471	54
1.28 Removing and installing lumbar support adjustment switch	55
1.29 Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130	55
1.30 Removing and installing control unit for seat functions	56
1.31 Removing and installing wire mat	57
2 Rear seats	59
2.1 Assembly overview - bench seat/individual seats	59
2.2 Assembly overview - rear seat backrest	61
2.3 Assembly overview - centre armrest	64
2.4 Assembly overview - head restraint and head restraint guide	66
2.5 Assembly overview - locking mechanism	68
2.6 Removing and installing bench seat/individual seats	69
2.7 Removing and installing rear seat backrest	73
2.8 Removing and installing outer bearing sleeve	74
2.9 Removing and installing inner pivot pin	74



2.10	Removing and installing backrest with load-through hatch	75
2.11	Removing and installing loop for folding backrest	76
2.12	Removing and installing trim for backrest with load-through hatch	76
2.13	Removing and installing locking mechanism for rear seat backrest	77
2.14	Removing and installing trim for locking mechanism	79
2.15	Removing and installing cover for retaining clip	81
2.16	Removing and installing seat frame trim	82
2.17	Removing and installing seat longitudinal adjustment lever	84
2.18	Removing and installing locking element	84
2.19	Removing and installing centre armrest	85
2.20	Removing and installing trim for centre armrest	86
2.21	Removing and installing cup holder	87
2.22	Removing and installing head restraint	87
2.23	Removing and installing head restraint guide	88
3	Front seat pneumatic system	91
3.1	Connection diagram - pneumatic system	91
3.2	Assembly overview - pneumatic system	91
3.3	Checking pneumatic system	93
3.4	Severing and connecting pneumatic lines	96
3.5	Servicing pneumatic lines	97
3.6	Removing and installing air cushion for lumbar support	97
3.7	Removing and installing lumbar support	98
3.8	Removing and installing compressor for multicontour seat V439 / V440	99
74	Seat - padding, covers	101
1	Covers and padding on front seats	101
1.1	Assembly overview - seat pan cover and padding	101
1.2	Assembly overview - backrest cover and padding	103
1.3	Assembly overview - seat heater elements	108
1.4	Removing and installing seat pan cover and padding	110
1.5	Removing and installing padding for seat depth adjuster	113
1.6	Separating seat pan cover and padding	114
1.7	Removing and installing backrest cover and padding	117
1.8	Separating backrest cover and padding	122
1.9	Removing and installing seat heater element Z6 / Z8	123
1.10	Removing and installing seat depth adjuster heater element	124
1.11	Removing and installing backrest heater element Z7 / Z9	124
2	Covers and padding on rear seats	125
2.1	Assembly overview - cover and padding	125
2.2	Removing and installing cover and padding	128
2.3	Removing and installing side padding	136
2.4	Removing and installing intermediate padding - backrest with load-through hatch	137
2.5	Detaching cover from padding	139