

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of bevel box	3
2 Technical data	5
2.1 Allocation of gearbox to engine	5
2.2 Capacities	9
2.3 Calculating gear ratios	10
3 Overview - power transmission	11
3.1 Overview - power transmission, front-wheel drive	11
3.2 Overview - power transmission, all-wheel drive	11
4 Safety information	13
4.1 Safety precautions when working on vehicles with start/stop system	13
4.2 Safety precautions when using testers and measuring instruments during a road test	13
5 Repair instructions	14
5.1 Use of impact wrenches	14
5.2 General repair instructions	14
5.3 Contact corrosion	18
6 Electrical components	19
6.1 Overview of fitting locations - electrical components	19
30 - Clutch	20
1 Clutch mechanism	20
1.1 Assembly overview - pedal cluster	20
1.2 Assembly overview - clutch hydraulics	22
1.3 Assembly overview - clutch release mechanism	27
1.4 Function check for clutch master cylinder and slave cylinder	29
1.5 Removing and installing bearing bush	30
1.6 Removing and installing clutch position sender G476	31
1.7 Removing and installing return spring	32
1.8 Removing and installing over-centre spring	33
1.9 Removing and installing clutch pedal	35
1.10 Removing and installing mounting bracket	37
1.11 Removing and installing bleeder	40
1.12 Removing and installing clutch master cylinder	42
1.13 Removing and installing lines for clutch mechanism	43
1.14 Removing and installing clutch slave cylinder together with release bearing	44
1.15 Bleeding clutch mechanism	46
2 Clutch	48
2.1 Identifying different makes of clutch	48
2.2 Assembly overview - clutch	50
2.3 Removing and installing clutch	52
34 - Controls, housing	64
1 Selector mechanism	64
1.1 Overview - selector mechanism	64
1.2 Assembly overview - gear knob and cover	65
1.3 Assembly overview - selector mechanism	65
1.4 Assembly overview - selector cables	68
1.5 Removing and installing gear knob	74
1.6 Removing and installing selector mechanism	76
1.7 Dismantling and assembling selector mechanism	81



1.8	Removing and installing gear selector cable and gate selector cable	87
1.9	Adjusting selector mechanism	89
1.10	Checking selector mechanism	92
1.11	Renewing selector shaft oil seal	92
2	Removing and installing gearbox	96
2.1	Removing gearbox	96
2.2	Installing gearbox	126
2.3	Tightening torques for gearbox	130
3	Assembly mountings	132
3.1	Assembly overview - assembly mountings	132
4	Transporting gearbox	135
5	Gear oil	137
5.1	Checking gear oil level	137
6	Bevel box	142
6.1	Assembly overview - bevel box	142
6.2	Removing bevel box	144
6.3	Installing bevel box	152
7	Dismantling and assembling gearbox	154
7.1	Dismantling and assembling gearbox	154
7.2	Assembly overview - selector unit	154
7.3	Removing and installing selector unit with gearbox installed	155
35	Gears, shafts	158
1	Input shaft	158
1.1	Dismantling and assembling input shaft	158
1.2	Renewing input shaft oil seal	158
2	Output shaft	160
2.1	Dismantling and assembling output shaft	160
39	Final drive - differential	161
1	Oil seals	161
1.1	Overview of fitting locations - oil seals	161
1.2	Renewing left oil seal	163
1.3	Renewing right oil seal	164
2	Differential	170
2.1	Assembly overview - differential	170
2.2	Removing and installing left flange shaft	171
2.3	Removing and installing right flange shaft	174
2.4	Dismantling and assembling differential	178
3	Components of bevel box	179
4	Gear oil	180
4.1	Checking gear oil level	180
4.2	Draining and filling gear oil	183