

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety regulations	1
1.2 Safety precautions when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting and towing	2
<b>2 Identification</b>	<b>3</b>
2.1 Identification of gearbox	3
2.2 Identification of bevel box	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 General notes	5
3.2 Safety functions of gearbox control unit	6
3.3 Rules for cleanliness	6
3.4 General repair instructions	7
3.5 Contact corrosion	8
<b>4 Technical data</b>	<b>9</b>
4.1 Capacities	9
<b>30 - Clutch</b>	<b>10</b>
<b>1 Clutch</b>	<b>10</b>
1.1 Assembly overview - dual clutch	10
1.2 Removing dual clutch	10
1.3 Installing dual clutch	14
<b>34 - Controls, housing</b>	<b>27</b>
<b>1 Selector mechanism</b>	<b>27</b>
1.1 Assembly overview - selector lever handle	27
1.2 Assembly overview - selector mechanism	31
1.3 Manual release from position P	34
1.4 Removing and installing selector lever handle	39
1.5 Bringing interlock button in handle into installation position	43
1.6 Removing and installing selector mechanism	45
1.7 Checking selector mechanism	47
1.8 Checking and adjusting selector lever cable	50
1.9 Renewing selector shaft oil seal	52
<b>2 Removing and installing gearbox</b>	<b>56</b>
2.1 Tightening torques for gearbox	56
2.2 Removing gearbox	57
2.3 Installing gearbox	83
<b>3 Transporting gearbox</b>	<b>87</b>
<b>4 Securing to engine and gearbox support</b>	<b>89</b>
<b>5 Assembly mountings</b>	<b>91</b>
5.1 Assembly overview - assembly mountings	91
<b>6 Bevel box</b>	<b>92</b>
6.1 Assembly overview - bevel box	92
6.2 Removing bevel box	92
6.3 Installing bevel box	99
6.4 Tightening torques for bevel box	99
<b>7 Mechatronic unit</b>	<b>101</b>
7.1 Assembly overview - mechatronic unit	101
7.2 Removing and installing oil pan	104



7.3	Removing and installing mechatronic unit	107
7.4	Renewing securing clip on vehicle connector	110
7.5	Removing and installing gear oil pump	112
<b>8</b>	<b>Gear oil circuit</b>	<b>115</b>
8.1	Assembly overview - gear oil circuit	115
8.2	Removing and installing gear oil cooler	115
8.3	Removing and installing gear oil filter	119
<b>9</b>	<b>Gear oil</b>	<b>122</b>
9.1	Tools for changing gear oil	122
9.2	Checking gear oil level	123
9.3	Draining and filling gear oil	127
<b>35</b>	<b>Gears, shafts</b>	<b>130</b>
1	Dismantling and assembling gears and shafts	130
<b>39</b>	<b>Final drive - differential</b>	<b>131</b>
1	<b>Gearbox control system</b>	<b>131</b>
1.1	Overview of fitting locations - gearbox control system	131
<b>2</b>	<b>Oil seals</b>	<b>132</b>
2.1	Overview of fitting locations - oil seals	132
2.2	Renewing left oil seal	133
2.3	Renewing right oil seal	135
<b>3</b>	<b>Differential</b>	<b>139</b>
3.1	Assembly overview - differential	139
3.2	Removing and installing left flange shaft	140
3.3	Removing and installing right flange shaft	142
<b>4</b>	<b>Components of bevel box</b>	<b>147</b>
4.1	Assembly overview - components of bevel box	147
4.2	Renewing oil seals for bevel box	149
<b>5</b>	<b>Gear oil</b>	<b>166</b>
5.1	Tools for changing gear oil	166
5.2	Checking gear oil level	167
5.3	Draining and filling gear oil	169