

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of bevel box	2
2 Technical data	3
2.1 Capacities	3
3 Safety information	4
3.1 General safety regulations	4
3.2 Safety precautions when working on vehicles with start/stop system	4
3.3 Safety precautions when using testers and measuring instruments during a road test	5
3.4 Safety precautions when tow-starting and towing	5
4 Repair instructions	6
4.1 General notes	6
4.2 Rules for cleanliness	6
4.3 General repair instructions	6
4.4 Contact corrosion	8
30 - Clutch	9
1 Clutch	9
1.1 Assembly overview - dual clutch	9
1.2 Removing and installing clutch end cover	9
1.3 Removing dual clutch	13
1.4 Installing dual clutch	16
34 - Controls, housing	24
1 Mechatronic unit	24
1.1 Assembly overview - mechatronic unit	24
1.2 Removing and installing oil pan	25
1.3 Removing and installing mechatronic unit	27
2 Selector mechanism	30
2.1 Assembly overview - selector lever handle	30
2.2 Assembly overview - selector mechanism	34
2.3 Manual release from position P	36
2.4 Removing and installing selector lever handle	38
2.5 Bringing interlock button in handle into installation position	41
2.6 Removing and installing selector mechanism	43
2.7 Checking selector mechanism	45
2.8 Checking and adjusting selector lever cable	48
2.9 Renewing seal for parking lock shaft	49
3 Removing and installing gearbox	53
3.1 Removing gearbox	53
3.2 Installing gearbox	76
3.3 Tightening torques for gearbox	80
4 Bevel box	84
4.1 Assembly overview - bevel box	84
4.2 Removing bevel box	84
4.3 Installing bevel box	88
4.4 Tightening torques for bevel box	89
5 Assembly mountings	91
5.1 Assembly overview - assembly mountings	91
6 Transporting gearbox	93



7	Securing to engine and gearbox support	95
8	Gear oil circuit	96
8.1	Assembly overview - gear oil circuit	96
8.2	Removing and installing gear oil cooler	96
8.3	Removing and installing gear oil filter	99
8.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	100
9	Gear oil	102
9.1	Overview - drain and inspection plugs	102
9.2	Tools for changing gear oil	102
9.3	Checking gear oil level	104
9.4	Draining and filling gear oil	107
35	- Gears, shafts	110
1	Dismantling and assembling gears and shafts	110
39	- Final drive - differential	111
1	Oil seals	111
1.1	Overview of fitting locations - oil seals	111
1.2	Renewing left oil seal	111
1.3	Renewing right oil seal	114
2	Differential	118
2.1	Removing and installing right flange shaft	118
3	Gear oil	120
3.1	Checking gear oil level	120
3.2	Draining and filling gear oil	120
4	Components of bevel box	125
4.1	Assembly overview - components of bevel box	125
4.2	Renewing oil seals for bevel box	131
4.3	Renewing right oil seal	131
4.4	Renewing left oil seal	132
4.5	Renewing needle bearings for right flange shaft	134
4.6	Removing and installing output flange	135
5	Gearbox control system	156
5.1	Overview of fitting locations - gearbox control system	156