

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>4</b>
2.1 Safety precautions when working on the fuel supply system	4
2.2 Safety precautions when working on vehicles with natural gas systems	4
2.3 Safety precautions when working on vehicles with start/stop system	5
2.4 Safety precautions when using testers and measuring instruments during a road test	5
2.5 Safety precautions when working on the cooling system	6
2.6 Safety precautions when working on the exhaust system	6
2.7 Safety precautions when working on the ignition system	7
<b>3 Repair instructions</b>	<b>8</b>
3.1 Rules for cleanliness	8
3.2 General notes	8
3.3 General repair instructions	9
3.4 Foreign material in engine	9
3.5 Cleaning engine	9
3.6 Contact corrosion	10
3.7 Routing and attachment of pipes, hoses and wiring	10
3.8 Nuts, bolts	10
3.9 Identification plates	11
3.10 Use of impact wrenches	11
3.11 Installing radiators and condensers	11
3.12 Checking vacuum system	11
<b>10 - Removing and installing engine</b>	<b>13</b>
<b>1 Removing and installing engine</b>	<b>13</b>
1.1 Removing engine	13
1.2 Separating engine and gearbox	48
1.3 Securing engine to engine and gearbox support	54
1.4 Installing engine	56
<b>2 Assembly mountings</b>	<b>61</b>
2.1 Assembly overview - assembly mountings	61
2.2 Supporting engine in installation position	64
2.3 Removing and installing engine mountings	72
2.4 Removing and installing gearbox mounting	74
2.5 Removing and installing pendulum support	77
2.6 Checking adjustment of assembly mountings	77
2.7 Adjusting assembly mountings	78
<b>3 Engine cover panel</b>	<b>81</b>
3.1 Removing and installing engine cover panel	81
<b>13 - Crankshaft group</b>	<b>82</b>
<b>1 Cylinder block (pulley end)</b>	<b>82</b>
1.1 Assembly overview - poly V-belt drive	82
1.2 Removing and installing poly V-belt	88
1.3 Removing and installing poly V-belt tensioner	92
1.4 Removing and installing vibration damper	94
1.5 Removing and installing engine support	97
1.6 Renewing crankshaft oil seal (pulley end)	100
<b>2 Cylinder block (gearbox end)</b>	<b>103</b>
2.1 Assembly overview - cylinder block (gearbox end)	103



2.2	Removing and installing flywheel	106
2.3	Removing and installing sealing flange (gearbox end)	109
<b>3</b>	<b>Crankshaft</b>	<b>121</b>
3.1	Renewing needle bearing in crankshaft	121
3.2	Crankshaft dimensions	123
3.3	Measuring axial clearance of crankshaft	123
<b>4</b>	<b>Pistons and conrods</b>	<b>125</b>
4.1	Assembly overview - pistons and conrods	125
4.2	Removing and installing pistons	128
4.3	Separating parts of new conrod	129
4.4	Removing and installing oil spray jets	130
4.5	Checking pistons and cylinder bores	131
4.6	Checking radial clearance of conrod bearings	133
4.7	Setting pistons to TDC position	134
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>140</b>
<b>1</b>	<b>Toothed belt drive</b>	<b>140</b>
1.1	Assembly overview - toothed belt guard	140
1.2	Assembly overview - toothed belt	141
1.3	Assembly overview - valve timing tool	144
1.4	Removing and installing toothed belt guard	144
1.5	Removing and installing toothed belt	146
1.6	Pre-assembling and fitting valve timing tool	152
1.7	Checking valve timing	169
1.8	Adjusting valve timing	173
1.9	Detaching toothed belt from camshaft	184
<b>2</b>	<b>Cylinder head</b>	<b>189</b>
2.1	Assembly overview - cylinder head	189
2.2	Assembly overview - camshaft housing	190
2.3	Removing and installing cylinder head	195
2.4	Removing and installing camshaft housing	199
2.5	Checking compression	210
<b>3</b>	<b>Valve gear</b>	<b>214</b>
3.1	Assembly overview - valve gear	214
3.2	Removing and installing camshaft oil seal	217
3.3	Removing and installing camshaft adjuster	228
3.4	Removing and installing cam actuators	240
3.5	Removing and installing camshaft control valve 1 N205	242
3.6	Removing and installing exhaust camshaft control valve 1 N318	243
3.7	Removing and installing valve stem oil seals	243
3.8	Removing and installing retainer for oil seal	260
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>264</b>
4.1	Checking valve guides	264
4.2	Checking valves	265
4.3	Valve dimensions	265
<b>17</b>	<b>Lubrication</b>	<b>266</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>266</b>
1.1	Assembly overview - sump/oil pump	266
1.2	Engine oil	270
1.3	Removing and installing sump	271
1.4	Removing and installing oil pump	276
1.5	Removing and installing oil level and oil temperature sender G266	277
<b>2</b>	<b>Engine oil cooler</b>	<b>279</b>
2.1	Assembly overview - engine oil cooler	279

2.2	Removing and installing engine oil cooler .....	279
<b>3</b>	<b>Crankcase breather .....</b>	<b>281</b>
3.1	Assembly overview - crankcase breather system .....	281
3.2	Removing and installing oil separator .....	282
<b>4</b>	<b>Oil filter/oil pressure switches .....</b>	<b>287</b>
4.1	Assembly overview - oil pressure switches/oil pressure control .....	287
4.2	Checking oil pressure and oil pressure switch .....	287
4.3	Removing and installing valve for oil pressure control N428 .....	288
4.4	Removing and installing oil pressure sender G10 .....	288
<b>19</b>	<b>- Cooling .....</b>	<b>291</b>
<b>1</b>	<b>Cooling system/coolant .....</b>	<b>291</b>
1.1	Connection diagram - coolant hoses .....	291
1.2	Assembly overview - coolant expansion tank .....	293
1.3	Checking cooling system for leaks .....	294
1.4	Draining and filling cooling system .....	299
1.5	Removing and installing coolant expansion tank .....	307
<b>2</b>	<b>Coolant pump/thermostat assembly .....</b>	<b>310</b>
2.1	Assembly overview - coolant pump/thermostat .....	310
2.2	Assembly overview - electric coolant pump .....	312
2.3	Assembly overview - coolant temperature senders .....	313
2.4	Removing and installing electric coolant pump .....	313
2.5	Removing and installing coolant pump .....	315
2.6	Removing and installing toothed belt pulley for coolant pump .....	320
2.7	Removing and installing coolant temperature sender G62 .....	326
2.8	Removing and installing engine outlet coolant temperature sender G82 .....	328
2.9	Removing and installing radiator outlet coolant temperature sender G83 .....	330
2.10	Removing and installing engine temperature regulation module GX33 .....	331
2.11	Checking coolant pump .....	336
<b>3</b>	<b>Coolant pipes .....</b>	<b>342</b>
3.1	Assembly overview - coolant pipes .....	342
3.2	Removing and installing coolant pipes .....	344
<b>4</b>	<b>Radiator/radiator fan .....</b>	<b>354</b>
4.1	Assembly overview - radiator/radiator fan .....	354
4.2	Assembly overview - radiator cowl and radiator fan .....	357
4.3	Assembly overview - radiator blind .....	358
4.4	Removing and installing radiator .....	360
4.5	Removing and installing water radiator for charge air cooling circuit .....	366
4.6	Removing and installing radiator cowl .....	369
4.7	Removing and installing radiator fan V7 .....	372
4.8	Removing and installing radiator blind .....	372
4.9	Removing and installing radiator blind control motor (top) .....	374
4.10	Removing and installing radiator blind control motor (bottom) .....	376
<b>21</b>	<b>- Turbocharging/supercharging .....</b>	<b>378</b>
<b>1</b>	<b>Turbocharger .....</b>	<b>378</b>
1.1	Assembly overview - turbocharger .....	378
1.2	Removing and installing turbocharger .....	383
1.3	Removing and installing connection for turbocharger .....	391
1.4	Removing and installing charge pressure control module GX34 .....	393
<b>2</b>	<b>Charge air system .....</b>	<b>399</b>
2.1	Assembly overview - charge air system .....	399
2.2	Removing and installing charge air cooler .....	401
2.3	Removing and installing charge pressure sender GX26 .....	404
2.4	Checking charge air system for leaks .....	405



2.5	Removing and installing air pipe	409
2.6	Checking charge air cooler for leaks	416
<b>24</b>	<b>Mixture preparation - injection</b>	<b>422</b>
<b>1</b>	<b>Injection system</b>	<b>422</b>
1.1	Overview of fitting locations - injection system	422
1.2	Distinguishing between different pressure sections of natural gas fuel supply system	439
<b>2</b>	<b>Air filter</b>	<b>442</b>
2.1	Assembly overview - air filter housing	442
2.2	Removing and installing air filter housing	446
2.3	Removing and installing air duct at lock carrier	451
<b>3</b>	<b>Intake manifold</b>	<b>453</b>
3.1	Assembly overview - intake manifold	453
3.2	Removing and installing intake manifold	455
3.3	Removing and installing throttle valve module GX3	466
3.4	Cleaning throttle valve module GX3	468
<b>4</b>	<b>Injectors</b>	<b>470</b>
4.1	Assembly overview - fuel rail with injectors	470
4.2	Removing and installing fuel rail	472
4.3	Removing and installing injectors	473
4.4	Cleaning injectors	481
<b>5</b>	<b>Gas pressure regulator</b>	<b>483</b>
5.1	Assembly overview - gas pressure regulator	483
5.2	Removing and installing gas pressure regulator	485
5.3	Removing and installing gas tank pressure sensor G1081	490
<b>6</b>	<b>Gas injection valves</b>	<b>492</b>
6.1	Assembly overview - gas rail	492
6.2	Removing and installing gas rail with gas injection valve N366/N367/N368/N369	494
6.3	Removing and installing gas rail temperature and pressure sensor GX21	497
<b>7</b>	<b>Senders and sensors</b>	<b>499</b>
7.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	499
7.2	Removing and installing control unit for structure-borne sound J869 and actuator for structure-borne sound R214	500
7.3	Removing and installing intake manifold sender GX9	500
7.4	Removing and installing fuel pressure sender G247	503
7.5	Checking fuel pressure sender G247	504
7.6	Removing and installing exhaust gas pressure sensor 1 G450	508
<b>8</b>	<b>High-pressure pump</b>	<b>510</b>
8.1	Assembly overview - high-pressure pump	510
8.2	Removing and installing high-pressure pump	510
8.3	Removing and installing high-pressure pipe	513
<b>9</b>	<b>Lambda probe</b>	<b>516</b>
9.1	Assembly overview - Lambda probe	516
9.2	Removing and installing Lambda probe	516
<b>10</b>	<b>Engine control unit</b>	<b>519</b>
10.1	Assembly overview - engine control unit	519
10.2	Removing and installing engine control unit J623	520
<b>26</b>	<b>Exhaust system</b>	<b>526</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>526</b>
1.1	Assembly overview - silencers	526
1.2	Removing and installing silencers	540
1.3	Installation position of clamp	549
1.4	Separating exhaust pipes/silencers	550

1.5	Stress-free alignment of exhaust system .....	555
1.6	Checking exhaust system for leaks .....	556
<b>2</b>	<b>Emission control system .....</b>	<b>557</b>
2.1	Assembly overview - emission control system .....	557
2.2	Removing and installing catalytic converter .....	560
2.3	Removing and installing particulate filter .....	565
2.4	Removing and installing exhaust flap control unit J883 .....	565
<b>28</b>	<b>Ignition system .....</b>	<b>567</b>
<b>1</b>	<b>Ignition system .....</b>	<b>567</b>
1.1	Assembly overview - ignition system .....	567
1.2	Removing and installing ignition coils .....	571
1.3	Removing and installing knock sensor 1 G61 .....	574
1.4	Removing and installing engine speed sender G28 .....	575
1.5	Removing and installing inlet camshaft position sender G1002 .....	577
1.6	Removing and installing exhaust camshaft position sender G1003 .....	580