

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the ignition system	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Performing adaptations after renewing a component	7
3.5 Foreign material in engine	8
3.6 Cleaning engine	8
3.7 Contact corrosion	8
3.8 Routing and attachment of pipes, hoses and wiring	8
3.9 Installing radiators and condensers	9
3.10 Nuts, bolts	9
3.11 Identification plates	10
3.12 Use of impact wrenches	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Removing and installing engine</b>	<b>11</b>
1.1 Removing engine	11
1.2 Separating engine and gearbox	65
1.3 Securing engine to engine and gearbox support	69
1.4 Installing engine	70
<b>2 Assembly mountings</b>	<b>74</b>
2.1 Assembly overview - assembly mountings	74
2.2 Supporting engine in installation position	76
2.3 Removing and installing engine mountings	82
2.4 Removing and installing gearbox mounting	83
2.5 Removing and installing pendulum support	86
2.6 Checking adjustment of assembly mountings	86
2.7 Adjusting assembly mountings	86
<b>3 Engine cover panel</b>	<b>90</b>
3.1 Removing and installing engine cover panel	90
<b>13 - Crankshaft group</b>	<b>91</b>
<b>1 Cylinder block (pulley end)</b>	<b>91</b>
1.1 Assembly overview - cylinder block (pulley end)	91
1.2 Removing and installing poly V-belt	93
1.3 Removing and installing poly V-belt tensioner	95
1.4 Removing and installing vibration damper	95
1.5 Removing and installing bracket for ancillaries	101
1.6 Removing and installing engine support	103
<b>2 Cylinder block (gearbox end)</b>	<b>106</b>
2.1 Assembly overview - cylinder block (gearbox end)	106
2.2 Removing and installing flywheel	107



2.3	Removing and installing sealing flange (gearbox end)	109
<b>3</b>	<b>Crankshaft</b>	<b>112</b>
3.1	Assembly overview - crankshaft	112
3.2	Crankshaft dimensions	115
3.3	Allocation of main bearing shells	115
3.4	Renewing needle bearing in crankshaft	116
3.5	Measuring axial clearance of crankshaft	118
3.6	Measuring radial clearance of crankshaft	119
3.7	Removing and installing crankshaft	120
3.8	Removing and installing sender wheel	121
<b>4</b>	<b>Balance shaft</b>	<b>123</b>
4.1	Assembly overview - balance shaft	123
4.2	Removing and installing balance shaft	125
4.3	Renewing oil seal for balance shaft (inlet side)	128
<b>5</b>	<b>Pistons and conrods</b>	<b>131</b>
5.1	Assembly overview - pistons and conrods	131
5.2	Removing and installing pistons	135
5.3	Removing and installing oil spray jets	137
5.4	Checking pistons and cylinder bores	139
5.5	Separating parts of new conrod	140
5.6	Checking radial clearance of conrod bearings	141
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>142</b>
<b>1</b>	<b>Timing chain cover</b>	<b>142</b>
1.1	Assembly overview - timing chain cover	142
1.2	Removing and installing timing chain cover	145
1.3	Renewing oil seal for vibration damper	148
<b>2</b>	<b>Chain drive</b>	<b>151</b>
2.1	Assembly overview - camshaft timing chains	151
2.2	Assembly overview - drive chain for balance shaft	153
2.3	Removing and installing bearing saddle	155
2.4	Removing and installing camshaft timing chain	159
2.5	Checking chain elongation	169
2.6	Removing and installing drive chain for balance shaft	169
2.7	Checking valve timing	172
<b>3</b>	<b>Cylinder head</b>	<b>176</b>
3.1	Assembly overview - cylinder head	176
3.2	Removing and installing cylinder head	180
3.3	Removing and installing vacuum pump	188
3.4	Checking compression	189
<b>4</b>	<b>Valve gear</b>	<b>192</b>
4.1	Assembly overview - valve gear	192
4.2	Removing and installing camshaft	196
4.3	Installing ball for slider	202
4.4	Removing and installing cam adjustment actuators	203
4.5	Removing and installing camshaft control valves N205 / N318	204
4.6	Removing and installing valve stem oil seals	205
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>214</b>
5.1	Checking valve guides	214
5.2	Checking valves	215
5.3	Valve dimensions	215
<b>17</b>	<b>Lubrication</b>	<b>216</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>216</b>
1.1	Assembly overview - sump/oil pump	216

1.2	Engine oil	218
1.3	Removing and installing lower part of sump	219
1.4	Removing and installing oil pump	220
1.5	Removing and installing upper part of sump	221
1.6	Removing and installing oil level and oil temperature sender G266	225
<b>2</b>	<b>Engine oil cooler</b>	<b>226</b>
2.1	Assembly overview - engine oil cooler	226
2.2	Removing and installing engine oil cooler	226
2.3	Removing and installing mechanical switching valve	227
<b>3</b>	<b>Crankcase breather</b>	<b>228</b>
3.1	Assembly overview - crankcase breather system	228
3.2	Removing and installing oil separator	229
3.3	Removing and installing tank breather pressure sensor 1 G950	230
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>231</b>
4.1	Assembly overview - oil filter	231
4.2	Assembly overview - oil pressure switches/oil pressure control	232
4.3	Removing and installing oil pressure switch F22	234
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	234
4.5	Removing and installing stage 2 oil pressure switch F446	234
4.6	Removing and installing valve for oil pressure control N428	235
4.7	Removing and installing piston cooling jet control valve N522	236
4.8	Checking oil pressure	236
<b>19</b>	<b>Cooling</b>	<b>240</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>240</b>
1.1	Connection diagram - coolant hoses	240
1.2	Checking cooling system for leaks	245
1.3	Draining and filling cooling system	248
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>256</b>
2.1	Assembly overview - coolant pump/thermostat	256
2.2	Assembly overview - electric coolant pump	258
2.3	Assembly overview - coolant valves	259
2.4	Assembly overview - coolant temperature senders	260
2.5	Removing and installing electric coolant pump	261
2.6	Removing and installing coolant pump	264
2.7	Removing and installing toothed belt for coolant pump	265
2.8	Removing and installing actuator for engine temperature regulation N493	267
2.9	Removing and installing coolant temperature sender G62	269
2.10	Removing and installing radiator outlet coolant temperature sender G83	270
2.11	Removing and installing coolant valves	270
<b>3</b>	<b>Coolant pipes</b>	<b>273</b>
3.1	Assembly overview - coolant pipes	273
3.2	Removing and installing coolant pipes	274
<b>4</b>	<b>Radiator/radiator fans</b>	<b>280</b>
4.1	Assembly overview - radiator/radiator fans	280
4.2	Assembly overview - radiator cowl and radiator fans	281
4.3	Assembly overview - auxiliary radiator	282
4.4	Removing and installing radiator	283
4.5	Removing and installing radiator cowl	285
4.6	Removing and installing radiator fans	287
4.7	Removing and installing auxiliary radiator	288
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>293</b>
<b>1</b>	<b>Turbocharger</b>	<b>293</b>
1.1	Assembly overview - turbocharger	293



1.2	Removing and installing turbocharger	301
1.3	Removing and installing charge pressure control module GX34	308
1.4	Removing and installing sender 1 for turbocharger speed G688	309
1.5	Removing and installing turbocharger air recirculation valve N249	310
<b>2</b>	<b>Charge air system</b>	<b>312</b>
2.1	Assembly overview - charge air system	312
2.2	Assembly overview - hose connections for charge air system	316
2.3	Removing and installing charge air cooler	317
2.4	Removing and installing charge pressure sender G31	319
2.5	Removing and installing air intake pipe	320
2.6	Checking charge air system for leaks	323
<b>24</b>	<b>Mixture preparation - injection</b>	<b>326</b>
<b>1</b>	<b>Injection system</b>	<b>326</b>
1.1	Overview of fitting locations - injection system	326
<b>2</b>	<b>Vacuum system</b>	<b>337</b>
2.1	Connection diagram - vacuum system	337
2.2	Checking vacuum system	337
<b>3</b>	<b>Air filter</b>	<b>339</b>
3.1	Assembly overview - air filter housing	339
3.2	Removing and installing air filter housing	342
3.3	Removing and installing air duct at lock carrier	342
<b>4</b>	<b>Intake manifold</b>	<b>344</b>
4.1	Assembly overview - intake manifold	344
4.2	Removing and installing intake manifold	346
4.3	Removing and installing throttle valve module GX3	349
4.4	Cleaning throttle valve module GX3	350
4.5	Removing and installing intake manifold flap valve N316	351
4.6	Checking intake manifold change-over function	351
<b>5</b>	<b>Injectors</b>	<b>354</b>
5.1	Assembly overview - fuel rail with injectors	354
5.2	Removing and installing fuel rail	355
5.3	Removing and installing injectors	356
5.4	Cleaning injectors	361
<b>6</b>	<b>Senders and sensors</b>	<b>363</b>
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	363
6.2	Removing and installing control unit for structure-borne sound J869 and actuator for structure-borne sound R214	364
6.3	Removing and installing intake manifold pressure sender G71	364
6.4	Removing and installing fuel pressure sender G247	365
6.5	Checking fuel pressure sender G247	366
6.6	Removing and installing pressure differential sender for particulate filter G1037	368
<b>7</b>	<b>High-pressure pump</b>	<b>370</b>
7.1	Assembly overview - high-pressure pump	370
7.2	Removing and installing high-pressure pump	372
7.3	Removing and installing high-pressure pipe	375
<b>8</b>	<b>Lambda probe</b>	<b>377</b>
8.1	Assembly overview - Lambda probe	377
8.2	Removing and installing Lambda probe	379
<b>9</b>	<b>Engine control unit</b>	<b>381</b>
9.1	Assembly overview - engine control unit	381
9.2	Removing and installing engine control unit J623	381
<b>26</b>	<b>Exhaust system</b>	<b>383</b>

<b>1</b>	<b>Exhaust pipes/silencers</b> .....	<b>383</b>
1.1	Assembly overview - silencers .....	383
1.2	Separating exhaust pipes/silencers .....	389
1.3	Removing and installing silencers .....	390
1.4	Stress-free alignment of exhaust system .....	392
1.5	Checking exhaust system for leaks .....	393
<b>2</b>	<b>Emission control system</b> .....	<b>394</b>
2.1	Assembly overview - emission control system .....	394
2.2	Removing and installing catalytic converter .....	396
2.3	Removing and installing particulate filter .....	400
2.4	Removing and installing exhaust flap control unit .....	401
<b>3</b>	<b>Exhaust gas temperature regulation</b> .....	<b>402</b>
3.1	Assembly overview - exhaust gas temperature regulation .....	402
3.2	Removing and installing parts of exhaust gas temperature regulation .....	404
<b>28</b>	<b>Ignition system</b> .....	<b>406</b>
<b>1</b>	<b>Ignition system</b> .....	<b>406</b>
1.1	Assembly overview - ignition system .....	406
1.2	Removing and installing ignition coils .....	408
1.3	Removing and installing knock sensor 1 G61 .....	410
1.4	Removing and installing Hall senders .....	411
1.5	Removing and installing engine speed sender G28 .....	412