

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	21
1.3 Securing engine to engine and gearbox support	21
1.4 Installing engine	21
2 Assembly mountings	25
2.1 Assembly overview - assembly mountings	25
2.2 Supporting engine in installation position	27
2.3 Removing and installing engine mountings	28
2.4 Removing and installing gearbox mounting	29
2.5 Removing and installing pendulum support	30
2.6 Checking adjustment of assembly mountings	31
2.7 Adjusting assembly mountings	31
3 Engine cover panel	34
13 - Crankshaft group	35
1 Cylinder block (pulley end)	35
1.1 Assembly overview - cylinder block (pulley end)	35
1.2 Removing and installing poly V-belt	35
1.3 Removing and installing poly V-belt tensioner	35
1.4 Removing and installing vibration damper	35
1.5 Removing and installing bracket for ancillaries	35
1.6 Removing and installing engine support	36
2 Cylinder block (gearbox end)	37
3 Crankshaft	38
4 Balance shaft	39
5 Pistons and conrods	40
15 - Cylinder head, valve gear	41
1 Timing chain cover	41
2 Chain drive	42
3 Cylinder head	43
3.1 Assembly overview - cylinder head	43
3.2 Removing and installing cylinder head	43
3.3 Checking compression	43
4 Valve gear	44
5 Inlet and exhaust valves	45
17 - Lubrication	46
1 Sump/oil pump	46
1.1 Assembly overview - sump/oil pump	46
1.2 Engine oil	46
1.3 Removing and installing lower part of sump	46
1.4 Removing and installing oil pump	46
1.5 Removing and installing upper part of sump	46



1.6	Removing and installing oil level and oil temperature sender G266	46
2	Engine oil cooler	47
3	Crankcase breather	48
4	Oil filter/oil pressure switches	49
19 - Cooling		50
1	Cooling system/coolant	50
1.1	Connection diagram - coolant hoses	50
1.2	Checking cooling system for leaks	51
1.3	Draining and filling cooling system	51
2	Coolant pump/thermostat assembly	58
2.1	Assembly overview - coolant pump/thermostat	58
2.2	Assembly overview - electric coolant pump	58
2.3	Exploded view - coolant temperature senders	58
2.4	Removing and installing electric coolant pump	58
2.5	Removing and installing coolant pump	58
2.6	Removing and installing toothed belt for coolant pump	59
2.7	Removing and installing actuator for engine temperature regulation N493	60
2.8	Removing and installing coolant temperature sender G62	60
2.9	Removing and installing radiator outlet coolant temperature sender G83	60
2.10	Removing and installing coolant valves	60
3	Coolant pipes	61
4	Radiator/radiator fan	62
4.1	Exploded view - radiator/radiator fan	62
4.2	Removing and installing radiator	64
4.3	Removing and installing radiator cowl	66
4.4	Removing and installing radiator fan V7	67
21 - Turbocharging/supercharging		68
1	Turbocharger	68
2	Charge air system	69
2.1	Assembly overview - charge air system	69
2.2	Assembly overview - hose connections for charge air system	71
2.3	Removing and installing charge air cooler	71
2.4	Removing and installing charge pressure sender G31	74
2.5	Checking charge air system for leaks	75
2.6	Removing and installing air pipe	76
24 - Mixture preparation - injection		79
1	Injection system	79
1.1	Overview of fitting locations - injection system	79
2	Air filter	90
2.1	Assembly overview - air filter housing	90
2.2	Removing and installing air filter housing	92
2.3	Removing and installing air duct at lock carrier	93
3	Intake manifold	95
3.1	Exploded view - intake manifold	95
3.2	Removing and installing intake manifold	95
3.3	Removing and installing throttle valve module GX3	95
3.4	Cleaning throttle valve module GX3	96
3.5	Checking intake manifold change-over function	96
4	Injectors	97
5	Senders and sensors	98
5.1	Removing and installing intake manifold sender GX9	98

5.2	Removing and installing air mass meter G70	98
5.3	Removing and installing fuel pressure sender G247	100
5.4	Checking fuel pressure sender G247	101
5.5	Removing and installing fuel pressure sender for low pressure G410	101
6	High-pressure pump	102
7	Lambda probe	103
8	Engine control unit	104
8.1	Removing and installing engine control unit J623	104
26	- Exhaust system	106
1	Exhaust pipes/silencers	106
1.1	Exploded view - silencers	106
1.2	Removing and installing silencers	110
1.3	Separating exhaust pipes/silencers	113
1.4	Stress-free alignment of exhaust system	114
1.5	Checking exhaust system for leaks	115
1.6	Installation position of clamp	115
2	Emission control system	116
2.1	Assembly overview - emission control system	116
2.2	Removing and installing catalytic converter	116
2.3	Removing and installing particulate filter	116
3	Secondary air system	117
28	- Ignition system	118
1	Ignition system	118