

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working on the SCR system	4
<b>2 Repair instructions</b>	<b>5</b>
2.1 Rules for cleanliness	5
2.2 General notes	5
2.3 Test conditions	6
2.4 Contact corrosion	6
2.5 Routing and attachment of pipes, hoses and wiring	6
2.6 Identification plates	6
2.7 Use of impact wrenches	7
2.8 Nuts, bolts	7
2.9 Checking fuel system for leaks	8
<b>20 - Fuel supply system</b>	<b>9</b>
<b>1 Safety information</b>	<b>9</b>
<b>2 Fuel tank</b>	<b>10</b>
2.1 Assembly overview - fuel tank	10
2.2 Draining fuel tank	25
2.3 Removing and installing fuel tank	30
2.4 Removing and installing misfuelling prevention device	53
<b>3 Fuel delivery unit/fuel gauge senders</b>	<b>56</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge senders	56
3.2 Removing and installing fuel delivery unit/fuel gauge senders	67
3.3 Bleeding fuel line for metering pump	85
3.4 Removing and installing fuel gauge sender G	86
3.5 Removing and installing fuel gauge sender 2 G169	87
<b>4 Plug-in connectors</b>	<b>91</b>
4.1 Disconnecting plug-in connectors	91
<b>5 Activated charcoal filter system</b>	<b>95</b>
5.1 Connection diagram - activated charcoal filter system	95
5.2 Assembly overview - activated charcoal filter system	99
5.3 Assembly overview - activated charcoal filter air flushing pump	103
5.4 Removing and installing activated charcoal filter	104
5.5 Removing and installing breather hose with air filter	106
5.6 Removing and installing fuel tank leak detection module GX36	107
5.7 Removing and installing activated charcoal filter air flushing pump	108
5.8 Removing and installing cut-off valve for activated charcoal filter air flushing	108
5.9 Operation of activated charcoal filter system	109
5.10 Fuel tank leak detection - NAR, Korea and China only	109
5.11 Checking fuel system for leaks - NAR, Korea and China versions	109
<b>6 Fuel filter</b>	<b>116</b>
6.1 Assembly overview - fuel filter	116
<b>7 Accelerator mechanism</b>	<b>119</b>
7.1 Assembly overview - accelerator pedal module	119
7.2 Removing and installing accelerator pedal module GX2	120
<b>8 Fuel pump</b>	<b>121</b>



8.1	Checking fuel system pressurisation pump G6 .....	121
8.2	Removing and installing suction-jet pump .....	142
8.3	Removing and installing fuel pump control unit J538 .....	143