

001 - All-wheel drive , (1X1)	1-2
1. All-wheel drive , (1X1)	1
2. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface, All-wheel drive coupling pump	2
002 - Light switch	3-4
1. Light switch	3
2. Light switch, Onboard supply control unit, Fuse holder C	4
003 - Convenience system , (L0L)	5-18
1. Convenience system , (L0L)	5
2. Fuse holder C	6
3. Reversing light switch, Onboard supply control unit, Fuse holder B, Fuse holder C	7
4. Onboard supply control unit, Data bus diagnostic interface, Luggage compartment light, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	8
5. Glove compartment light switch, Onboard supply control unit, Glove compartment light, Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	9
6. Rear lid handle release button, Glass breakage sensor for rear window, Anti-theft alarm sensor, Onboard supply control unit, Rear lid lock unit	10
7. Window aerial suppression filter, Suppression capacitor, Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number plate light, Rear window	11
8. Bonnet contact switch, Bonnet contact switch 2, Alarm horn, Onboard supply control unit	12
9. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Tank filler flap locking motor	13
10. Onboard supply control unit, Light 3 for front centre console background lighting	14
11. Onboard supply control unit, Light 1 for front centre console background lighting, Light 3 for dash panel contour lighting	15
12. Onboard supply control unit, Light 2 for front centre console background lighting, Light for cup holder background lighting, Light 2 for cup holder background lighting	16
13. Front right brake pad wear sender, Onboard supply control unit	17
14. Front left brake pad wear sender, Rear left brake pad wear sender, Onboard supply control unit	18
004 - Entry and start authorisation , (4F2),(4F6),(4I3)	19-26
1. Entry and start authorisation , (4F2),(4F6),(4I3)	19
2. Entry and start authorisation control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	20
3. Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit	21
4. Contact sensor for driver exterior door handle, Entry and start authorisation control unit	22
5. Entry and start authorisation button, Entry and start authorisation control unit, Data bus diagnostic interface	23
6. Contact sensor for rear left exterior door handle, Entry and start authorisation control unit, Engine/motor control unit, Rear bumper aerial for entry and start system	24
7. Contact sensor for rear right exterior door handle, Entry and start authorisation control unit, Onboard supply control unit	25
8. Control unit for electronic steering column lock	26
005 - Fuse assignment	27-78
1. Fuse assignment	27
2. Fuse holder A	28
3. Fuse holder A	29
4. Fuse holder A, Fuse holder B	30
5. Fuse holder B	31
6. Fuse holder B	32
7. Fuse holder B	33
8. Fuse holder B, Activated charcoal filter air flushing pump	34
9. Fuse holder B	35
10. Fuse holder B	36
11. Fuse holder B	37
12. Fuse holder B	38
13. Fuse holder B	39
14. Fuse holder B	40
15. Fuse holder B	41
16. Fuse holder B	42
17. Fuse holder B	43
18. Fuse holder B	44
19. Fuse holder C	45
20. Data bus diagnostic interface, Fuse holder C	46
21. Fuse holder C	47
22. Fuse holder C	48

23. Fuse holder C	49
24. Fuse holder C	50
25. Fuse holder C	51
26. Fuse holder C	52
27. Fuse holder C	53
28. Fuse holder C	54
29. Fuse holder C	55
30. Fuse holder C	56
31. Fuse holder C	57
32. Fuse holder C	58
33. Fuse holder C, Fuse holder D	59
34. Fuse holder F, Fuse holder H	60
35. Fuse holder E, Fuse holder J, Coupling point on left A-pillar, bottom	61
36. Coupling point on left A-pillar, bottom	62
37. Fuse holder G, Coupling point on left A-pillar, bottom	63
38. Coupling point in engine compartment, left	64
39. Coupling point in engine compartment, left	65
40. Coupling point 1 for steering	66
41. Engine/motor control unit	67
42. Engine/motor control unit	68
43. Engine/motor control unit	69
44. Engine/motor control unit, Coupling point for rear right door	70
45. Coupling point in rear left door, Coupling point in front left door, Coupling point in front right door, Coupling point for front right door	71
46. Coupling point for rear left door, Coupling point for front left door	72
47. Coupling point 1 for alternator	73
48. Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 3 for front centre console background lighting, Light 3 for dash panel contour lighting, Coupling point on engine, bottom left	74
49. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Control unit with Android operating system, TV tuner	75
50. Light switch, Rain and light sensor, Toll collection sender, Anti-theft alarm sensor, Chip card reader control unit, Emergency call module control unit and communication unit, Charging unit 1 for mobile devices, Aerial amplifier for mobile telephone, USB hub	76
51. Electrical air conditioner compressor, High-voltage heater (PTC)	77
52. Coupling point in luggage compartment, left, Coupling point 1 for high-voltage battery regulation	78
006 - Airbag systems , (4UE),(4UF),(L0L)	79-89
1. Airbag systems , (4UE),(4UF),(L0L)	79
2. Driver side belt switch, Driver side seat position sensor, Airbag control unit	80
3. Key-operated switch to deactivate airbag on front passenger side, Driver seat adjustment operating unit, Airbag control unit, Side airbag igniter on driver side	81
4. Airbag control unit, Front seat belt on passenger side, Front seat belt on driver side	82
5. Rear side airbag crash sensor on driver side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	83
6. Front passenger side belt switch, Front passenger seat adjustment operating unit, Seat occupied sensor on front passenger side, Rear side airbag crash sensor on passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	84
7. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Front roof module	85
8. Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	86
9. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	87
10. Battery, 48 V, Airbag control unit, Data bus diagnostic interface, Diagnostic connection	88
11. Battery regulation control unit	89
007 - Dash panel insert , (9S9),(9S8)	90-94
1. Dash panel insert , (9S9),(9S8)	90
2. Control unit in dash panel insert, Data bus diagnostic interface	91
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics	92

4. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	93
5. Control unit in dash panel insert	94
008 - Brake system , (L0L)	95-102
1. Brake system , (L0L)	95
2. Fuse holder B, Fuse holder C	96
3. Front right speed sensor, Front left speed sensor, Vacuum sender, ABS control unit	97
4. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	98
5. Centre switch module in dash panel, Button for TCS and electronic stabilisation program, ABS control unit, Data bus diagnostic interface, Left parking brake motor	99
6. Parking brake button, Clutch position sender, ABS control unit	100
7. Brake servo	101
8. Onboard supply control unit, Engine/motor control unit, Brake servo	102
009 - Electromechanical steering	103-106
1. Electromechanical steering	103
2. Steering moment sender, Power steering control unit, Fuse holder A	104
3. Centre switch module in dash panel, Steering moment sender, Control unit in dash panel insert, Power steering control unit, Onboard supply control unit, Data bus diagnostic interface	105
4. Data bus diagnostic interface	106
010 - Adaptive chassis control DCC , (2H4)	107-111
1. Adaptive chassis control DCC , (2H4)	107
2. Centre switch module in dash panel, Electronically controlled damping control unit, Onboard supply control unit, Rear left shock absorber damping adjustment valve	108
3. Rear left vehicle level sender, Front left vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	109
4. Front right vehicle level sender, Front right body acceleration sender, Rear body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	110
5. Electronically controlled damping control unit, Data bus diagnostic interface	111
011 - Data bus network	112-138
1. Data bus network	112
2. Data bus diagnostic interface, Fuse holder B, Fuse holder C, Diagnostic connection	113
3. Heater and air conditioning controls, Entry and start authorisation control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Diagnostic connection	114
4. Front passenger door control unit, Data bus diagnostic interface	115
5. Control unit in dash panel insert, Data bus diagnostic interface, Rear lid control unit, Rear passenger side door control unit, Control unit with rear passenger side window regulator motor	116
6. Light switch, Rain and light sensor, Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	117
7. Alarm horn, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	118
8. Driver door control unit, Steering column electronics control unit, Data bus diagnostic interface	119
9. Driver door control unit, Data bus diagnostic interface, Rear driver side door control unit, Control unit with rear driver side window regulator motor	120
10. Auxiliary heater control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Reversing camera system control unit	121
11. Driver side volume regulator, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Charging unit 1 for mobile devices	122
12. Interior mirror, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Front camera for driver assist systems	123
13. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	124
14. Data bus diagnostic interface	125
15. Airbag control unit, Electronically controlled damping control unit, Data bus diagnostic interface, Front seat belt on passenger side, Front seat belt on driver side	126
16. ABS control unit, Parking aid control unit, All-wheel drive control unit, Power steering control unit	127
17. Automatic gearbox control unit, Control unit for structure-borne sound	128
18. Engine/motor control unit	129
19. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Engine/motor control unit	130
20. Alternator with voltage regulator, Starter-alternator, Battery monitor control unit, Auxiliary hydraulic pump 1 for gearbox oil	131
21. Liht 1 for front centre console backaround lihtina. Liht 2 for front centre console	132

background lighting, Light 3 for front centre console background lighting, Light 3 for dash panel contour lighting	
22. Light 1 for front left door background lighting, Light 1 for front right door background lighting, Light 1 for rear left door background lighting, Light 1 for rear right door background lighting, Light for front left door contour lighting, Light for front right door contour lighting, Light for rear left door contour lighting, Light for rear right door contour lighting	133
23. Fresh air blower control unit, Adaptive cruise control unit, Front left headlight, Front right headlight	134
24. Battery, 48 V, Voltage converter (48 V/12 V), Air quality sensor, Pressure sender for refrigerant circuit, Electrical air conditioner compressor, High-voltage heater (PTC)	135
25. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Engine sound generator control unit	136
26. Selector lever, Selector lever sensors control unit, Battery regulation control unit	137
27. Control unit for seat and steering column adjustment with memory function, Battery regulation control unit	138
012 - 1.5l petrol engine , DADA,DPCA,DFYA	139-158
1. 1.5l petrol engine , DADA,DPCA,DFYA	139
2. Fuse holder A, Fuse holder B	140
3. Fuse holder B	141
4. Engine/motor control unit, Fuse holder C	142
5. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	143
6. Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	144
7. Lambda probe 1 before catalytic converter, Clutch position sender, Engine/motor control unit	145
8. Battery, 48 V, Voltage converter (48 V/12 V), Starter-alternator, Engine/motor control unit	146
9. Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit	147
10. Lambda probe 1 after catalytic converter, Data bus diagnostic interface, Engine/motor control unit	148
11. Accelerator pedal module, Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	149
12. Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	150
13. Oil level and oil temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Valve for oil pressure control	151
14. Oil pressure sender, Charge pressure sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	152
15. Intake manifold sender, Hall sender, Knock sensor 1, Fuel pressure sender, Engine/motor control unit	153
16. Engine speed sender, Engine temperature regulation module, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel metering valve	154
17. Throttle valve module, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Ignition coil 1 with output stage	155
18. Engine/motor control unit, Injector, cylinder 1, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Charge air cooling pump	156
19. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Radiator blind control motor	157
20. Brake light switch, Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit	158
013 - 2.0l diesel engine , DFGA,DFHA	159-181
1. 2.0l diesel engine , DFGA,DFHA	159
2. Fuse holder A, Fuse holder B	160
3. Fuse holder B	161
4. Fuse holder B, Fuse holder C	162
5. Engine/motor control unit, Fuse holder C	163
6. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	164
7. Brake light switch, Control unit 2 for NOx sender, Engine/motor control unit	165
8. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Engine/motor control unit	166
9. Exhaust gas temperature sender 2, Clutch position sender, Exhaust gas temperature sender 3, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	167
10. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	168
11. Engine/motor control unit, Radiator fan	169
12. Oil level and oil temperature sender, ABS control unit, Power steering control unit, Engine/motor control unit. Auxiliary pump for heating	170

13. Accelerator pedal module, Air mass meter, Gearbox neutral position sender, Engine/motor control unit	171
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Exhaust flap control unit, Heater element for crankcase breather, Injector for reducing agent	172
15. Exhaust gas recirculation valve 1, Engine speed sender, Exhaust gas temperature sender 1, Engine/motor control unit	173
16. Exhaust gas recirculation valve 2, Fuel temperature sender, Pressure differential sender, Charge air temperature sender before charge air cooler, Engine/motor control unit	174
17. Hall sender, Coolant temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Charge air temperature sender after charge air cooler, Engine/motor control unit	175
18. Throttle valve module, Charge pressure sender, Charge pressure sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	176
19. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Valve for oil pressure control, Coolant valve for cylinder head, Glow plug 1	177
20. Engine/motor control unit, Glow plug 2, Glow plug 3, Glow plug 4	178
21. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve, Charge air cooling pump	179
22. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	180
23. Water level sender, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	181
014 - 2.0l petrol engine , DKTA,DKTC	182-198
1. 2.0l petrol engine , DKTA,DKTC	182
2. Fuse holder A, Fuse holder B	183
3. Engine/motor control unit, Fuse holder B	184
4. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	185
5. Charge pressure sender, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	186
6. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant valve for gearbox	187
7. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	188
8. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Radiator fan	189
9. Oil pressure switch, Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, ABS control unit, Engine/motor control unit	190
10. Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine speed sender, Hall sender 3, Engine/motor control unit	191
11. Throttle valve module, Knock sensor 1, Coolant temperature sender, Pressure differential sender for particulate filter, Engine/motor control unit	192
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	193
13. Engine/motor control unit, Camshaft control valve 1, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	194
14. Intake manifold sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Actuator for engine temperature regulation, Continued coolant circulation pump	195
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	196
16. Brake light switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	197
17. Engine/motor control unit	198
015 - Dash panel insert , (9S1),(9S0)	199-202
1. Dash panel insert , (9S1),(9S0)	199
2. Control unit in dash panel insert, Data bus diagnostic interface, Fuse holder C	200
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics	201
4. Immobiliser reader coil, Electronic ignition lock, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	202
016 - Tail light clusters , (8VA)	203-205
1. Tail light clusters , (8VA)	203
2. Onboard supply control unit. Left tail light cluster. Right tail light cluster. Left tail light	204

cluster 2	
3. Onboard supply control unit, Right tail light cluster 2	205
017 - Tail light clusters with LEDs , (8SQ),(8VM)	206-209
1. Tail light clusters with LEDs , (8SQ),(8VM)	206
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster	207
3. Onboard supply control unit, Left tail light cluster 2	208
4. Onboard supply control unit, Right tail light cluster 2	209
018 - Automatic gearbox , (0IJ)	210-215
1. Automatic gearbox , (0IJ)	210
2. Centre switch module in dash panel, Selector lever, Onboard supply control unit, Fuse holder C	211
3. Selector lever, Data bus diagnostic interface, Selector lever position display	212
4. Selector lever, Auxiliary hydraulic pump 1 for gearbox oil, Selector lever position display	213
5. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	214
6. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	215
019 - Rear left door , (L0L),(4H3),(QQ0)	216-218
1. Rear left door , (L0L),(4H3),(QQ0)	216
2. Operating unit in rear door, driver side, Onboard supply control unit, Control unit with rear driver side window regulator motor	217
3. Onboard supply control unit, Coupling point for rear right door, Rear door lock unit, driver side	218
020 - Rear right door , (L0L),(4H3),(QQ0)	219-221
1. Rear right door , (L0L),(4H3),(QQ0)	219
2. Operating unit in rear door, passenger side, Onboard supply control unit, Control unit with rear passenger side window regulator motor, Fuse holder C	220
3. Onboard supply control unit, Rear door lock unit, passenger side	221
021 - Electrically operated rear lid , (4E7)	222-226
1. Electrically operated rear lid , (4E7)	222
2. Data bus diagnostic interface, Rear lid control unit, Fuse holder C	223
3. Operating unit for rear lid control, Rear lid warning buzzer, Onboard supply control unit, Rear lid control unit, Power latching for rear lid	224
4. Rear lid control unit, Rear lid drive unit, Rear lid drive unit 2	225
5. Rear lid power opening control unit	226
022 - Trailer coupling , (1M6)	227-231
1. Trailer coupling , (1M6)	227
2. Trailer detector control unit, Fuse holder F	228
3. Button for electric swivelling towing bracket, Trailer detector control unit, Data bus diagnostic interface	229
4. Trailer detector control unit, Onboard supply control unit, Hinged tow attachment ball head motor	230
5. Trailer detector control unit, Towing bracket	231
023 - Preparation for trailer coupling	232-235
1. Preparation for trailer coupling	232
2. Trailer detector control unit, Fuse holder F, Fuse holder G	233
3. Trailer detector control unit, Data bus diagnostic interface, Coupling point for electric trailer brakes	234
4. Button for electric swivelling towing bracket, Trailer detector control unit	235
024 - Adjustable lumbar support , (7P1)	236-238
1. Adjustable lumbar support , (7P1)	236
2. Driver seat lumbar support adjustment switch, Fuse holder C, Lumbar support for driver seat	237
3. Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat	238
025 - Automatic anti-dazzle interior mirror , (4L6),(4L7)	239-241
1. Automatic anti-dazzle interior mirror , (4L6),(4L7)	239
2. Interior mirror, Driver door control unit, Front passenger door control unit, Fuse holder C, Coupling point for front left door, Coupling point for front right door, Front roof module	240
3. Interior mirror, Onboard supply control unit, Data bus diagnostic interface, Main beam assist control unit, Left tail light cluster 2, Right tail light cluster 2	241
026 - Sound system , (9VS),(I8T),(I8V)	242-246
1. Sound system , (9VS),(I8T),(I8V)	242
2. Digital sound package control unit, Front left treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker, Centre loudspeaker, Centre loudspeaker 2	243
3. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	244
4. Digital sound package control unit, Left effect loudspeaker, Right effect loudspeaker, Subwoofer, Front roof module	245
5. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics	246
027 - Rear parking aid (PDC) . (7X1)	247-250

1. Rear parking aid (PDC) , (7X1)	247
2. Centre switch module in dash panel, Rear parking aid warning buzzer, Parking aid control unit, Fuse holder C	248
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	249
4. Parking aid control unit, Data bus diagnostic interface	250
028 - Parking aid (PDC) with no park assist steering (Park Assist) , (7X2)	251-255
1. Parking aid (PDC) with no park assist steering (Park Assist) , (7X2)	251
2. Rear parking aid warning buzzer, Parking aid control unit, Fuse holder C	252
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Front parking aid warning buzzer, Parking aid control unit	253
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	254
5. Parking aid control unit	255
029 - Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	256-261
1. Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	256
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Data bus diagnostic interface, Fuse holder C	257
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	258
4. Front right parking aid sender, Front centre right parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit	259
5. Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit	260
6. Centre switch module in dash panel, Parking aid control unit	261
030 - Overhead view camera , (KA6),(I8T),(I8V)	262-266
1. Overhead view camera , (KA6),(I8T),(I8V)	262
2. Data bus diagnostic interface, Control unit for overhead view camera, Left overhead view camera, Fuse holder C	263
3. Control unit for overhead view camera, Right overhead view camera, Rear overhead view camera	264
4. Control unit 1 for information electronics, Control unit for overhead view camera	265
5. Control unit for overhead view camera, Front overhead view camera	266
031 - Reversing camera (Rear Assist) , (KA2)	267-268
1. Reversing camera (Rear Assist) , (KA2)	267
2. Data bus diagnostic interface, Reversing camera system control unit, Fuse holder C	268
032 - Assist systems , (6K2),(6K4),(QK1),(QK2)	269-271
1. Assist systems , (6K2),(6K4),(QK1),(QK2)	269
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	270
3. Adaptive cruise control unit	271
033 - Adjustable driver and front passenger seats , (3L5),(3PB),(3PE)	272-275
1. Adjustable driver and front passenger seats , (3L5),(3PB),(3PE)	272
2. Driver seat adjustment operating unit, Airbag control unit, Front passenger seat adjustment thermal fuse 1, Driver seat rake adjustment motor, Driver seat height adjustment motor	273
3. Driver seat adjustment operating unit, Front passenger seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Front passenger seat rake adjustment motor	274
4. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	275
034 - Auxiliary air heater (PTC) , (7E6)	276-278
1. Auxiliary air heater (PTC) , (7E6)	276
2. Fuse holder B	277
3. Auxiliary air heater element	278
035 - Garage door opener , (VC2)	279-280
1. Garage door opener , (VC2)	279
2. Onboard supply control unit, Garage door operation control unit, Programming aerial for garage door opener, Fuse holder B	280
036 - Air conditioning system , (9AK)	281-291
1. Air conditioning system , (9AK)	281
2. Air conditioning system relay, Fuse holder B, Fuse holder C	282
3. Fresh air blower control unit, Fuse holder C, Fresh air blower, Electrical air conditioner compressor, High-voltage heater (PTC)	283
4. Heater and air conditioning controls, Data bus diagnostic interface, Refrigerant shut-off valve for heater and air conditioning unit, Refrigerant shut-off valve for high-voltage battery heat exchanger	284

5. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit	285
6. Heater and air conditioning controls, Left vent temperature sender	286
7. Heater and air conditioning controls, Right vent temperature sender, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	287
8. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Footwell vent temperature sender, Potentiometer for left temperature flap control motor, Defroster flap control motor, Left temperature flap control motor	288
9. Heater and air conditioning controls, Potentiometer for right temperature flap control motor, Evaporator output temperature sender, Air conditioner compressor, Right temperature flap control motor	289
10. Air conditioner compressor	290
11. Air conditioner compressor	291
037 - Air conditioning system , (KH6)	292-298
1. Air conditioning system , (KH6)	292
2. Heater and air conditioning controls	293
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit	294
4. Heater and air conditioning controls, Evaporator output temperature sender, Temperature flap control motor, Air distribution flap control motor	295
5. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower, Air conditioner compressor, Air recirculation flap control motor	296
6. Air conditioner compressor	297
7. Air conditioner compressor	298
038 - LED headlights , (8EX)	299-306
1. LED headlights , (8EX)	299
2. Rear left vehicle level sender, Onboard supply control unit, Fuse holder C	300
3. Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	301
4. Control unit for cornering light and headlight range control	302
5. Output module 1 for left LED headlight, Front left headlight	303
6. Output module 1 for left LED headlight, Front left headlight, Front right headlight	304
7. Output module 1 for right LED headlight, Front right headlight	305
8. Output module 1 for right LED headlight, Front right headlight	306
039 - LED headlights , (8G0),(8G1),(8IT)	307-314
1. LED headlights , (8G0),(8G1),(8IT)	307
2. Rear left vehicle level sender, Onboard supply control unit	308
3. Data bus diagnostic interface, Control unit for cornering light and headlight range control	309
4. Control unit for cornering light and headlight range control	310
5. Output module 1 for left LED headlight, Front left headlight	311
6. Output module 1 for left LED headlight, Front left headlight	312
7. Output module 1 for right LED headlight, Front right headlight	313
8. Output module 1 for right LED headlight, Front right headlight	314
040 - LED matrix beam headlights , (8G4),(8IT),(8JT)	315-323
1. LED matrix beam headlights , (8G4),(8IT),(8JT)	315
2. Rear left vehicle level sender, Front left vehicle level sender, Onboard supply control unit, Fuse holder B	316
3. Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	317
4. Control unit for cornering light and headlight range control	318
5. Output module 1 for left LED headlight, Front left headlight	319
6. Output module 1 for left LED headlight, Front left headlight	320
7. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Front left headlight, Front right headlight	321
8. Output module 1 for right LED headlight, Front right headlight	322
9. Output module 1 for right LED headlight, Front right headlight	323
041 - Multifunction steering wheel , (5C0)	324-331
1. Multifunction steering wheel , (5C0)	324
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	325
3. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	326
4. Coil connector, Horn plate, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Heated steering wheel	327
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Coil connector. Multifunction steering wheel control unit. Steering column electronics control unit.	328



Control unit for steering wheel contact detection	
6. Multifunction buttons on left in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Heated steering wheel sender, Multifunction steering wheel control unit	329
7. Ignition/starter switch, Ignition key withdrawal lock solenoid	330
8. Ignition/starter switch	331
042 - MMI navigation plus , (I8T)	332-339
1. MMI navigation plus , (I8T)	332
2. Driver side volume regulator, Control unit 1 for information electronics, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 12 on fuse holder C, Fuse 16 on fuse holder C	333
3. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics	334
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for overhead view camera	335
5. Digital sound package control unit, Control unit 1 for information electronics, USB hub	336
6. Control unit 1 for information electronics, Aerial amplifier, Roof aerial, LTE aerial 1, LTE aerial 2	337
7. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 2	338
8. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Dedicated short-range communication aerial, Internal vehicle communication aerial	339
043 - MMI with radio , (I8E),(I8V)	340-345
1. MMI with radio , (I8E),(I8V)	340
2. Driver side volume regulator, Control unit 1 for information electronics, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 12 on fuse holder C, Fuse 16 on fuse holder C	341
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics	342
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for overhead view camera	343
5. Control unit 1 for information electronics, Roof aerial, USB hub, USB charging socket 2	344
6. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 2, Digital radio aerial	345
044 - Infotainment MOST bus , (I8E),(I8T),(I8V)	346-347
1. Infotainment MOST bus , (I8E),(I8T),(I8V)	346
2. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, TV tuner	347
045 - Panoramic sliding sunroof , (3FU)	348-350
1. Panoramic sliding sunroof , (3FU)	348
2. Sunroof button, Sliding sunroof adjustment control unit, Data bus diagnostic interface, Fuse holder C	349
3. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	350
046 - TV tuner , (ER5),(ER7),(QV1)	351-354
1. TV tuner , (ER5),(ER7),(QV1)	351
2. TV tuner	352
3. Aerial amplifier, TV tuner, Aerial amplifier 2	353
4. TV tuner, Aerial amplifier 2 for TV	354
047 - Driving aids for disabled persons, connection for control signals, voltage supply for disabled person equipment , (F0X)	355-356
1. Driving aids for disabled persons, connection for control signals, voltage supply for disabled person equipment , (F0X)	355
2. Control unit for special installations, Fuse holder D	356
048 - Seat heating , (4A3),(5C0)	357-361
1. Seat heating , (4A3),(5C0)	357
2. Heater and air conditioning controls, Onboard supply control unit, Fuse holder C	358
3. Onboard supply control unit, Seat heating (driver side)	359
4. Onboard supply control unit, Heated backrest for front passenger seat, Seat heating (front passenger side)	360
5. Heated backrest for driver seat, Heated seat extension for driver seat, Heated seat extension for front passenger seat	361
049 - Auxiliary heater , (9M9),(9M1)	362-365
1. Auxiliary heater , (9M9),(9M1)	362
2. Auxiliary heater control unit, Data bus diagnostic interface, Remote control receiver for auxiliary heater, Roof aerial, Fuse holder C, Metering pump	363
3. Auxiliary heater control unit, Fuse holder B	364
4. Auxiliary heater control unit	365
050 - Lane change assist , (79B),(79D),(7Y1),(7Y5)	366-369
1. Lane change assist , (79B),(79D),(7Y1),(7Y5)	366
2. Data bus diagnostic interface. Lane change assist control unit. Fuse holder C	367

3. Lane change assist control unit, Lane change assist control unit 2	368
4. Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in passenger side exterior mirror, Coupling point for front left door, Coupling point for front right door, Driver side exterior mirror, Passenger side exterior mirror	369
051 - Sound system , (9VD)	370-372
1. Sound system , (9VD)	370
2. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Fuse holder C, Coupling point for front left door, Coupling point for front right door	371
3. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Centre loudspeaker, Subwoofer, Coupling point for rear left door, Coupling point for rear ight door	372
052 - Sound system , (8RE),(8RL),(I8E),(I8T),(I8V)	373-375
1. Sound system , (8RE),(8RL),(I8E),(I8T),(I8V)	373
2. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Fuse holder C, Coupling point for front left door, Coupling point for front right door	374
3. Control unit 1 for information electronics, Rear left bass loudspeaker, Rear right bass loudspeaker, Coupling point for rear left door, Coupling point for rear right door	375
053 - Emergency call module , (NZ2)	376-378
1. Emergency call module , (NZ2)	376
2. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	377
3. Emergency call module control unit and communication unit, Telephone microphone, Roof aerial, Emergency call module aerial, GPS aerial 2, Front roof module	378
054 - Fuel system , (1A5),(1A7),(1X1),(5C0)	379-381
1. Fuel system , (1A5),(1A7),(1X1),(5C0)	379
2. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit, Fuse holder B	380
3. Fuel gauge sender 2, Control unit in dash panel insert	381
055 - Fuel system , (0F5)	382-384
1. Fuel system , (0F5)	382
2. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit, Coupling point on left A-pillar, bottom	383
3. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	384
056 - Fuel system , (1A5),(1A7),(1X0)	385-387
1. Fuel system , (1A5),(1A7),(1X0)	385
2. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit, Fuse holder B	386
3. Fuel pump control unit	387
057 - Battery, starter and alternator , (0K0),(8FA)	388-392
1. Battery, starter and alternator , (0K0),(8FA)	388
2. Alternator with voltage regulator, Fuse holder A, Fuse holder C	389
3. Battery, Starter, Battery monitor control unit, Fuse holder A, Fuse holder B	390
4. Engine/motor control unit, Fuse holder B	391
5. Data bus diagnostic interface	392
058 - Window wash/wipe system, heated washer jets, headlight washer system	393-396
1. Window wash/wipe system, heated washer jets, headlight washer system	393
2. Windscreen washer fluid level sender, Onboard supply control unit, Left washer jet heater element, Right washer jet heater element	394
3. Wiper motor control unit, Onboard supply control unit, Headlight washer system pump, Rear window wiper motor, Windscreen and rear window washer pump	395
4. Light switch, Rain and light sensor	396
059 - Roof modules	397-400
1. Roof modules	397
2. Interior mirror, Fuse holder C, Front roof module	398
3. Emergency call module control unit and communication unit, Rear interior light, Front roof module	399
4. Airbag control unit, Onboard supply control unit, Front roof module	400
060 - Dual tone horn	401-402
1. Dual tone horn	401
2. Treble horn, Bass horn, Onboard supply control unit	402
061 - Illuminated vanity mirrors	403-404
1. Illuminated vanity mirrors	403
2. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch. Onboard supply control unit. Fuse holder C. Glove compartment light. Front	404

passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	
062 - Centre console switches	405-407
1. Centre console switches	405
2. Centre switch module in dash panel, Onboard supply control unit, Fuse holder C	406
3. Centre switch module in dash panel, ABS control unit, Parking aid control unit	407
063 - Rain and light sensor	408-409
1. Rain and light sensor	408
2. Rain and light sensor, Onboard supply control unit, Fuse holder C	409
064 - Cigarette lighter and 12 V sockets	410-412
1. Cigarette lighter and 12 V sockets	410
2. Onboard supply control unit, Cigarette lighter	411
3. 12 V socket, 12 V socket 2, USB charging socket 1	412
065 - Driver door , (L0L)	413-424
1. Driver door , (L0L)	413
2. Driver door control unit, Fuse holder C	414
3. Interior mirror, Driver door control unit, Light for sill panel moulding background lighting, driver side	415
4. Driver door control unit, Driver door lock unit	416
5. Driver door control unit, Driver side exterior mirror, Driver side window regulator motor	417
6. Driver door control unit, Driver side exterior mirror	418
7. Rear lid remote release button, Fuel tank flap release button, Driver door control unit	419
8. Exterior mirror adjuster, Driver side interior locking button for central locking system, Driver operating unit for memory settings, Driver door control unit	420
9. Operating unit for window regulator in driver door, Driver door control unit	421
10. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver door background lighting, Driver side entry light, Light 2 for driver door background lighting	422
11. Light 1 for front left door background lighting, Light for front left door contour lighting	423
12.	424
066 - Front passenger door , (L0L)	425-433
1. Front passenger door , (L0L)	425
2. Front passenger door control unit, Data bus diagnostic interface	426
3. Interior mirror, Front passenger door control unit, Light for sill panel moulding background lighting, front passenger side	427
4. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor	428
5. Front passenger door control unit, Passenger side exterior mirror	429
6. Front passenger door control unit, Coupling point for rear right door, Passenger side exterior mirror	430
7. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Light for passenger side interior door handle illumination	431
8. Front passenger door control unit, Light 1 for front right door background lighting, Light for front right door contour lighting, Light for passenger door background lighting, Passenger side entry light, Light 2 for passenger door background lighting	432
9. Coupling point for rear left door, Coupling point for front left door	433
067 - Rear left door , (L0L),(4H5),(4H3),(QQ1),(QQ2)	434-439
1. Rear left door , (L0L),(4H5),(4H3),(QQ1),(QQ2)	434
2. Rear driver side door control unit	435
3. Onboard supply control unit, Rear driver side door control unit, Rear door lock unit, driver side	436
4. Operating unit in rear door, driver side, Rear driver side door control unit, Light 1 for rear left door background lighting, Light for rear door background lighting, driver side, Light 2 for rear door background lighting, driver side	437
5. Rear driver side interior locking button for central locking system, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear left door contour lighting, Rear driver side window regulator motor, Rear driver side entry light	438
6.	439
068 - Rear right door , (L0L),(4H5),(4H3),(QQ1),(QQ2)	440-445
1. Rear right door , (L0L),(4H5),(4H3),(QQ1),(QQ2)	440
2. Rear passenger side door control unit	441
3. Operating unit in rear door, passenger side, Onboard supply control unit, Rear passenger side door control unit, Rear door lock unit, passenger side	442
4. Rear passenger side door control unit, Light 1 for rear right door background lighting, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Light for rear door background lighting, passenger side, Light 2 for rear door background lighting, passenger side	443

5. Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Light for rear right door contour lighting, Rear passenger side window regulator motor	444
6.	445
069 - Mobile telephone systems , (9ZE),(9ZV),(9ZX),(I8E),(I8T),(I8V)	446-449
1. Mobile telephone systems , (9ZE),(9ZV),(9ZX),(I8E),(I8T),(I8V)	446
2. Onboard supply control unit, Control unit 1 for information electronics, Charging unit 1 for mobile devices, Fuse holder C, Front roof module	447
3. Charging unit 1 for mobile devices, Aerial amplifier for mobile telephone, Roof aerial, LTE aerial 3	448
4. Aerial amplifier for mobile telephone	449
070 - Driving school , (F5F)	450-452
1. Driving school , (F5F)	450
2. Driving school mode relay	451
3. Warning buzzer button, Footwell light button, Driving school mode warning buzzer, Operational readiness warning lamp, Front left footwell light	452
071 - Automatic gearbox , (0EX)	453-458
1. Automatic gearbox , (0EX)	453
2. Centre switch module in dash panel, Selector lever, Onboard supply control unit, Fuse holder C	454
3. Selector lever, Data bus diagnostic interface, Selector lever position display	455
4. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	456
5. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	457
6. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	458
072 - Automatic gearbox , (0ES)	459-463
1. Automatic gearbox , (0ES)	459
2. Selector lever, Data bus diagnostic interface	460
3. Selector lever, Data bus diagnostic interface, Selector lever position display	461
4. Mechatronic unit for dual clutch gearbox	462
5. Mechatronic unit for dual clutch gearbox	463
073 - 2.0l petrol engine , DTJA	464-485
1. 2.0l petrol engine , DTJA	464
2. Main relay, Fuse holder A, Fuse holder B	465
3. Starter, Engine component power supply relay, Starter relay 1, Starter relay 2, Fuse holder B	466
4. Engine/motor control unit, Fuse holder C, Radiator fan	467
5. Engine/motor control unit	468
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	469
7. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Ignition coil 4 with output stage, Coolant valve for gearbox, Spark plug 4, Coolant circulation pump	470
8. Engine/motor control unit, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	471
9. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	472
10. Cam adjustment actuator 8, Throttle valve module, Engine/motor control unit, Actuator for engine temperature regulation	473
11. Coolant temperature sender, Pressure differential sender for particulate filter, Air mass meter for regeneration air, Regeneration air pressure sender, Engine/motor control unit, Regeneration air valve	474
12. Intake manifold sender, Engine speed sender, Intake air temperature sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit, Fuel metering valve	475
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Charge pressure control module, Knock sensor 1, Engine/motor control unit	476
14. Accelerator pedal module, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	477
15. Brake light switch, Lambda probe 1 after catalytic converter, Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit	478
16. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	479
17. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	480
18. Engine/motor control unit	481
19. Charge pressure sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	482
20. Ignition/starter switch, Entry and start authorisation control unit, Data bus diagnostic interface, Engine/motor control unit	483
21. Onboard supply control unit. Steering column electronics control unit. Fuel pump control unit.	484

Engine/motor control unit	485
22. Fuel tank leak detection module, Fuel pump control unit, Engine/motor control unit	486-500
074 - 1.4l petrol engine , CZDA	486
1. 1.4l petrol engine , CZDA	487
2. Fuse holder A, Fuse holder B	488
3. Engine/motor control unit, Fuse holder B, Fuse holder C	489
4. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	490
5. Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	491
6. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	492
7. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	493
8. Accelerator pedal module, ABS control unit, Engine/motor control unit	494
9. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	495
10. Charge pressure sender, Engine speed sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	496
11. Intake manifold sender, Hall sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	497
12. Throttle valve module, Knock sensor 1, Engine/motor control unit, Fuel pressure regulating valve	498
13. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Continued coolant circulation pump	499
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 4 with output stage, Spark plug 4	500
15. Brake light switch, Engine/motor control unit	501-506
075 - Seat heating , (5C1)	501
1. Seat heating , (5C1)	502
2. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	503
3. Onboard supply control unit, Seat heating (driver side)	504
4. Onboard supply control unit, Heated backrest for driver seat, Heated backrest for front passenger seat	505
5. Front passenger seat bolster heater, Heated seat extension for driver seat, Heated seat extension for front passenger seat	506
6. Seat occupied recognition control unit, Seat heating (front passenger side), Driver seat bolster heater	507-516
076 - Airbag systems for RHD vehicles , (L0R)	507
1. Airbag systems for RHD vehicles , (L0R)	508
2. Driver side belt switch, Driver side seat position sensor, Airbag control unit	509
3. Key-operated switch to deactivate airbag on front passenger side, Driver seat adjustment operating unit, Airbag control unit, Side airbag igniter on driver side	510
4. Airbag control unit, Front seat belt on passenger side, Front seat belt on driver side	511
5. Rear side airbag crash sensor on driver side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	512
6. Front passenger side belt switch, Front passenger seat adjustment operating unit, Seat occupied sensor on front passenger side, Rear side airbag crash sensor on passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	513
7. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Diagnostic connection, Front roof module	514
8. Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	515
9. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	516
10. Battery, 48 V, Airbag control unit, Data bus diagnostic interface, Battery regulation control unit	517-530
077 - Convenience system, right-hand drive , (L0R)	517
1. Convenience system, right-hand drive , (L0R)	518
2. Fuse holder C	519
3. Onboard supply control unit. Fuse holder C	

4. Onboard supply control unit, Data bus diagnostic interface, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	520
5. Reversing light switch, Onboard supply control unit, Luggage compartment light, Left footwell light, Right footwell light	521
6. Rear lid handle release button, Onboard supply control unit, Rear lid lock unit, Rear left footwell light, Rear right footwell light	522
7. Glove compartment light switch, Glass breakage sensor for rear window, Anti-theft alarm sensor, Onboard supply control unit, Glove compartment light, Left number plate light, Right number plate light	523
8. Window aerial suppression filter, Suppression capacitor, Brake fluid level warning contact, Coolant shortage indicator sender, Onboard supply control unit, High-level brake light bulb, Rear window	524
9. Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Alarm horn, Onboard supply control unit	525
10. Onboard supply control unit, Light for cup holder background lighting, Light 3 for dash panel contour lighting, Tank filler flap locking motor	526
11. Onboard supply control unit, Light 3 for front centre console background lighting, Light 2 for cup holder background lighting	527
12. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting	528
13. Onboard supply control unit, Light 2 for front centre console background lighting	529
14. Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Onboard supply control unit	530
078 - Brake system , (L0R)	531-538
1. Brake system , (L0R)	531
2. Fuse holder B, Fuse holder C	532
3. Front right speed sensor, Front left speed sensor, Vacuum sender, ABS control unit	533
4. Centre switch module in dash panel, Button for TCS and electronic stabilisation program, Rear right speed sensor, Rear left speed sensor, ABS control unit	534
5. ABS control unit, Data bus diagnostic interface, Left parking brake motor, Right parking brake motor	535
6. Parking brake button, Clutch position sender, ABS control unit	536
7. Brake servo	537
8. Onboard supply control unit, Engine/motor control unit, Brake servo	538
079 - Driver door , (L0R)	539-549
1. Driver door , (L0R)	539
2. Driver door control unit, Light for sill panel moulding background lighting, driver side	540
3. Driver door control unit, Data bus diagnostic interface	541
4. Driver door control unit, Driver door lock unit, Driver side window regulator motor	542
5. Driver door control unit, Driver side exterior mirror	543
6. Rear lid remote release button, Driver door control unit, Driver side exterior mirror	544
7. Exterior mirror adjuster, Driver side interior locking button for central locking system, Fuel tank flap release button, Driver door control unit	545
8. Operating unit for window regulator in driver door, Driver door control unit	546
9. Driver door control unit, Central locking SAFELOCK function warning lamp, Light 1 for front right door background lighting, Light for driver side interior door handle illumination, Light for driver door background lighting, Driver side entry light, Light 2 for driver door background lighting	547
10. Light for front right door contour lighting	548
11.	549
080 - Front passenger door , (L0R)	550-558
1. Front passenger door , (L0R)	550
2. Front passenger door control unit, Light for sill panel moulding background lighting, front passenger side	551
3. Interior mirror, Front passenger door control unit, Data bus diagnostic interface	552
4. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor	553
5. Front passenger door control unit, Passenger side exterior mirror	554
6. Window regulator switch in front passenger door, Front passenger door control unit, Passenger side exterior mirror	555
7. Front passenger door control unit, Light 1 for front left door background lighting, Light for passenger side interior door handle illumination, Light for passenger door background lighting, Passenger side entry light, Light 2 for passenger door background lighting	556
8. Light for front left door contour lighting	557
9.	558
081 - Rear left door , (L0R),(4H5),(4H3),(QQ1),(QQ2)	559-564
1. Rear left door . (L0R).(4H5).(4H3).(QQ1).(QQ2)	559

2. Rear passenger side door control unit	560
3. Rear passenger side door control unit, Rear door lock unit, passenger side	561
4. Operating unit in rear door, passenger side, Rear passenger side door control unit, Light 1 for rear left door background lighting, Light for rear passenger side interior door handle illumination, Light for rear door background lighting, passenger side, Light 2 for rear door background lighting, passenger side	562
5. Rear passenger side door control unit, Light for rear left door contour lighting, Rear passenger side window regulator motor, Rear passenger side entry light	563
6.	564
082 - Rear right door , (L0R),(4H5),(4H3),(QQ1),(QQ2)	565-570
1. Rear right door , (L0R),(4H5),(4H3),(QQ1),(QQ2)	565
2. Rear driver side door control unit	566
3. Operating unit in rear door, driver side, Rear driver side door control unit, Rear door lock unit, driver side	567
4. Rear driver side door control unit, Light 1 for rear right door background lighting, Light for rear driver side interior door handle illumination, Rear driver side entry light, Light for rear door background lighting, driver side, Light 2 for rear door background lighting, driver side	568
5. Rear driver side door control unit, Light for rear right door contour lighting, Rear driver side window regulator motor	569
6.	570
083 - Rear left door , (L0R),(4H3),(QQ0)	571-573
1. Rear left door , (L0R),(4H3),(QQ0)	571
2. Operating unit in rear door, passenger side, Onboard supply control unit, Control unit with rear passenger side window regulator motor	572
3. Onboard supply control unit, Rear door lock unit, passenger side	573
084 - Rear right door , (L0R),(4H3),(QQ0)	574-576
1. Rear right door , (L0R),(4H3),(QQ0)	574
2. Operating unit in rear door, driver side, Onboard supply control unit, Control unit with rear driver side window regulator motor, Fuse holder C	575
3. Onboard supply control unit, Rear door lock unit, driver side	576
085 - Automatic gearbox , (0EW)	577-583
1. Automatic gearbox , (0EW)	577
2. Gearbox oil temperature sender, Automatic gearbox control unit, Gearbox, Solenoid valve 1, Solenoid valve 2	578
3. Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Automatic gearbox pressure regulating valve 8	579
4. Multifunction switch, Gearbox output speed sender, Gearbox input speed sender 1, Automatic gearbox control unit, Gearbox, Auxiliary hydraulic pump 1 for gearbox oil	580
5. Multifunction switch, Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit, Gearbox	581
6. Centre switch module in dash panel, Selector lever, Automatic gearbox control unit, Onboard supply control unit	582
7. Selector lever, Selector lever position display	583
086 - Tail light clusters , (8VM),(AV2)	584-586
1. Tail light clusters , (8VM),(AV2)	584
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster	585
3. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2	586
087 - Airbag systems (US equipment) , (4UB)	587-595
1. Airbag systems (US equipment) , (4UB)	587
2. Driver side belt switch, Driver side seat position sensor, Airbag control unit	588
3. Driver seat adjustment operating unit, Airbag control unit, Data bus diagnostic interface, Side airbag igniter on driver side	589
4. Airbag control unit, Front seat belt on passenger side, Front seat belt on driver side	590
5. Front airbag crash sensor for driver side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter, Front passenger side knee airbag igniter	591
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for front passenger side, Airbag control unit, Front passenger airbag unit	592
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2, Front roof module	593
8. Front passenger side belt switch, Front passenger seat adjustment operating unit, Front passenger side seat position sensor. Airbaa control unit. Seat occupied recoanition control unit. Side airbaa	594

igniter on front passenger side	
9. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Igniter for exhaust valve for driver airbag	595
088 - 2.0l petrol engine , CZPA,CZRA,DSPA	596-617
1. 2.0l petrol engine , CZPA,CZRA,DSPA	596
2. Fuse holder A, Fuse holder B	597
3. Fuse holder B, Secondary air pump motor	598
4. Engine/motor control unit, Fuse holder B, Fuse holder C	599
5. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	600
6. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	601
7. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	602
8. Data bus diagnostic interface, Engine/motor control unit, Radiator fan	603
9. Cam adjustment actuator 1, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	604
10. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	605
11. Engine speed sender, Knock sensor 1, Coolant temperature sender, Air mass meter, Hall sender 3, Engine/motor control unit	606
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	607
13. Throttle valve module, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	608
14. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Continued coolant circulation pump	609
15. Accelerator pedal module, Engine/motor control unit	610
16. Brake light switch, Intake manifold sender, Engine/motor control unit, Actuator for engine temperature regulation	611
17. Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant shut-off valve, Charge pressure positioner	612
18. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Engine/motor control unit	613
19. Hall sender, Tank breather pressure sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	614
20. Engine/motor control unit	615
21. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	616
22. Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox	617
089 - 2.0l petrol engine , DHHA,DSNA	618-637
1. 2.0l petrol engine , DHHA,DSNA	618
2. Fuse holder A, Fuse holder B	619
3. Fuse holder B, Secondary air pump motor	620
4. Engine/motor control unit, Fuse holder B, Fuse holder C	621
5. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	622
6. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	623
7. Fuel tank leak detection module, Radiator outlet coolant temperature sender, Sender 1 for secondary air pressure, Engine/motor control unit	624
8. Accelerator pedal module, Automatic gearbox control unit, Engine/motor control unit, Gearbox	625
9. Data bus diagnostic interface, Engine/motor control unit, Radiator fan	626
10. Oil pressure switch, Oil level and oil temperature sender, ABS control unit, Power steering control unit, Engine/motor control unit	627
11. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit	628
12. Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine speed sender, Hall sender 3, Engine/motor control unit	629
13. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	630
14. Throttle valve module, Coolant temperature sender, Engine/motor control unit	631
15. Engine/motor control unit. Camshaft control valve 1. Turbocharger air recirculation valve. Fuel	632



metering valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Actuator for engine temperature regulation, Continued coolant circulation pump	633
17. Intake manifold sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	634
18. Hall sender, Fuel pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	635
19. Knock sensor 1, Tank breather pressure sensor 1, Engine/motor control unit	636
20. Brake light switch, Charge pressure sender, Engine/motor control unit	637
090 - Fuel system , (1X1),(5C1)	638-640
1. Fuel system , (1X1),(5C1)	638
2. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit, Coupling point on left A-pillar, bottom, Coupling point on right A-pillar, bottom	639
3. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	640
091 - Multifunction steering wheel , (5C1)	641-647
1. Multifunction steering wheel , (5C1)	641
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Steering column electronics control unit	642
3. Cruise control system switch, Steering column electronics control unit, Data bus diagnostic interface	643
4. Coil connector, Horn plate, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Heated steering wheel	644
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift down), Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection	645
6. Multifunction buttons on left in steering wheel, Tiptronic switch (shift up), Heated steering wheel sender, Multifunction steering wheel control unit	646
7. Ignition/starter switch, Ignition key withdrawal lock solenoid	647
092 - Special vehicle , (F4T)	648-659
1. Special vehicle , (F4T)	648
2. Operating unit for special signals, Magnetic flashing light, Fuse holder D, Fuse holder H	649
3. Interface for CiA MIB CAN bus, special vehicle interface, Interface control unit 3 for special vehicles	650
4. Flashing light switch, Rear lid closed sender 1, Interface control unit 3 for special vehicles	651
5. Interface control unit 2 for special vehicles, Interface control unit 3 for special vehicles	652
6. Interface control unit for special vehicles	653
7. Signal system/2-way radio interference suppressor, Electronic control 2 for charging station for hand-held 2-way radio, Coupling point 2 for two-way radio in special vehicle, Coupling point for 12 V onboard charging unit in special vehicle, Rear lid lock unit	654
8. Electronic control 1 for charging station for hand-held 2-way radio, Two-way radio loudspeaker, Coupling point for two-way radio in special vehicle	655
9. Telephone interference suppressor, Electronic control 1 for charging station for hand-held 2-way radio, 2-way radio unit microphone	656
10. Two-way radio voltage relay, Two-way radio voltage relay 2, Coupling point for data transmission in special vehicle, Charging station for hand-held 2-way radio	657
11. Right flashing light in rear lid, Left flashing light in rear lid, Coupling point for special signal system loudspeaker	658
12. Left flashing light, Right flashing light	659
093 - 1.4l petrol engine , DJSA	660-674
1. 1.4l petrol engine , DJSA	660
2. Fuse holder A, Fuse holder B	661
3. Fuse holder B	662
4. Engine/motor control unit, Fuse holder B, Fuse holder C	663
5. Brake light switch, Engine/motor control unit	664
6. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Knock sensor 1, Engine/motor control unit	665
7. Oil pressure switch, Engine/motor control unit, Radiator fan	666
8. Accelerator pedal module, Engine/motor control unit	667
9. Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Engine/motor control unit, Heater element for crankcase breather, Camshaft control valve 1, Exhaust camshaft control valve 1, Charge air cooling pump	668
10. Charge pressure sender, Oil level and oil temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Valve for oil pressure control	669
11. Engine speed sender, Fuel pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit. Charge pressure positioner	670

12. Intake manifold sender, Hall sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit	671
13. Throttle valve module, Fuel tank leak detection module, Engine/motor control unit, Fuel metering valve	672
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	673
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	674
094 - 2.0l petrol engine , DKVB,DPLA	675-694
1. 2.0l petrol engine , DKVB,DPLA	675
2. Fuse holder B	676
3. Fuse holder B	677
4. Engine/motor control unit	678
5. Brake light switch, Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox	679
6. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	680
7. Lambda probe 1 before catalytic converter, Engine/motor control unit	681
8. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Radiator fan	682
9. Oil pressure switch, Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit	683
10. Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine speed sender, Hall sender 3, Engine/motor control unit	684
11. Throttle valve module, Dual exhaust gas temperature sensor 1, Air mass meter, Engine/motor control unit	685
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	686
13. Engine/motor control unit, Camshaft control valve 1, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	687
14. Intake manifold sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Continued coolant circulation pump	688
15. Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	689
16. Hall sender, Fuel pressure sender for low pressure, Pressure differential sender for particulate filter, Engine/motor control unit	690
17. Fuel tank leak detection module, Engine/motor control unit	691
18. Accelerator pedal module, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	692
19. Knock sensor 1, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	693
20. Engine/motor control unit, Actuator for engine temperature regulation	694
095 - 2.0l petrol engine , DKXA	695-712
1. 2.0l petrol engine , DKXA	695
2. Fuse holder B	696
3. Fuse holder B, Fuse holder C	697
4. Engine/motor control unit	698
5. Brake light switch, Engine/motor control unit	699
6. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	700
7. Accelerator pedal module, Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox	701
8. Engine/motor control unit, Radiator fan	702
9. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Oil level and oil temperature sender, ABS control unit, Power steering control unit, Engine/motor control unit	703
10. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	704
11. Cam adjustment actuator 8, Throttle valve module, Hall sender 3, Engine/motor control unit	705
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	706
13. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Turbocharger air recirculation valve. Fuel metering valve. Intake manifold flap valve. Valve for oil pressure control.	707

Piston cooling jet control valve	
14. Intake manifold sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	708
15. Intake manifold flap potentiometer, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	709
16. Hall sender, Fuel pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	710
17. Fuel tank leak detection module, Engine/motor control unit	711
18. Engine speed sender, Engine/motor control unit	712
096 - Airbag systems	713-721
1. Airbag systems	713
2. Driver side belt switch, Driver side seat position sensor, Airbag control unit	714
3. Driver seat adjustment operating unit, Airbag control unit, Data bus diagnostic interface, Side airbag igniter on driver side	715
4. Airbag control unit, Front seat belt on passenger side, Front seat belt on driver side	716
5. Rear side airbag crash sensor on driver side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	717
6. Front passenger side belt switch, Front passenger seat adjustment operating unit, Seat occupied sensor on front passenger side, Rear side airbag crash sensor on passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	718
7. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	719
8. Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	720
9. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Diagnostic connection	721
097 - Air conditioning system , (KH5)	722-730
1. Air conditioning system , (KH5)	722
2. Heater and air conditioning controls, Air conditioner sensor for fine particle concentration	723
3. Heater and air conditioning controls, Left vent temperature sender, Right vent temperature sender, Potentiometer for rear temperature selection, Fresh air blower control unit, Data bus diagnostic interface, Fresh air blower	724
4. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit	725
5. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator output temperature sender, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	726
6. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Potentiometer for left temperature flap control motor, Defroster flap control motor, Left temperature flap control motor	727
7. Heater and air conditioning controls, Potentiometer for right temperature flap control motor, Potentiometer for rear temperature flap control motor, Rear temperature flap control motor, Right temperature flap control motor	728
8. Air conditioner compressor	729
9. Air conditioner compressor	730
098 - Emergency call module , (NZ3)	731-733
1. Emergency call module , (NZ3)	731
2. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial, GPS aerial 2, Loudspeaker for emergency call module, Fuse holder C	732
3. Emergency call module control unit and communication unit, Front roof module	733
099 - Emergency call module , (NZ4),(I8T),(I8V)	734-736
1. Emergency call module , (NZ4),(I8T),(I8V)	734
2. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	735
3. Emergency call module control unit and communication unit, Telephone microphone, Roof aerial, Emergency call module aerial, Front roof module	736
100 - Emergency call module , (NZ2),(NZ4),(I8E),(I8T),(I8V)	737-740
1. Emergency call module , (NZ2),(NZ4),(I8E),(I8T),(I8V)	737
2. Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial 2	738

3. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	739
4. Emergency call module control unit and communication unit, Front roof module	740
101 - Sliding sunroof , (3FB)	741-743
1. Sliding sunroof , (3FB)	741
2. Sunroof button, Sliding sunroof adjustment control unit, Data bus diagnostic interface, Fuse holder C	742
3. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	743
102 - 2.5l petrol engine , DAZA,DNWA	744-768
1. 2.5l petrol engine , DAZA,DNWA	744
2. Main relay, Fuse holder A, Fuse holder B	745
3. Starter relay 1, Starter relay 2, Fuse holder B	746
4. Engine component power supply relay 2, Fuse holder B	747
5. Engine/motor control unit, Fuse holder C	748
6. Brake light switch, Engine/motor control unit	749
7. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	750
8. Lambda probe 1 after catalytic converter, Power steering control unit, Engine/motor control unit, Radiator fan	751
9. Data bus diagnostic interface, Engine/motor control unit	752
10. Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	753
11. Dual exhaust gas temperature sensor 1, Dual exhaust gas temperature sensor 2, Pressure differential sender 2 for particulate filter, Engine/motor control unit	754
12. Hall sender, Pressure differential sender for particulate filter, Engine/motor control unit, Charge pressure control solenoid valve, Turbocharger air recirculation valve, Crankcase breather valve	755
13. Oil pressure sender, Engine speed sender, Oil level and oil temperature sender, Engine/motor control unit	756
14. Knock sensor 1, Knock sensor 2, Engine/motor control unit, Ignition coil 1 with output stage, Coolant shut-off valve, Continued coolant circulation pump	757
15. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Ignition coil 5 with output stage	758
16. Throttle valve module, Engine/motor control unit, Fuel metering valve, Valve for oil pressure control	759
17. Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator for cylinder 1, Exhaust cam actuator for cylinder 2, Exhaust cam actuator for cylinder 3	760
18. Coolant temperature sender, Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit, Exhaust cam actuator for cylinder 4, Exhaust cam actuator for cylinder 5	761
19. Intake manifold sender, Charge pressure sender, Engine/motor control unit	762
20. Intermediate shaft speed sender, Engine/motor control unit	763
21. Fuel pressure sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Intake manifold flap valve, Solenoid for coolant circuit	764
22. Alternator with voltage regulator, Heater and air conditioning controls, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Air conditioner compressor	765
23. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	766
24. Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	767
25. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Injector 2, cylinder 5	768
103 - Battery, starter and alternator , (0K0),(8FC)	769-774
1. Battery, starter and alternator , (0K0),(8FC)	769
2. Battery, Battery monitor control unit, Fuses in fuse holder, Fuse holder C	770
3. Fuses in fuse holder, Fuse holder A, Terminal 30 wiring junction 2	771
4. Alternator with voltage regulator, Main relay, Fuse holder A, Fuse holder B	772
5. Starter, Engine/motor control unit, Fuse holder B	773
6. Engine/motor control unit	774
104 - Engine sound generator , (FN1),(GN1)	775-776
1. Engine sound generator , (FN1),(GN1)	775
2. Control unit for structure-borne sound, Actuator for structure-borne sound	776
105 - Battery, starter and alternator , (0K4)	777-784
1. Battery, starter and alternator , (0K4)	777
2. Fuse holder A	778
3. Battery, Starter, Battery monitor control unit, Fuse holder A	779
4.	780

5. Voltage converter (48 V/12 V), Starter-alternator, Voltage converter fan	781
6. Battery, 48 V, Voltage converter (48 V/12 V), Battery fan 1	782
7. Battery, 48 V, Fuse for voltage converter	783
8. Battery, 48 V	784
106 - Tyre Pressure Monitoring System , (7K3)	785-786
1. Tyre Pressure Monitoring System , (7K3)	785
2. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface	786
107 - Fuel system , (FN1)	787-789
1. Fuel system , (FN1)	787
2. Fuel delivery unit, Fuel pump control unit	788
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	789
108 - Assist systems , (6K2),(6K4),(QK1)	790-793
1. Assist systems , (6K2),(6K4),(QK1)	790
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	791
3. Adaptive cruise control unit, Front camera for driver assist systems, Windscreen heater for front sensors	792
4. Coupling point on left A-pillar, bottom	793
109 - 2.0l diesel engine , DTSA,DTSB,DTUA,DXNB,DXPA	794-819
1. 2.0l diesel engine , DTSA,DTSB,DTUA,DXNB,DXPA	794
2. Main relay, Fuse holder A, Fuse holder B	795
3. Automatic glow period control unit, High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B	796
4. Automatic glow period control unit, Low heat output relay, Fuse holder B, Fuse holder C	797
5. Magnetic clutch relay, Relay for reducing agent metering system, Fuse holder C	798
6. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	799
7. Engine/motor control unit	800
8. Engine/motor control unit, Heater element for crankcase breather, Valve for oil pressure control, Air conditioner compressor, Charge air cooling pump, Auxiliary pump for heating	801
9. Oil level and oil temperature sender, Power steering control unit, Data bus diagnostic interface, Engine/motor control unit, Injector 2 for reducing agent	802
10. Data bus diagnostic interface, Engine/motor control unit	803
11. Ignition/starter switch, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	804
12. Delivery unit for reducing agent metering system, Engine/motor control unit, Exhaust flap control unit	805
13. Delivery unit for reducing agent metering system, Onboard supply control unit, Engine/motor control unit, Control unit for reducing agent heater	806
14. Oil pressure sender, Charge pressure sender, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	807
15. Exhaust gas temperature sender 1, Pressure differential sender, Temperature sender for engine temperature regulation, Coolant temperature sender 2, Charge air temperature sender before charge air cooler, Engine/motor control unit	808
16. Coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Temperature sensor 2 for exhaust gas recirculation, Charge air temperature sender after charge air cooler, Engine/motor control unit	809
17. Brake light switch, Clutch position sender, Engine/motor control unit	810
18. Lambda probe 1 before catalytic converter, Control unit 3 for NOx sender, Particulate sensor, Engine/motor control unit	811
19. Control unit for NOx sender, Control unit 2 for NOx sender, Air mass meter, Engine/motor control unit, Fuel pressure regulating valve	812
20. Throttle valve module, Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	813
21. Engine temperature regulation module, Engine/motor control unit, Turbocharger 1 control unit, Coolant valve for cylinder head, Piston cooling jet control valve	814
22. Hall sender, Water level sender, Gearbox neutral position sender, Engine/motor control unit	815
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	816
24. Engine speed sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuel metering valve, Injector for reducing agent	817
25. Accelerator pedal module, Temperature and pressure sender for low-pressure fuel system, Fuel pressure sender, Engine/motor control unit	818
26. Engine/motor control unit, Radiator fan	819
110 - TV tuner , (ER5),(ER7),(QV1)	820-823
1. TV tuner , (ER5),(ER7),(QV1)	820
2. Control unit 1 for information electronics, TV tuner, Fuse holder C	821
3. Control unit in dash panel insert. TV tuner. Aerial amplifier 2	822

4. Aerial amplifier, TV tuner, Aerial amplifier 2 for TV	823
111 - MMI (information electronics 1) , (I8W),(I8Y)	824-830
1. MMI (information electronics 1) , (I8W),(I8Y)	824
2. Display unit for front information display and operating unit control unit, Fuse holder C	825
3. Display unit for front information display and operating unit control unit	826
4. Driver side volume regulator, Data bus diagnostic interface	827
5. Radio aerial 2, Aerial amplifier 2, Digital radio aerial	828
6. Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 2	829
7. Aerial, Aerial amplifier, Roof aerial, Internal vehicle communication aerial, Internal vehicle communication aerial 2, Front roof module	830
112 - Sound system , (8RL),(9VD),(I8Y),(I8W)	831-835
1. Sound system , (8RL),(9VD),(I8Y),(I8W)	831
2. Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	832
3. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Coupling point for front left door	833
4. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker, Coupling point for front right door	834
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Coupling point for rear left door, Coupling point for rear right door	835
113 - Sound system , (9VS),(I8W),(I8Y)	836-840
1. Sound system , (9VS),(I8W),(I8Y)	836
2. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Subwoofer, Fuse holder C	837
3. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	838
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker, Centre loudspeaker, Left effect loudspeaker, Centre loudspeaker 2	839
5. Control unit 1 for information electronics, Right effect loudspeaker, Front roof module	840
114 - Communication, Japan , (ER5),(I8W),(I8Y)	841-842
1. Communication, Japan , (ER5),(I8W),(I8Y)	841
2. Chip card reader control unit, Control unit 1 for information electronics, Dedicated short-range communication aerial, Fuse holder C, Fuse 16 on fuse holder C	842
115 - USB connections for data transfer , (I8Y),(I8W)	843-844
1. USB connections for data transfer , (I8Y),(I8W)	843
2. Control unit 1 for information electronics, Control unit with Android operating system, USB hub, Fuse holder C, Fuse 16 on fuse holder C, USB charging socket 2	844
116 - Mobile telephone systems , (9ZE),(9ZV),(I8W),(I8Y)	845-848
1. Mobile telephone systems , (9ZE),(9ZV),(I8W),(I8Y)	845
2. Onboard supply control unit, Control unit 1 for information electronics, Charging unit 1 for mobile devices, Aerial amplifier for mobile telephone, Front roof module	846
3. Aerial amplifier for mobile telephone, Roof aerial, LTE aerial 3	847
4. Aerial amplifier for mobile telephone	848
117 - Interface for external use , (IU3),(9B1)	849-850
1. Interface for external use , (IU3),(9B1)	849
2. Toll collection sender, Control unit 1 for information electronics, Control unit with Android operating system, USB hub, Fuse holder C, Fuse 16 on fuse holder C	850
118 - Infotainment MOST bus , (I8Y),(I8W)	851-852
1. Infotainment MOST bus , (I8Y),(I8W)	851
2. Control unit in dash panel insert, Control unit 1 for information electronics, TV tuner	852
119 - 2.0l petrol engine , DNPA	853-872
1. 2.0l petrol engine , DNPA	853
2. Main relay, Fuse holder A, Fuse holder B	854
3. Starter, Engine component power supply relay, Starter relay 1, Starter relay 2, Fuse holder B	855
4. Radiator fan control unit, Engine/motor control unit, Fuse holder C, Radiator fan, Radiator fan 2	856
5. Engine/motor control unit	857
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	858
7. Oil level and oil temperature sender, Engine/motor control unit, Ignition coil 4 with output stage, Coolant valve for gearbox, Spark plug 4, Coolant circulation pump	859
8. Cam adjustment actuator 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	860
9. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5. Cam adjustment actuator 6. Cam adjustment actuator 7. Cam adjustment actuator 8.	861

Engine/motor control unit	
10. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Actuator for engine temperature regulation	862
11. Engine speed sender, Coolant temperature sender, Pressure differential sender for particulate filter, Engine/motor control unit, Fuel metering valve	863
12. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Intake manifold sender, Intake air temperature sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	864
13. Lambda probe 1 before catalytic converter, Charge pressure control module, Lambda probe after catalytic converter, Position sender for charge pressure positioner, Engine/motor control unit, Charge pressure positioner, Lambda probe heater, Lambda probe 1 heater after catalytic converter	865
14. Dual exhaust gas temperature sensor 1, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	866
15. Brake light switch, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound	867
16. Charge pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	868
17. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	869
18. Engine/motor control unit	870
19. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	871
20. Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	872
120 - 2.0l petrol engine , DNNA	873-892
1. 2.0l petrol engine , DNNA	873
2. Main relay, Fuse holder A, Fuse holder B	874
3. Starter, Starter relay 1, Starter relay 2, Fuse holder B	875
4. Radiator fan control unit, Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C, Radiator fan, Radiator fan 2	876
5. Engine/motor control unit	877
6. Accelerator pedal module, Intake manifold sender, Intake air temperature sender, Intake manifold pressure sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Continued coolant circulation pump	878
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	879
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox	880
9. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	881
10. Cam adjustment actuator 8, Throttle valve module, Engine/motor control unit, Actuator for engine temperature regulation	882
11. Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit, Fuel metering valve, Intake manifold flap valve	883
12. Knock sensor 1, Coolant temperature sender, Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Valve for oil pressure control	884
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Charge pressure control module, Hall sender 3, Position sender for charge pressure positioner, Engine/motor control unit, Charge pressure positioner	885
14. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Dual exhaust gas temperature sensor 1, Lambda probe after catalytic converter, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	886
15. Brake light switch, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound	887
16. Charge pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	888
17. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	889
18. Engine/motor control unit	890
19. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	891
20. Steering column electronics control unit. Fuel pump control unit. Engine/motor control unit	892

121 - Overhead view camera , (KA6),(I8W),(I8Y)	893-897
1. Overhead view camera , (KA6),(I8W),(I8Y)	893
2. Data bus diagnostic interface, Control unit for overhead view camera, Left overhead view camera, Fuse holder C	894
3. Control unit for overhead view camera, Right overhead view camera, Rear overhead view camera	895
4. Control unit 1 for information electronics, Control unit for overhead view camera	896
5. Front overhead view camera	897
122 - Emergency call module , (I8W),(I8Y)	898-902
1. Emergency call module , (I8W),(I8Y)	898
2. Airbag control unit, Emergency call module control unit and communication unit, Emergency call module aerial 2, Fuse holder C	899
3. Data bus diagnostic interface, Emergency call module control unit and communication unit, Roof aerial, Loudspeaker for emergency call module	900
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front roof module	901
5. Emergency call module control unit and communication unit, Front roof module	902
123 - High-voltage system , (0K3)	903-915
1. High-voltage system , (0K3)	903
2. Air conditioning system relay, Fuse holder A, Fuse holder B, Fuse holder C	904
3. Power and control electronics for electric drive, Maintenance connector for high-voltage system, Three-phase current drive, Electric drive motor	905
4. Drive motor temperature sender, Drive motor rotor position sender 1, Power and control electronics for electric drive, Three-phase current drive, High-voltage heater (PTC)	906
5. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, High-voltage heater (PTC)	907
6. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Electrical air conditioner compressor	908
7. Coolant shortage indicator sender 2, Power and control electronics for electric drive, Airbag control unit	909
8. Heater and air conditioning controls, Power and control electronics for electric drive	910
9. Power and control electronics for electric drive, Data bus diagnostic interface	911
10. Power and control electronics for electric drive, Engine/motor control unit	912
11. Hybrid battery unit, Power and control electronics for electric drive	913
12. Coupling point on high-voltage battery	914
13. Coolant valve for high-voltage battery, Coolant pump for high-voltage battery	915
124 - 1.4l petrol engine , DGEA	916-933
1. 1.4l petrol engine , DGEA	916
2. Fuse holder A, Fuse holder B	917
3. Engine/motor control unit, Fuse holder B	918
4. Radiator fan control unit, Engine/motor control unit, Radiator fan	919
5. Coolant temperature sender, Radiator outlet coolant temperature sender, Coolant temperature sender for heater, Temperature sender before particulate filter, Temperature sender after particulate filter, Engine temperature sender 2, Engine/motor control unit	920
6. Pressure differential sender for particulate filter, Engine/motor control unit	921
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	922
8. Throttle valve module, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Throttle valve module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	923
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant pump for low-temperature circuit	924
10. Charge pressure sender, Charge pressure sender, Knock sensor 1, Intake air temperature sender 2, Position sender for charge pressure positioner, Engine/motor control unit, Charge pressure positioner	925
11. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake manifold sender, Hall sender, Intake manifold pressure sender, Intake manifold temperature sender, Hall sender 3, Engine/motor control unit	926
12. Engine/motor control unit, Coolant valve for gearbox, Coolant changeover valve 1, Coolant changeover valve 2, Coolant pump for high-temperature circuit	927
13. Accelerator pedal module, Engine speed sender, Accelerator position sender, Accelerator position sender 2, Fuel pressure sender, Engine/motor control unit	928
14. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe. Lambda probe after catalytic converter. Engine/motor control unit. Lambda probe heater.	929



Lambda probe 1 heater after catalytic converter	
15. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	930
16. Oil level and oil temperature sender, Engine/motor control unit, Brake servo, Coolant circulation pump before power and control electronics for electric drive	931
17. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Engine sound generator control unit	932
18. Fuel tank pressure sender, Entry and start authorisation control unit, Fuel pump control unit, Engine/motor control unit, Fuel tank switch-off valve	933
125 - Automatic gearbox , (0IC)	934-938
1. Automatic gearbox , (0IC)	934
2. Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder C	935
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	936
4. Onboard supply control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	937
5. Selector lever sensors control unit, Ignition key withdrawal lock solenoid, Selector lever position display	938
126 - High-voltage battery system , (0K3)	939-946
1. High-voltage battery system , (0K3)	939
2. Battery regulation control unit	940
3. Battery regulation control unit	941
4. Battery temperature sender, Battery temperature sender 2, Battery regulation control unit	942
5. Battery regulation control unit	943
6. Coupling point 1 for battery modules, Coupling point 2 for battery modules	944
7. Battery module 1, Battery module 2, Battery module 3, Battery module 4	945
8. Battery module 5, Battery module 6, Battery module 7, Battery module 8	946
127 - Battery, starter and alternator , (0K3)	947-949
1. Battery, starter and alternator , (0K3)	947
2. Power and control electronics for electric drive, Power steering control unit, Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder B, Radiator fan	948
3. Battery, Battery monitor control unit, Data bus diagnostic interface, Fuse holder C, Fuse holder J	949
128 - High-voltage battery charging , (0K3)	950-956
1. High-voltage battery charging , (0K3)	950
2. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, Fuse holder B, Maintenance connector for high-voltage system	951
3. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Power and control electronics for electric drive, Electric drive control unit	952
4. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, High-voltage battery charging socket 1, Electrical air conditioner compressor, High-voltage heater (PTC)	953
5. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, Temperature sender for charging socket 1, High-voltage battery charging socket 1	954
6. Charging unit 1 for high-voltage battery, Data bus diagnostic interface, High-voltage battery charging socket 1	955
7. Charging unit 1 for high-voltage battery, Engine/motor control unit	956
129 - Engine sound generator , (0K3)	957-959
1. Engine sound generator , (0K3)	957
2. Engine sound generator control unit, Fuse holder C	958
3. Data bus diagnostic interface, Engine/motor control unit, Engine sound generator control unit, Actuator 1 for engine sound generator	959
130 - Pilot line for high-voltage system , (0K3)	960-962
1. Pilot line for high-voltage system , (0K3)	960
2. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Maintenance connector for high-voltage system, Electrical air conditioner compressor, High-voltage heater (PTC)	961
3. Hybrid battery unit, Battery regulation control unit, Coupling point on high-voltage battery, Maintenance connector for high-voltage system	962
131 - Adjustable driver and front passenger seats , (3L4)	963-967
1. Adjustable driver and front passenger seats , (3L4)	963
2. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	964
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver door control unit, Data bus diagnostic interface, Driver seat longitudinal adjustment motor	965
4. Driver operating unit for memory settings, Front passenger seat adjustment operating unit, Airbag control unit. Driver door control unit	966

5. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	967
132 - 1.5l petrol engine , DXDB	968-991
1. 1.5l petrol engine , DXDB	968
2. Main relay, Fuse holder A, Fuse holder B	969
3. Starter, Starter relay 1, Starter relay 2, Fuse holder B, Fuse holder C	970
4. Engine/motor control unit	971
5. Gearbox neutral position sender, Engine/motor control unit, Radiator fan	972
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	973
7. Function unit for active oil separation, Engine/motor control unit, Ignition coil 4 with output stage, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1, Spark plug 4	974
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3	975
9. Engine/motor control unit, Exhaust cam actuator for cylinder 3	976
10. Engine/motor control unit	977
11. Throttle valve module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	978
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit, Fuel metering valve	979
13. Engine temperature regulation module, Pressure sensor for activated charcoal filter air flushing, Pressure differential sender for particulate filter, Engine/motor control unit	980
14. Engine speed sender, Dual exhaust gas temperature sensor 1, Fuel pressure sender, Exhaust gas pressure sensor 1, Temperature sender before particulate filter, Temperature sender after particulate filter, Engine/motor control unit	981
15. Intake manifold sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Intake manifold temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	982
16. Accelerator pedal module, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	983
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	984
18. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound	985
19. Brake light switch, Clutch position sender, Engine/motor control unit	986
20. ABS control unit, Engine/motor control unit, Charge air cooling pump	987
21. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	988
22. Data bus diagnostic interface, Engine/motor control unit	989
23. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Engine/motor control unit, Exhaust flap control unit	990
24. Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	991
133 - 1.5l petrol engine , DSVA	992-1011
1. 1.5l petrol engine , DSVA	992
2. Main relay, Fuse holder A, Fuse holder B	993
3. Starter, Starter relay 1, Starter relay 2, Fuse holder B, Fuse holder C	994
4. Engine/motor control unit	995
5. Engine/motor control unit, Radiator fan, Activated charcoal filter air flushing pump	996
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	997
7. Function unit for active oil separation, Engine/motor control unit, Ignition coil 4 with output stage, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1, Spark plug 4	998
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Cut-off valve for activated charcoal filter air flushing	999
9. Throttle valve module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	1000
10. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit, Injector, cylinder 3	1001
11. Engine temperature regulation module, Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit, Injector, cylinder 4, Fuel metering valve	1002
12. Dual exhaust gas temperature sensor 1, Fuel pressure sender, Temperature sender before particulate filter, Temperature sender after particulate filter, Pressure differential sender for particulate filter, Engine/motor control unit	1003
13. Engine speed sender, Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Exhaust gas pressure sensor 1, Engine/motor control unit	1004

14. Intake manifold sender, Intake manifold pressure sender, Intake manifold temperature sender, Radiator outlet coolant temperature sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	1005
15. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	1006
16. Lambda probe 1 after catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound	1007
17. Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump	1008
18. Brake light switch, Data bus diagnostic interface, Engine/motor control unit	1009
19. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	1010
20. Fuel tank leak detection module, Fuel pump control unit, Engine/motor control unit	1011
134 - 2.0l petrol engine , DTHA	1012-1031
1. 2.0l petrol engine , DTHA	1012
2. Main relay, Fuse holder A, Fuse holder B	1013
3. Starter, Starter relay 1, Starter relay 2, Fuse holder B	1014
4. Radiator fan control unit, Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C, Radiator fan	1015
5. Oil level and oil temperature sender, Engine/motor control unit	1016
6. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	1017
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	1018
8. Coolant temperature sender, Hall sender 3, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1019
9. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1020
10. Cam adjustment actuator 8, Throttle valve module, Engine temperature regulation module, Engine/motor control unit	1021
11. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1022
12. Hall sender, Knock sensor 1, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	1023
13. Lambda probe 1 before catalytic converter, Engine speed sender, Engine/motor control unit, Charge pressure positioner	1024
14. Accelerator pedal module, Lambda probe 1 after catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	1025
15. Intake manifold sender, Dual exhaust gas temperature sensor 1, Intake air temperature sender, Air mass meter, Intake manifold pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit	1026
16. Engine/motor control unit, Fuel metering valve	1027
17. Brake light switch, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1028
18. Charge pressure sender, Fuel tank leak detection module, Engine/motor control unit, Coolant valve for gearbox	1029
19. Ignition/starter switch, Entry and start authorisation control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	1030
20. Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	1031
135 - Data bus network	1032-1048
1. Data bus network	1032
2. Data bus diagnostic interface, Fuse holder B, Fuse holder C, Diagnostic connection	1033
3. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Diagnostic connection	1034
4. Control unit in dash panel insert, Entry and start authorisation control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	1035
5. Heater and air conditioning controls, Control unit for seat and steering column adjustment with memory function, Control unit in dash panel insert, Data bus diagnostic interface, Emergency call module control unit and communication unit	1036
6. Front passenger door control unit, Data bus diagnostic interface	1037
7. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface, Rear lid control unit	1038
8. Driver door control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	1039
9. Auxiliary heater control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control. Reversina camera svstem control unit. Control unit 1 for information	1040

electronics	
10. Driver side volume regulator, Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Charging unit 1 for mobile devices	1041
11. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems	1042
12. Selector lever, Airbag control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	1043
13. Automatic gearbox control unit, Airbag control unit, Data bus diagnostic interface	1044
14. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound	1045
15. Parking aid control unit, Data bus diagnostic interface, Engine/motor control unit, Auxiliary hydraulic pump 1 for gearbox oil	1046
16. ABS control unit, Electronically controlled damping control unit, All-wheel drive control unit, Control unit for overhead view camera	1047
17. Alternator with voltage regulator, Power steering control unit	1048
801 - - Fitting locations: Earth points - 3	1049-1077
1. - Fitting locations: Earth points	1049-1077
1.1 Earth points in front part of vehicle	1052-1063
1.1.1 Front from left	1053
1.1.2 Front from left, models with hybrid drive (0K3)	1053
1.1.3 Front from left, wheel housing, models with hybrid drive (0K3)	1054
1.1.4 Front from right	1055
1.1.5 Front from right, models with 48-volt system (0K4)	1056
1.1.6 Front from below, models with hybrid drive (0K3)	1057
1.1.7 Petrol engine, DADA, DFYA, DKTA, DKTC, DPCA, DHHA, DSNA, DTJA, CZPA, CZRA, DSPA, DXPB, DSWA, DTHA	1058
1.1.8 Petrol engine, CZDA, DGEA	1059
1.1.9 Petrol engine, DAZA, DNWA	1060
1.1.10 Petrol engine, DNPA	1061
1.1.11 Petrol engine, DNNA	1062
1.1.12 Manual gearbox, 02Q,0BB,0C9	1063
1.1.13 Automatic gearbox, 09P	1064
1.2 Earth points in middle part of vehicle	1064-1068
1.2.1 At front of interior	1065
1.2.2 Front left of interior	1066
1.2.3 Front right of interior	1066
1.2.4 Front middle of interior	1067
1.2.5 Front passenger seat	1068
1.3 Earth points in rear part of vehicle	1069-1074
1.3.1 Rear lid	1070
1.3.2 Left of luggage compartment, models with no hybrid drive (0K0), (0K4)	1070
1.3.3 Left of luggage compartment, models with hybrid drive (0K3)	1071
1.3.4 Right of luggage compartment	1072
1.3.5 Right of luggage compartment, models with 48-volt system (0K4)	1073
1.3.6 Luggage compartment, view of centre, models with 2.5l petrol engine	1074
1.4 Earth points in underbody	1075-1077
1.4.1 Front of underbody	1075
1.4.2 Underbody, models with hybrid drive (0K3)	1076-1077
802 - -Fitting locations: Fuses - 3	1078-1125
1. -Fitting locations: Fuses	1078-1125
1.1 Fuses in fuse holder -S-, for models with 2.5l petrol engine	1080
1.1.1 Fitting location, fuses in fuse holder -S-, for models with 2.5l petrol engine	1080
1.1.2 Fuse assignment, fuses in fuse holder -S-, for models with 2.5l petrol engine	1081
1.2 Fuse holder A -SA-	1081-1087
1.2.1 Fitting location, fuse holder A -SA-, not for models with 2.5l petrol engine/hybrid drive	1082
1.2.2 Fuse assignment on fuse holder A -SA-, not for models with 2.5l petrol engine/hybrid drive	1083
1.2.3 Fuse assignment on fuse holder A -SA-, for models with 2.5l petrol engine	1084
1.2.4 Fitting location, fuse holder A -SA-, for models with hybrid drive	1085-1086
1.2.5 Fuse assignment on fuse holder A -SA-, for models with hybrid drive	1087
1.3 Fuse holder B -SB-	1088-1096
1.3.1 Fitting location of fuse holder B -SB-	1088-1089
1.3.2 Fuse locations on fuse holder B -SB-	1090-1096
1.4 Fuse holder C -SC-	1097-1105
1.4.1 Fitting location, fuse holder C -SC-, left-hand drive	1097-1098
1.4.2 Fitting location, fuse holder C -SC-, right-hand drive	1099-1101

1.4.3 Fuse assignment on fuse holder C -SC-	1102-1105
1.5 Fuse holder D -SD-	1106-1107
1.5.1 Fitting location fuse holder D -SD-, left-hand drive	1106-1107
1.5.2 Fuse assignment on fuse holder D -SD-	1108
1.6 Fuse holder F -SF-	1108-1111
1.6.1 Fitting location, fuse holder F -SF-, left-hand drive	1108-1109
1.6.2 Fitting location, fuse holder F -SF-, right-hand drive	1110-1111
1.6.3 Fuse assignment on fuse holder F -SF-	1112
1.7 Fuse holder G -SG-	1112-1115
1.7.1 Fitting location of fuse holder G -SG-, left-hand drive	1112-1113
1.7.2 Fitting location, fuse holder G -SG-, right-hand drive	1114-1115
1.7.3 Fuse assignment on fuse holder G -SG-	1116
1.8 Fuse holder J -SJ-, for models with hybrid drive	1116-1117
1.8.1 Fitting location, fuse holder J -SJ-, for models with hybrid drive	1116-1117
1.8.2 Fuse assignment on fuse holder J -SJ-, for models with hybrid drive	1118
1.9 Fuse holder in the power and control electronics for electric drive -JX1-, for models with hybrid drive	1118-1119
1.9.1 Fitting location, fuse holder in the power and control electronics for electric drive -JX1-, for models with hybrid drive	1118
1.9.2 Fuse assignment, fuse holder in the power and control electronics for electric drive -JX1-, for models with hybrid drive	1119
1.10 Fuse holder in the switching unit for high-voltage battery -SX6-, for models with hybrid drive	1120-1121
1.10.1 Fitting location, fuse holder in the switching unit for high-voltage battery -SX6-, for models with hybrid drive	1120
1.10.2 Fuse assignment, fuse holder in the switching unit for high-voltage battery -SX6-, for models with hybrid drive	1121
1.11 Front passenger seat adjustment thermal fuse 1 -S46-	1122-1125
1.11.1 Fitting location of front passenger seat adjustment thermal fuse 1 -S46-, left-hand drive models	1122
1.11.2 Fitting location of front passenger seat adjustment thermal fuse 1 -S46-, right-hand drive models	1123-1124
1.11.3 Fuse assignment of front passenger seat adjustment thermal fuse 1 -S46-	1125
803 - -Fitting locations: Relays - 1	1126-1130
1. -Fitting locations: Relays	1126-1130
1.1 Fuse holder B -SB-	1126-1127
1.1.1 Relay in fuse holder B -SB-, variant 1	1126
1.1.2 Relay in fuse holder B -SB-, variant 2	1127
1.2 Fuse holder C -SC-	1128-1130
1.2.1 Relay in fuse holder C -SC-, left-hand drive	1129
1.2.2 Relay in fuse holder C -SC-, right-hand drive	1129-1130
804 - - Fitting locations: front part of vehicle - 3	1131-1233
1. - Fitting locations: front part of vehicle	1131-1233
1.1 Front, view from front	1168
1.2 Front, view from left	1169-1173
1.2.1 Front, view from left, part 1	1170-1172
1.2.2 Front, view from left, part 2	1173
1.2.3 Front, view from left, for models with hybrid drive	1173
1.3 Front, view from right	1174-1178
1.3.1 Front, view from right, part 1	1175-1176
1.3.2 Front, view from right, part 2	1177
1.3.3 Front, view from right, for models with hybrid drive	1178
1.4 1.4l petrol engine, CZDA,DJSA	1179-1181
1.4.1 1.4l petrol engine, CZDA, DJSA, from front	1180
1.4.2 1.4l petrol engine, CZDA,DJSA, from above	1180
1.4.3 1.4l petrol engine, CZDA,DJSA, from rear	1181
1.5 1.4l petrol engine, DGEA, for models with hybrid drive	1182-1184
1.5.1 1.4l petrol engine, DGEA, from front, for models with hybrid drive	1183
1.5.2 1.4l petrol engine, DGEA, from above, for models with hybrid drive	1183
1.5.3 1.4l petrol engine, DGEA, from rear, for models with hybrid drive	1184
1.6 1.5l petrol engine, DADA,DPCA,DFYA	1185-1188
1.6.1 1.5l petrol engine, DADA,DPCA,DFYA, from front	1186
1.6.2 1.5l petrol engine, DADA,DPCA,DFYA, from right	1187
1.6.3 1.5l petrol engine, DADA,DPCA,DFYA, from rear	1187
1.6.4 1.5l petrol engine, DADA,DPCA,DFYA, from above	1188
1.7 1.5l petrol engine, DXDB,DSVA	1189-1193
1.7.1 1.5l petrol engine. DXDB.DSVA. from front	1190

1.7.2 1.5l petrol engine, DXDB, from above	1191
1.7.3 1.5l petrol engine, DSVA, from above	1191
1.7.4 1.5l petrol engine, DXDB,DSVA, from right	1192
1.7.5 1.5l petrol engine, DXDB,DSVA, from rear	1193
1.8 2.0l petrol engine, DKTA,DKTC	1194-1197
1.8.1 2.0l petrol engine, DKTA,DKTC, from front	1195
1.8.2 2.0l petrol engine, DKTA,DKTC, from right	1195
1.8.3 2.0l petrol engine, DKTA,DKTC, from rear	1196
1.8.4 2.0l petrol engine, DKTA,DKTC, from above	1197
1.9 2.0l petrol engine, CZPA,CZRA,DHHA,DKVB,DPLA,DSPA,DSNA,DKXA,DTJA,DTHA	1198-1205
1.9.1 2.0l petrol engine, CZPA,CZRA,DHHA,DKVB,DPLA,DSPA,DSNA,DKXA,DTJA,DTHA, from front	1199
1.9.2 2.0l petrol engine, CZPA,CZRA,DHHA,DKVB,DPLA,DSPA,DSNA,DKXA,DTJA,DTHA, from above	1200-1201
1.9.3 2.0l petrol engine, CZPA,CZRA,DHHA,DKVB,DPLA,DSPA,DSNA,DKXA,DTJA,DTHA, from left	1202
1.9.4 2.0l petrol engine, CZPA,CZRA,DHHA,DKVB,DPLA,DSPA,DSNA,DKXA,DTJA,DTHA, from right	1203
1.9.5 2.0l petrol engine, CZPA,CZRA,DHHA,DKVB,DPLA,DSPA,DSNA,DKXA,DTJA,DTHA, from rear	1203
1.9.6 2.0l petrol engine, DKXA,DTJA, from above	1204
1.9.7 2.0l petrol engine, DKVB,DPLA,DTJA,DTHA, from rear	1205
1.10 2.0l petrol engine, DNNA	1206-1209
1.10.1 2.0l petrol engine, DNNA, from front	1207
1.10.2 2.0l petrol engine, DNNA, from above	1207
1.10.3 2.0l petrol engine, DNNA, from right	1208
1.10.4 2.0l petrol engine, DNNA, from rear	1209
1.11 2.0l petrol engine, DNPA	1210-1214
1.11.1 2.0l petrol engine, DNPA, from front	1211
1.11.2 2.0l petrol engine, DNPA, from above	1212
1.11.3 2.0l petrol engine, DNPA, from left	1212
1.11.4 2.0l petrol engine, DNPA, from right	1213
1.11.5 2.0l petrol engine, DNPA, from rear	1214
1.12 2.5l petrol engine, DAZA,DNWA	1215-1218
1.12.1 2.5l petrol engine, DAZA,DNWA, from front	1216
1.12.2 2.5l petrol engine, DAZA,DNWA, from above	1216
1.12.3 2.5l petrol engine, DAZA,DNWA, from rear	1217
1.12.4 2.5l petrol engine, DAZA DNWA, from rear with exhaust system	1218
1.13 2.0l diesel engine, DFGA,DFHA,DBGC	1219-1222
1.13.1 2.0l diesel engine, DFGA,DFHA,DBGC, from front	1220
1.13.2 2.0l diesel engine, DFGA,DFHA,DBGC, from left	1220
1.13.3 2.0l diesel engine, DFGA,DFHA,DBGC, from rear	1221
1.13.4 2.0l diesel engine, DFGA,DFHA,DBGC, from above	1222
1.14 2.0l diesel engine, DTSA,DTSB,DTUA,DXNB,DXPA	1223-1226
1.14.1 2.0l diesel engine, DTSA,DTSB,DTUA,DXNB,DXPA, from front	1224
1.14.2 2.0l diesel engine, DTSA,DTSB,DTUA,DXNB,DXPA, from above	1225
1.14.3 2.0l diesel engine, DTSA,DTSB,DTUA,DXNB,DXPA, from right	1225
1.14.4 2.0l diesel engine, DTSA,DTSB,DTUA,DXNB,DXPA, from rear	1226
1.15 Manual gearbox	1227
1.15.1 Manual gearbox, 02Q,0BB,0C9	1227
1.16 Dual clutch gearbox	1228-1231
1.16.1 Dual clutch gearbox, 0DF	1229
1.16.2 Dual clutch gearbox, 0GC,0DW	1229
1.16.3 Dual clutch gearbox, 0DL	1230
1.16.4 Dual clutch gearbox, 0D9	1231
1.17 Automatic gearbox	1232-1233
1.17.1 Automatic gearbox, 09P	1232-1233
805 - - Fitting locations: middle part of vehicle - 3	1234-1312
1. Fitting locations: middle part of vehicle	1234-1312
1.1 At front of interior	1258-1282
1.1.1 Front left of interior, LHD models	1258-1259
1.1.2 Front left of interior, RHD models	1260-1261
1.1.3 Left footwell, LHD models	1262-1263
1.1.4 Right footwell, RHD models	1264
1.1.5 Front right of interior, LHD models	1265-1266
1.1.6 Front right of interior, RHD models	1267-1268
1.1.7 Dash panel, LHD models	1269
1.1.8 Dash panel, RHD models	1270
1.1.9 Steering wheel	1271
1.1.10 Steering column	1271-1272
1.1.11 Centre console	1273

1.1.12 Centre console, LHD models	1274-1275
1.1.13 Centre console, RHD models	1276
1.1.14 Left front seat	1277-1278
1.1.15 Front seat heater, left seat	1279
1.1.16 Right front seat	1280-1281
1.1.17 Front seat heater, right seat	1282
1.2 Rear interior	1283-1287
1.2.1 Rear interior, view from left	1284-1285
1.2.2 Rear interior, view from right	1286-1287
1.3 Roof	1288-1293
1.3.1 Roof, part 1	1288-1289
1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA	1290-1291
1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FU	1292
1.3.4 Roof, part 2, with sliding/tilting sunroof, 3FB	1293
1.4 Doors	1294-1304
1.4.1 Driver door, left-hand drive models	1294-1295
1.4.2 Driver door, right-hand drive models	1296-1297
1.4.3 Front passenger door, left-hand drive models	1298-1299
1.4.4 Front passenger door, right-hand drive models	1300
1.4.5 Rear left door	1301-1302
1.4.6 Rear right door	1303-1304
1.5 Heater and air conditioning unit	1305-1310
1.5.1 Air conditioning system, KH6, part 1	1306-1307
1.5.2 Air conditioning system, KH6, part 2	1308
1.5.3 Climatronic, 9AK, KH5, part 1	1309
1.5.4 Climatronic, 9AK, KH5, part 2	1310
1.6 Connector assignments	1311-1312
1.6.1 Connector assignment for onboard supply control unit -J519-	1311-1312
806 - - Fitting locations: rear part of vehicle - 1	1313-1328
1. Fitting locations: rear part of vehicle	1313-1328
1.1 Rear lid	1316-1317
1.2 Rear bumper	1318-1319
1.3 Rear side, view from left	1320-1322
1.3.1 Rear side, view from left, Q3, K4H	1320
1.3.2 Rear side, view from left, Q3 Sportback, K5A	1321
1.3.3 Rear side, view from left, for models with hybrid drive, 0K3	1322
1.4 Rear side, view from right	1323-1324
1.4.1 Rear side, view from right, Q3, K4H	1324
1.4.2 Rear side, view from right, Q3 Sportback, K5A	1324
1.5 Rear side, view of centre	1325-1328
1.5.1 Rear side, view of centre, models with 2.5l petrol engine	1326
1.5.2 Rear side, view of centre, models with 48-volt hybrid system, 0K4	1326
1.5.3 Rear side, view of centre, models with hybrid drive, 0K3	1327-1328
807 - -Fitting locations: vehicle underbody - 3	1329-1336
1. -Fitting locations: vehicle underbody	1329-1336
1.1 Rear underbody	1331-1336
1.1.1 Rear underbody, all engines	1331
1.1.2 Rear underbody, for models with diesel engine	1332
1.1.3 Rear underbody, for models with petrol engine, DAZA, DNWA	1333
1.1.4 Rear of underbody, for models with hybrid drive	1334
1.1.5 Rear of underbody, high-voltage battery system	1335-1336
830 - -Connector views: parts with prefix A to D - 3	1337-1349
1. -Connector views: parts with prefix A to D	1337-1349
1.1 Battery 48 V -A6-	1337
1.1.1 14-pin connector -T14d-	1337
1.2 Voltage converter, 48 V/12 V -A7-	1338
1.2.1 3-pin connector -T3s-	1338
1.2.2 10-pin connector -T10j-	1338
1.3 Hybrid battery unit -AX1-	1339
1.3.1 6-pin connector -T6bt-	1339
1.4 Charging unit 1 for high-voltage battery -AX4-	1340-1343
1.4.1 4-pin connector -T4zol-	1340
1.4.2 5-pin connector -T5ch-	1341
1.4.3 5-pin connector -T5cj-	1342
1.4.4 5-pin connector -T5cl-	1342
1.4.5 60-pin connector -T60b-	1343

1.5 Starter -B-	1344
1.5.1 1-pin connector -T1gt-	1344
1.6 Starter-alternator -C29-	1344
1.6.1 6-pin connector -T6br-	1344
1.7 Alternator with voltage regulator -CX1-	1345
1.7.1 2-pin connector -T2gg-	1345
1.8 Ignition/starter switch -D-	1346
1.8.1 6-pin connector -T6m-	1346
1.9 Immobiliser reader coil -D2-	1347
1.9.1 2-pin connector -T2av-	1347
1.10 Electronic ignition lock -D9-	1348-1349
1.10.1 2-pin connector -T2bi-	1348-1349
831 - -Connector views: parts with prefix E - 3	1350-1389
1. -Connector views: parts with prefix E	1350-1389
1.1 Light switch -E1-	1351
1.1.1 4-pin connector -T4w-	1351
1.2 Driver side belt switch -E24-	1352
1.2.1 2-pin connector -T2jk-	1352
1.3 Front passenger side belt switch -E25-	1352
1.3.1 2-pin connector -T2fw-	1352
1.4 Glove compartment light switch -E26-	1353
1.4.1 3-pin connector -T3l-	1353
1.5 Driver side volume regulator -E67-	1354
1.5.1 6-pin connector -T6n-	1354
1.6 Driver seat lumbar support adjustment switch -E176-	1355
1.6.1 6-pin connector -T6al-	1355
1.7 Front passenger seat lumbar support adjustment switch -E177-	1356
1.7.1 6-pin connector -T6aw-	1356
1.8 Key operated switch to deactivate front passenger side airbag -E224-	1357
1.8.1 6-pin connector -T6j-	1357
1.9 Rear lid remote release button -E233-	1358-1359
1.9.1 4-pin connector -T4bo-	1358
1.9.2 10-pin connector -T10q-	1359
1.10 Rear lid handle release button -E234-	1360
1.10.1 2-pin connector -T2cf-	1360
1.11 Driver side interior locking button for central locking system -E308-	1360
1.11.1 4-pin connector -T4bt-	1360
1.12 Front passenger side interior locking button for central locking system -E309-	1361
1.12.1 4-pin connector -T4by-	1361
1.13 Selector lever -E313-	1362
1.13.1 10-pin connector -T10a-	1362
1.14 Fuel tank flap release button -E319-	1363
1.14.1 4-pin connector -T4fa-	1363
1.15 Flashing lights switch -E373-	1364
1.15.1 6-pin connector -T6bp-	1364
1.16 Entry and start authorisation button -E408-	1365
1.16.1 6-pin connector -T6l-	1365
1.17 Driver side operating unit for memory settings -E464-	1366
1.17.1 5-pin connector -T5bt-	1366
1.18 Driver seat adjustment operating unit -E470-	1367-1368
1.18.1 6-pin connector -T6ak-	1367
1.18.2 10-pin connector -T10t-	1368
1.18.3 12-pin connector -T12o-	1369
1.19 Front passenger seat adjustment operating unit -E471-	1369-1370
1.19.1 6-pin connector -T6av-	1369
1.19.2 10-pin connector -T10w-	1370
1.20 Electric hinged tow coupling attachment button -E474-	1371
1.20.1 5-pin connector -T5z-	1371
1.21 Operating unit for special signals -E507-	1372
1.21.1 20-pin connector -T20k-	1372
1.22 Rear driver side interior locking button for central locking system -E717-	1373
1.22.1 4-pin connector -T4bn-	1373
1.23 Rear passenger side interior locking button for central locking system -E718-	1374
1.23.1 4-pin connector -T4ef-	1374
1.24 Warning buzzer button -E865-	1375
1.24.1 6-pin connector -T6bk-	1375



1.25 Footwell light button -E866-	1376
1.25.1 6-pin connector -T6bl-	1376
1.26 Interior mirror -EX5-	1377
1.26.1 8-pin connector -T8b-	1377
1.27 Exterior mirror adjuster -EX11-	1378
1.27.1 4-pin connector -T4br-	1378
1.28 Parking brake button -EX12-	1379
1.28.1 12-pin connector -T12c-	1379
1.29 Heater and air conditioning controls -EX21-	1380-1381
1.29.1 16-pin connector -T16f-	1380
1.29.2 16-pin connector -T16g-	1381
1.29.3 20-pin connector -T20b-	1382
1.30 Centre switch module in dash panel -EX22-	1382
1.30.1 20-pin connector -T20c-	1382
1.31 Window regulator switch in front passenger door -EX27-	1383
1.31.1 4-pin connector -T4bx-	1383
1.32 Module for battery charge selector buttons -EX32-	1384
1.32.1 8-pin connector -T8ae-	1384
1.33 Operating unit for driver door window regulator -EX36-	1385
1.33.1 10-pin connector -T10n-	1385
1.34 Operating unit for rear lid control -EX58-	1386-1387
1.34.1 4-pin connector -T4aj-	1386
1.34.2 4-pin connector -T4ak-	1387
1.35 Operating unit in rear door, front passenger side -EX60-	1388
1.35.1 4-pin connector -T4ca-	1388
1.36 Operating unit in rear driver side door -EX61-	1388-1389
1.36.1 4-pin connector -T4bj-	1388-1389