

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	1
1.3	Engine number	2
1.4	Vehicle identification number	4
1.5	Vehicle data sticker	4
1.6	Warnings for high-voltage vehicles	5
2	Preparations	10
2.1	Vehicle: raising	10
2.2	Engine cover panel: removing and installing	11
2.3	Noise insulation: removing and installing	15
2.4	Window regulators: activating automatic open/close function	17
2.5	Vehicle diagnostic tester: connecting	17
3	Maintenance	20
3.1	Diesel particulate filter: reading out ash deposit volume	23
3.2	Event memory: reading out and erasing using Guided Fault Finding	24
3.3	Navigation system (MMI basic): releasing eject button	25
3.4	MMI navigation system: unloading hard disk	26
3.5	MMI navigation system: loading navigation CD/DVD	26
3.6	MMI navigation system: checking correct position on navigation map and setting if necessary	26
3.7	Service interval display: resetting service event	27
3.8	Transport mode: deactivating	27
3.9	Transport mode: checking activation and activating if necessary	28
3.10	Battery: reading out status and sending diagnostic log	29
3.11	Battery: checking electrolyte level	30
3.12	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	33
3.13	Battery: determining and recording state of charge (SOC)	35
3.14	Mirror hanger indicating defective battery: renewing battery on affected vehicles	38
3.15	Data sheet for Radio Equipment Directive: printing and placing in glove compartment	38
3.16	Brake fluid: changing	38
3.17	Brake fluid (vehicles older than 12 months): changing	43
3.18	Brake fluid: checking fluid level	43
3.19	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	43
3.20	Brake pads: checking thickness	44
3.21	Brake discs: checking for surface rust and operating brakes to clean if necessary	45
3.22	Parking brake: releasing	46
3.23	Tyres: checking condition and wear pattern, and checking and recording tread depth	46
3.24	Tyres: checking tyre pressures and adjusting if necessary	47
3.25	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	48
3.26	Tyre Pressure Loss Indicator: storing changed tyre pressures	49
3.27	Tyre repair kit: checking that set is complete, and checking and recording expiry date	50
3.28	Wheel bolts: tightening to specified torque	50
3.29	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	51
3.30	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	52
3.31	Engine, gearbox, final drive and steering: checking for leaks and damage	56
3.32	Steering boots and inner hose clips: checking secure seating	56
3.33	Vehicle (from below): checking for damage	57
3.34	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	57
3.35	Roof insert - panoramic sliding sunroof: cleaning and lubricating	57



3.36	Water drains - panoramic sliding sunroof: checking	62
3.37	Door hinges with separate door arrester: cleaning and lubricating	63
3.38	Front lid arrester hook: lubricating	64
3.39	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	65
3.40	Wiper blades: checking for damage	66
3.41	Headlight washer system: checking operation	67
3.42	Headlights: checking for correct adjustment	68
3.43	Headlights and reversing lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	69
3.44	Luggage compartment lighting: checking operation	70
3.45	Luggage compartment: removing protective film and felt pieces	70
3.46	Glove compartment light, interior lighting and reading light: checking operation	71
3.47	Horn: checking operation	71
3.48	Passenger airbag: checking key switch on/off and setting to "on"	72
3.49	Owner's literature: checking that all documents are present	72
3.50	Service wallet: affixing vehicle data sticker	72
3.51	Seat belts: checking that retaining rivets are fitted, and checking locking action of automatic belt retractor	73
3.52	Vehicle interior: removing protective covers for seats and carpet	73
3.53	Vehicle interior: checking that it is clean and cleaning if necessary	73
3.54	Vehicle interior: removing any objects other than those protecting interior surfaces	73
3.55	Vehicle interior and exterior: checking for and documenting any damage	73
3.56	Instrument cluster: checking warning lamps	74
3.57	Warning triangle: checking availability	74
3.58	First-aid kit: checking and recording expiry date	74
3.59	Vehicle keys: checking operation and recording number of keys given to customer	74
3.60	Vehicle key: removing from ignition lock	75
3.61	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	75
3.62	Sun visors: checking that they are folded up and folding up if necessary	75
3.63	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	75
3.64	Engine oil: draining	76
3.65	Engine oil: extracting	77
3.66	Engine oil: renewing oil filter	78
3.67	Engine oil: filling up	86
3.68	Engine oil: checking oil level and correcting if necessary	87
3.69	Poly V-belts for ancillaries: checking	89
3.70	Spark plugs: renewing	90
3.71	Hydraulic system: checking fluid level	100
3.72	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	101
3.73	Air filter: renewing filter element and cleaning housing	104
3.74	Plenum chamber and water drains: checking for dirt	112
3.75	Snow screen: cleaning	114
3.76	Dust and pollen filter: renewing	114
3.77	Fuel filter: renewing	116
3.78	Fuel tank: adding fuel additive	117
3.79	Reducing agent (AdBlue®): filling up tank completely	118
3.80	Vehicle doors: removing edge protection	122
3.81	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	122
3.82	Vehicle exterior: removing protective film, if present	122
3.83	Vehicle: cleaning interior and exterior	123
3.84	Vehicle cover: checking position and correcting if necessary	123
3.85	Vehicle cover: removing according to manufacturer's instructions	123
3.86	Paintwork, trims, side windows and wiper blades: checking cleanliness	123

3.87	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	123
3.88	Vehicles parked outdoors: locking	123
3.89	Road test	123
3.90	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	124
3.91	Accessories: installing	124
3.92	"TQS – Documentation of the vehicle care" checklist: checking that list is present	125
3.93	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	125
3.94	Cleaning and care: checking that required measures have been carried out on time	125
3.95	Stock vehicle care management: deciding and recording date of next check	125
3.96	Display instruments: setting time and date	125
3.97	Manual gearbox/automatic gearbox: selecting 1st gear/park	126
3.98	Automatic gearbox (Tiptronic): changing ATF	126
3.99	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter	126
3.100	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter (if fitted)	126
3.101	Interior mirror: calibrating compass	126
3.102	Poly V-belt for supercharger with charge air coolers: renewing	126
3.103	Poly V-belt for ancillaries: renewing	127
3.104	Poly V-belt for ancillaries and pulleys for coolant pump and power steering pump: renewing	127
3.105	Instrument cluster: resetting driver information system	127
3.106	Toothed belt for camshaft drive: renewing	127
3.107	Toothed belt for camshaft drive, and drive sprockets for camshaft, crankshaft and high-pressure pump: renewing	127
3.108	Toothed belt for camshaft drive and tensioning roller: renewing	127
3.109	Poly V-belt for ancillaries and pulley for power steering pump: renewing	128
4	Exhaust emissions test	129
4.1	Petrol engines: performing exhaust emissions test	129
4.2	Diesel engines: performing exhaust emissions test - up to EU5	137
4.3	Diesel engines: performing exhaust emissions test - from EU6 onwards	146
5	Periodic technical inspection (PTI)	148