

Contents

00 - Technical data	1
1 General notes	1
1.1 General notes on Tyre Pressure Loss Indicator (TPLI+)	1
1.2 General notes on Tyre Pressure Monitoring System (TPMS)	2
1.3 General notes on drive shaft	3
1.4 General notes on dynamic steering	5
1.5 General notes on adaptive cruise control	6
1.6 General notes on lane departure warning function	7
2 Repair instructions	9
2.1 Leaks at shock absorbers	9
2.2 Noises from shock absorbers	10
2.3 Checking shock absorbers when removed	10
2.4 Checking shock absorbers on shock tester	10
2.5 General notes	12
2.6 Contact corrosion	15
2.7 Repairing damaged threads in longitudinal member (subframe to body)	15
2.8 Lifting suspension to unladen position - vehicles with coil springs	15
2.9 Steering rack	18
2.10 Gaskets, seals	18
2.11 Nuts, bolts	18
3 Technical data	19
3.1 Running gear	19
3.2 Steering	19
4 Disposal	21
4.1 Releasing gas and draining front gas-filled shock absorbers	21
4.2 Releasing gas and draining rear gas-filled shock absorbers	22
4.3 Draining power steering rack	24
40 - Front suspension	25
1 Front axle	25
1.1 Overview - front axle	25
2 Subframe	26
2.1 Exploded view - subframe	26
2.2 Removing and installing subframe without steering rack	29
2.3 Removing and installing subframe cross brace	35
2.4 Removing and installing anti-roll bar	36
2.5 Removing and installing coupling rod	38
2.6 Removing and installing subframe shield	39
3 Suspension strut, upper links	41
3.1 Exploded view - suspension strut, upper links	41
3.2 Removing and installing suspension strut	43
3.3 Servicing suspension strut	49
3.4 Removing and installing shock absorber fork	57
3.5 Removing and installing upper suspension link	61
3.6 Renewing bush for upper link	64
3.7 Removing and installing body brace	65
4 Lower suspension links, swivel joint	67
4.1 Exploded view - lower suspension links, swivel joint	67
4.2 Removing and installing track control link	70
4.3 Renewing bush for track control link	74
4.4 Removing and installing swivel joint	80
4.5 Removing and installing guide link	82



4.6	Removing and installing bonded rubber bush for guide link	85
5	Wheel bearing	93
5.1	Exploded view - wheel bearing	93
5.2	Removing and installing wheel bearing housing	98
5.3	Removing and installing wheel bearing unit	102
5.4	Servicing wheel bearing unit	104
6	Drive shaft	109
6.1	Loosening and tightening bolt securing drive shaft	109
6.2	Removing and installing drive shaft	110
6.3	Exploded view - drive shaft	113
6.4	Dismantling and assembling drive shaft	115
6.5	Servicing constant velocity joint	124
6.6	Checking outer constant velocity joint	127
6.7	Tightening hose clip on triple roller joint and outer joint	128
42	Rear suspension	131
1	Rear axle	131
1.1	Overview - rear axle	131
1.2	Removing and installing rear axle	131
2	Subframe	140
2.1	Exploded view - subframe	140
2.2	Servicing subframe	144
3	Anti-roll bar	175
3.1	Removing and installing anti-roll bar	175
4	Suspension links, track rod	178
4.1	Exploded view - transverse links	178
4.2	Removing and installing lower transverse links	181
4.3	Removing and installing upper transverse link	185
4.4	Removing and installing track rod	188
5	Suspension strut/shock absorber, spring	190
5.1	Removing and installing shock absorber	190
5.2	Servicing shock absorber	197
5.3	Removing and installing spring	202
5.4	Modifying spring compressing system VAS 6274	218
6	Wheel bearing, trailing arm	222
6.1	Exploded view - wheel bearing	222
6.2	Removing and installing wheel bearing housing	229
6.3	Removing and installing wheel bearing unit	237
6.4	Servicing wheel bearing unit	243
6.5	Renewing bonded rubber bush for wheel bearing housing	248
7	Drive shaft	259
7.1	Exploded view - drive shaft	259
7.2	Dismantling and assembling drive shaft	265
7.3	Loosening and tightening bolt securing drive shaft	277
7.4	Removing and installing drive shaft	279
7.5	Checking outer constant velocity joint	279
7.6	Checking inner constant velocity joint	280
43	Self-levelling suspension	283
1	Electronic damping control	283
1.1	Overview of fitting locations - electronic damping control	283
1.2	Removing and installing electronically controlled damping control unit J250	285
1.3	Re-adapting reference position (default position)	286
1.4	Removing and installing front body acceleration senders G341/G342	287

1.5	Removing and installing rear body acceleration sender G343	288
2	Vehicle level senders	290
2.1	Removing and installing front vehicle level senders G78/G289	290
2.2	Removing and installing rear vehicle level senders G76/G77	292
44	Wheels, tyres, vehicle geometry	295
1	Wheels, tyres	295
1.1	Tightening torque for wheel bolts	295
2	Tyre Pressure Monitoring System	296
2.1	Overview of fitting locations - Tyre Pressure Monitoring System	296
2.2	System description - Tyre Pressure Monitoring System	297
2.3	Removing and installing Tyre Pressure Monitoring System control unit J502	298
2.4	Exploded view - tyre pressure sensor	300
2.5	Removing and installing tyre pressure sensor G222/G223/G224/G225	301
2.6	Changing tyres on vehicles with Tyre Pressure Monitoring System	303
3	Wheel alignment	306
3.1	Notes on wheel alignment	306
3.2	When does wheel alignment have to be checked?	309
3.3	Explanatory notes on production control numbers (PR nos.)	310
3.4	Wheel alignment specifications	311
3.5	Test requirements	314
3.6	Preparations for measurement	315
3.7	Wheel alignment procedure	316
3.8	Checking centre position of rack (mechanical method)	317
3.9	Wheel runout compensation	317
3.10	Checking full steering lock	317
3.11	Adjusting camber at front wheels	318
3.12	Adjusting camber at rear wheels	323
3.13	Adjusting toe setting at rear wheels	323
3.14	Adjusting toe setting at front wheels	324
4	Dynamic steering	326
4.1	Exploded view - dynamic steering	326
4.2	Removing and installing active steering control unit J792	327
4.3	Basic setting for dynamic steering	329
5	Adaptive cruise control	332
5.1	Exploded view - sensor for adaptive cruise control G550	332
5.2	Removing and installing sensor for adaptive cruise control G550	332
5.3	Preparing ACC setting device VAS 6190 for adjustment procedure	336
5.4	Calibrating adaptive cruise control	338
6	Lane departure warning (Audi lane assist)	352
6.1	Removing and installing lane departure warning control unit J759 and backlight masking screen	352
6.2	Calibrating lane departure warning system	353
48	Steering	361
1	Steering wheel	361
1.1	Exploded view - steering wheel	361
1.2	Removing and installing steering wheel	361
2	Steering column	364
2.1	Exploded view - steering column	364
2.2	Removing and installing intermediate steering shaft	366
2.3	Removing and installing steering column	370
2.4	Handling and transporting steering column	375
2.5	Checking steering column for damage	376
2.6	Removing and installing control unit for electronic steering column lock J764	377



2.7	Removing and installing safety lock for active steering (locking solenoid)	380
3	Steering rack	384
3.1	Exploded view - steering rack	384
3.2	Removing and installing steering rack	388
3.3	Centralising steering	399
3.4	Servicing steering rack	400
3.5	Removing and installing boot	407
3.6	Removing and installing track rod	419
3.7	Removing and installing track rod ball joint	430
3.8	Adjusting steering rack	437
3.9	Removing and installing servotronic solenoid valve N119	438
4	Hydraulic power steering	440
4.1	Overview of fitting locations - hydraulic power steering	440
4.2	Exploded view - hydraulic lines, reservoir	457
4.3	Exploded view - power steering pump	481
4.4	Checking fluid level in power steering system	497
4.5	Bleeding steering system after repairs	498
4.6	Checking steering system for leaks	499
4.7	Checking delivery pressure of power steering pump	500
4.8	Removing and installing power steering pump	528
4.9	Removing and installing hydraulic fluid cooler	603
4.10	Installation position of hoses on fluid reservoir, hydraulic fluid cooler and return line	606