

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on high-voltage vehicles	1
1.2 Safety precautions when working on vehicles with start/stop system	8
1.3 Safety precautions when using testers and measuring instruments during a road test	8
1.4 Safety precautions when handling gas discharge bulbs	9
2 Repair instructions	11
2.1 Contact corrosion	11
2.2 Routing and attachment of lines and wiring	11
3 Battery	12
3.1 Battery - general notes	12
3.2 Battery types	12
27 - Starter, current supply, CCS	13
1 Battery	13
1.1 Exploded view - battery	13
1.2 Removing and installing battery	17
1.3 Disconnecting and connecting battery	27
1.4 Checking battery	31
1.5 Charging battery	31
1.6 Removing and installing earth cable with battery monitor control unit J367	34
2 Alternator	40
2.1 Exploded view - alternator	40
2.2 Removing and installing alternator	42
2.3 Checking alternator	58
2.4 Servicing alternator	58
3 Starter	59
3.1 Exploded view - starter	59
3.2 Removing and installing starter	60
4 Start/stop system	70
4.1 General description - start/stop system	70
5 Adaptive cruise control	71
5.1 Overview of fitting locations - adaptive cruise control	71
5.2 Removing and installing adaptive cruise control unit	72
5.3 Calibrating adaptive cruise control	75
90 - Gauges, instruments	77
1 Dash panel insert	77
1.1 Exploded view - dash panel insert	77
1.2 Removing and installing dash panel insert KX2	79
1.3 Pin assignment on multi-pin connectors in dash panel insert	81
1.4 Pin assignment on fuel gauge senders	82
1.5 Pin assignment on coolant temperature sender	82
1.6 Removing and installing ambient temperature sensor	83
2 Clock	85
2.1 Removing and installing radio-controlled clock receiver	85
3 Horn	86
3.1 Exploded view - horn	86
3.2 Removing and installing treble horn H2 / bass horn H7	86
92 - Windscreen wash/wipe system	88
1 Windscreen wiper system	88

1.1	Exploded view - windscreen wiper system	88
1.2	Moving windscreen wipers to service position	92
1.3	Removing and installing wiper blade	93
1.4	Removing and installing wiper arms	93
1.5	Adjusting wiper arms	95
1.6	Removing and installing wiper motor V	96
1.7	Renewing windscreen wiper motor	98
1.8	Removing and installing rain and light sensor	99
2	Windscreen washer system	107
2.1	Exploded view - windscreen washer system	107
2.2	Removing and installing washer fluid reservoir	109
2.3	Removing and installing windscreen washer fluid level sender	112
2.4	Removing and installing washer pump	113
2.5	Removing and installing washer jets	114
2.6	Adjusting washer jets	114
3	Rear window wiper system	117
3.1	Exploded view - rear window wiper system	117
3.2	Removing and installing wiper blade	118
3.3	Removing and installing wiper arm	118
3.4	Adjusting wiper arm	120
3.5	Removing and installing rear window wiper motor V12	121
4	Rear window washer system	123
4.1	Exploded view - rear window washer system	123
4.2	Removing and installing washer fluid reservoir	123
4.3	Removing and installing rear window washer pump	124
4.4	Removing and installing washer jet	124
4.5	Adjusting washer jet	124
5	Headlight washer system	126
5.1	Exploded view - headlight washer system	126
5.2	Removing and installing washer fluid reservoir	126
5.3	Removing and installing headlight washer system pump V11	127
5.4	Removing and installing washer jets	127
5.5	Adjusting washer jets	130
6	Washer fluid hoses	131
6.1	Repairing washer fluid hoses	131
94 - Lights, bulbs, switches - exterior	132	
1	Headlights	133
1.1	Exploded view - headlights	133
1.2	Removing and installing headlights	145
1.3	Removing and installing mounting for headlight housing	149
1.4	Removing and installing sealing frame	152
1.5	Removing and installing inner bracket for headlight housing	153
1.6	Removing and installing bracket (top) for headlight housing	153
1.7	Adjusting headlights	154
1.8	Removing and installing front turn signal bulb M5 / M7	170
1.9	Installing repair kit for headlight housing	174
1.10	Adapting headlights for driving on the left side of the road	175
1.11	Adapting headlights for driving on the right side of the road	176
1.12	Removing and installing headlight range control motor V48 / V49	178
1.13	Removing and installing headlight dipped beam bulb	185
1.14	Removing and installing headlight main beam bulb M30 / M32	188
1.15	Removing and installing gas discharge bulb L13 / L14	190
1.16	Removing and installing side light bulb M1 / M3	194
1.17	Removing and installing daytime running light bulb L174 / L175	197

1.18	Removing and installing daytime running lights	200
1.19	Removing and installing dynamic cornering light control motor V318 / V319	204
1.20	Removing and installing static cornering light M51 / M52	204
1.21	Removing and installing dip beam screen motor V294 / V295	205
1.22	Removing and installing gas discharge bulb control unit J343 / J344	205
1.23	Removing and installing output module for headlight J667 / J668	209
2	Fog lights	212
2.1	Exploded view - fog light	212
2.2	Removing and installing fog lights	212
2.3	Removing and installing fog light bulb L22 / L23	213
2.4	Adjusting fog lights	213
3	Side marker lights	215
3.1	Removing and installing front side marker bulb	215
4	Lights in exterior mirror	219
4.1	Exploded view - lights in exterior mirror	219
4.2	Removing and installing exterior mirror turn signal bulb L131 / L132	220
4.3	Removing and installing entry light in exterior mirror	222
5	Tail light cluster	225
5.1	Exploded view - tail light cluster on body	225
5.2	Exploded view - tail light cluster on rear lid	226
5.3	Removing and installing bulb carrier	228
5.4	Removing and installing tail light cluster on rear lid	230
5.5	Removing and installing tail light cluster	232
5.6	Removing and installing rear lid closed sender G525 and G526	232
6	High-level brake light	234
6.1	Exploded view - high-level brake light	234
6.2	Removing and installing high-level brake light	234
7	Number plate light	236
7.1	Exploded view - number plate light	236
7.2	Removing and installing number plate light X4 / X5	236
7.3	Removing and installing bulb for number plate light X4 / X5	237
8	Entry and start authorisation	238
8.1	Overview of fitting locations - entry and start authorisation system	238
8.2	Overview of fitting locations - keyless entry system	239
8.3	Exploded view - exterior door handle for keyless entry system	241
8.4	Removing and installing central locking button in front exterior door handle	241
8.5	Removing and installing central locking button in rear exterior door handle	242
8.6	Removing and installing interior aerial 1 for entry and start authorisation R138	243
8.7	Removing and installing aerial for entry and start authorisation R200 / R201	244
8.8	Removing and installing luggage compartment aerial for entry and start system R137	245
9	Steering column switch module	246
9.1	Exploded view - steering column switch module	246
9.2	Removing and installing steering column switch module	247
9.3	Removing and installing steering column electronics control unit J527	248
9.4	Removing and installing steering column combination switch	250
9.5	Pin assignment on steering column electronics control unit	250
9.6	Removing and installing entry and start authorisation switch E415	252
10	Parking aid	255
10.1	Overview - parking aid	255
10.2	Removing and installing parking aid control unit J446	256
10.3	Removing and installing front parking aid warning buzzer H22	257
10.4	Removing and installing rear parking aid warning buzzer H15	257
10.5	Removing and installing front parking aid senders	258
10.6	Removing and installing rear parking aid senders	260

11	Automatic headlight range control	263
11.1	Overview - automatic headlight range control	263
11.2	Removing and installing headlight range control unit	263
96	- Lights, bulbs, switches - interior	265
1	Lights	266
1.1	Overview of fitting locations - lights in dash panel	266
1.2	Overview of fitting locations - lights in front doors	268
1.3	Overview of fitting locations - lights in rear doors	270
1.4	Overview of fitting locations - lights in centre console	272
1.5	Overview of fitting locations - lights in luggage compartment	273
1.6	Overview of fitting locations - lights in roof trim	274
1.7	Removing and installing dash panel vent illumination bulb (left and right) L67 / L69	275
1.8	Removing and installing glove compartment light W6	275
1.9	Renewing bulb for glove compartment light W6	276
1.10	Removing and installing footwell illumination bulb (front) L151 / L152	276
1.11	Removing and installing central locking SAFELOCK function warning lamp K133	277
1.12	Removing and installing door opener illumination bulb L108 / L109	277
1.13	Removing and installing front entry light W31 / W32	278
1.14	Removing and installing door warning lamp W30 / W36	279
1.15	Removing and installing door opener illumination bulb L110 / L111	280
1.16	Removing and installing rear entry light W33 / W34	281
1.17	Removing and installing rear door warning lamp W37 / W38	282
1.18	Removing and installing selector lever position display Y26	283
1.19	Removing and installing rear footwell light W45 / W46	283
1.20	Removing and installing luggage compartment light W18 / W3 , surround lighting W61	284
1.21	Removing and installing vanity mirror light bulb L31	285
1.22	Renewing bulb for front interior light W1 / W13 / W19	286
1.23	Renewing bulb for rear interior light W47 / W48	287
1.24	Removing and installing LED for background lighting	289
2	Controls	291
2.1	Overview of fitting locations - controls in dash panel	292
2.2	Overview of fitting locations - controls in front doors	294
2.3	Overview of fitting locations - controls in rear doors	296
2.4	Overview of fitting locations - controls in centre console	298
2.5	Overview of fitting locations - controls in luggage compartment	299
2.6	Overview of fitting locations - controls in roof trim	300
2.7	Removing and installing rotary light switch EX1	301
2.8	Removing and installing switch and instrument illumination regulator E20	302
2.9	Removing and installing headlight range control regulator E102	302
2.10	Removing and installing rear fog light button E314 , fog light button E315	303
2.11	Removing and installing start/stop operation button E693	303
2.12	Removing and installing TCS and ESP button E256	303
2.13	Removing and installing parking aid button E266	303
2.14	Removing and installing front passenger side airbag deactivated warning lamp K145	303
2.15	Removing and installing switches in dash panel	303
2.16	Removing and installing hazard warning lights button E229	304
2.17	Removing and installing front heated seat regulator E94 / E95	305
2.18	Removing and installing glove compartment light switch E26	305
2.19	Removing and installing mirror adjustment switch E43 / E168	306
2.20	Removing and installing operating unit for window regulator in driver door E512	306
2.21	Removing and installing window regulator switch in front passenger door E107	307
2.22	Removing and installing interior locking switch E150 / E198	308
2.23	Removing and installing driver seat memory operating unit E97	308
2.24	Removing and installing rear lid remote release switch E188	309

2.25	Removing and installing interior monitoring switch E183 / alarm system off switch E217	310
2.26	Removing and installing door contact switch F2 / F3	310
2.27	Removing and installing rear left/rear right window regulator switch, in door E52 / E54 ..	311
2.28	Removing and installing rear interior locking switch E273 / E274	311
2.29	Removing and installing door contact switch (rear) F10 / F11	312
2.30	Removing and installing electromechanical parking brake button E538 / auto-hold button E540	312
2.31	Removing and installing entry and start authorisation button E408	313
2.32	Removing and installing switch panel in centre console	314
2.33	Removing and installing drink holder with heater and cooling element Z105	315
2.34	Removing and installing heated rear seat switch with regulator E128 / E129	316
2.35	Removing and installing buttons for rear seat heating E737 / E738	316
2.36	Removing and installing release button for rear lid lock cylinder F248	317
2.37	Removing and installing button to close rear lid in luggage compartment E406	318
2.38	Removing and installing rear lid contact switch	318
2.39	Removing and installing contact switch for vanity mirror F147 / F148	319
2.40	Removing and installing sliding sunroof adjustment regulator E139	319
2.41	Removing and installing interior light/reading light (front)	319
2.42	Removing and installing interior light/reading light (rear)	320
2.43	Removing and installing garage door operating unit E284	321
3	Anti-theft alarm system	323
3.1	Overview - interior monitoring	323
3.2	Removing and installing alarm horn H12	324
3.3	Removing and installing anti-theft alarm sensor G578	325
4	Lane change assist	327
4.1	Overview - lane change assist	327
4.2	Removing and installing button for lane change assist E530	328
4.3	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	328
4.4	Removing and installing lane change assist control unit J769 / J770	329
4.5	Calibrating lane change assist	329
5	Front camera for driver assist systems	338
5.1	Exploded view - main beam assist system, humidity sender and lane departure warning system	338
5.2	Overview of fitting locations - lane departure warning control unit J759	339
5.3	Removing and installing lane departure warning control unit J759	339
6	Towing bracket	341
6.1	Trailer socket	341
6.2	Removing and installing trailer detector control unit J345	341
7	Cigarette lighter, socket	342
7.1	Exploded view - cigarette lighter, 12 V socket	342
7.2	Removing and installing cigarette lighter illumination bulb L28	343
7.3	Removing and installing cigarette lighter U1	344
7.4	Removing and installing socket illumination bulb L42	346
7.5	Removing and installing 12 V socket 2 U18	348
7.6	Removing and installing 12 V socket 3 U19	350
7.7	Renewing 12 V socket 3 U19	350
97 - Wiring	352	
1	Relay carriers, fuse carriers, electronics boxes	352
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	352
1.2	Removing and installing electronics box	357
1.3	Removing and installing relay and fuse holder in electronics box	361
1.4	Removing and installing terminal 30 wiring junction 2 TV22	365
1.5	Removing and installing fuse holder in dash panel (left-side)	367

1.6	Removing and installing fuse holder at dash panel (right-side)	370
1.7	Removing and installing relay and fuse carrier behind dash panel (driver side)	373
1.8	Removing and installing relay and fuse holder in luggage compartment (right-side)	375
1.9	Removing and installing fuse holder A SA in luggage compartment	377
2	Control units	381
2.1	Overview of fitting locations - control units	381
2.2	Exploded view - data bus diagnostic interface	384
2.3	Removing and installing onboard supply control unit J519	384
2.4	Removing and installing convenience system central control unit J393	387
2.5	Removing and installing special vehicle control unit J608	388
2.6	Removing and installing garage door operation control unit	388
2.7	Removing and installing data bus diagnostic interface J533	389
3	Connectors	391
3.1	Overview - connectors, connector points	391
3.2	Removing and installing CAN separating connector (right-side)	392
3.3	Removing and installing CAN separating connector (left-side)	394
3.4	Unplugging door disconnector (left-side)	395
3.5	Removing and installing connector point at A-pillar (left-side)	396
3.6	Removing and installing connector point at A-pillar (right-side)	397
3.7	Repairing electrical wiring harnesses and electrical connectors	397
3.8	Repairing connector housings and electrical connectors	397
4	Releasing and dismantling connector housings	398
5	Cleaning contact surfaces	399
6	Repairing aerial wires	400
7	Fibre optic cables	401
8	Vehicle diagnostic, testing and information systems	402