

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General repair instructions	1
1.2 Notes on repairing CAN bus wiring	1
91 - Radio, telephone, navigation	2
1 Infotainment system	2
1.1 Layout - infotainment system	2
1.2 Overview of fitting locations - infotainment system	18
1.3 Removing and installing infotainment system display	21
1.4 Removing and installing control unit 1 for information electronics J794	22
1.5 Removing and installing multimedia system operating unit E380	24
1.6 Pin assignment	26
2 Sound system	45
2.1 Layout - sound system	45
2.2 Overview of fitting locations - sound system	51
2.3 Removing and installing digital sound package control unit/amplifier	55
2.4 Removing and installing rear treble loudspeakers R14/R16	58
2.5 Removing and installing front treble loudspeakers R20/R22	59
2.6 Removing and installing rear mid-range loudspeakers	61
2.7 Removing and installing front mid-range loudspeakers	62
2.8 Removing and installing rear mid-range and bass loudspeakers	63
2.9 Removing and installing front bass loudspeakers R21/R23	64
2.10 Removing and installing subwoofer R211	65
2.11 Removing and installing centre loudspeaker	67
2.12 Pin assignment	68
3 Aerial systems	75
3.1 Layout - aerial systems	75
3.2 Overview of fitting locations - aerial systems	75
3.3 Removing and installing aerial amplifier	76
3.4 Removing and installing aerial module	78
3.5 Removing and installing roof aerial	79
3.6 Removing and installing traffic data aerial	80
3.7 Pin assignment	81
4 Radio	86
4.1 Layout - radio	86
4.2 Overview of fitting locations - radio	88
4.3 Removing and installing radio	90
4.4 Pin assignment	94
5 DVD/CD changer	115
5.1 Pin assignment	115
5.2 Removing and installing CD changer	116
6 Telephone system	118
6.1 Layout - telephone	118
6.2 Overview of fitting locations - telephone system	129
6.3 Assembly overview - microphone unit	130
6.4 Removing and installing microphone unit in front roof module R164	132
6.5 Removing and installing aerial amplifier for mobile telephone R86	133
6.6 Removing and installing telephone bracket R126	133
6.7 Removing and installing telephone transmitter and receiver unit	135
6.8 Removing and installing remote control receiver for auxiliary heater R64	137
6.9 Pin assignment	138

7	Navigation system	160
7.1	Layout - navigation system	160
7.2	Overview of fitting locations - navigation system	163
7.3	Pin assignment	165
7.4	Removing and installing chip card reader control unit	173
8	TV system	174
8.1	Layout - TV system	174
8.2	Overview of fitting locations - TV system	176
8.3	Pin assignment	178
8.4	Removing and installing TV tuner	184
8.5	Removing and installing TV card reader	186
9	Reversing camera system	188
9.1	Layout - reversing camera system	188
9.2	Overview of fitting locations - reversing camera system	189
9.3	Removing and installing reversing camera R189	190
9.4	Calibrating reversing camera system	191
9.5	Removing and installing reversing camera system control unit J772	197
9.6	Connectors on reversing camera system control unit J772	198
10	Multifunction steering wheel	200
10.1	Layout - multifunction steering wheel	200
10.2	Assembly overview - multi-function steering wheel	200
10.3	Removing and installing multifunction buttons in steering wheel E441/E440	203
10.4	Removing and installing tiptronic switches in steering wheel E439/E438	212
11	Voice control system	215
11.1	Layout - voice control system	215
11.2	Removing and installing voice control system	216
12	Connection for external multimedia devices	217
12.1	Layout - connection for external multimedia devices	217
12.2	Connectors on connection for external multimedia devices	218
12.3	Removing and installing connection for external audio sources R199	220
13	Direct vision system (Japan)	226
13.1	Layout - direct vision system, Japan	226
13.2	Overview of fitting locations - direct vision system, Japan	227
13.3	Connectors on reversing camera system control unit J772	228
13.4	Removing and installing button for camera in exterior mirror E697	229