

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on high-voltage vehicles	1
2 Repair instructions	2
2.1 Routing and attachment of pipes, hoses and wiring	2
2.2 Contact corrosion	2
2.3 Bonding surfaces for self-adhesive components	2
2.4 Secured bolts	2
50 - Body - front	3
1 Lock carrier	3
1.1 Assembly overview - lock carrier	3
1.2 Setting service position and returning to normal position	5
1.3 Removing and installing lock carrier brace	7
1.4 Removing and installing lock carrier cover	8
2 Wing	10
2.1 Assembly overview - wing	10
2.2 Assembly overview - repair set for wing	11
2.3 Removing and installing wing	12
2.4 Removing and installing wing panel brace	16
3 Bulkhead	17
3.1 Assembly overview - plenum chamber partition panel	17
3.2 Assembly overview - additional reinforcements	21
3.3 Removing and installing plenum chamber cover	21
3.4 Removing and installing reinforcement for strut brace	23
55 - Bonnet, rear lid	24
1 Bonnet	24
1.1 Assembly overview - bonnet	24
1.2 Assembly overview - bonnet lock	25
1.3 Assembly overview - Bowden cable	27
1.4 Assembly overview - gas strut	31
1.5 Assembly overview - bonnet seals	32
1.6 Adjusting bonnet	33
1.7 Removing and installing operating lever for bonnet lock	35
1.8 Removing and installing striker	38
1.9 Removing and installing hinges	38
1.10 Removing and installing insulation	39
1.11 Removing and installing gas strut	40
1.12 Releasing gas from gas strut	41
1.13 Removing and installing impact guard	41
2 Rear lid	43
2.1 Assembly overview - rear lid	43
2.2 Assembly overview - gas strut	45
2.3 Assembly overview - motor for rear lid	46
2.4 Adjusting rear lid	50
2.5 Removing and installing rear lid lock	56
2.6 Removing and installing hinges	57
2.7 Removing and installing rear lid seal	59
2.8 Removing and installing gas strut	60
3 Tank flap unit	62
3.1 Assembly overview - tank flap unit	62



3.2	Removing and installing lid for tank flap	64
3.3	Removing and installing tank flap	65
3.4	Gap widths at tank flap	66
3.5	Removing and installing tank flap cup	66
3.6	Removing and installing drain hose for tank flap cup	67
3.7	Removing and installing manual release for tank flap	68
57	- Front doors, door components, central locking	70
1	Door	70
1.1	Assembly overview - door	70
1.2	Assembly overview - door arrester	71
1.3	Removing and installing door	72
1.4	Adjusting door	73
1.5	Adjusting striker	77
1.6	Removing and installing door arrester	77
1.7	Removing and installing inner door seal	78
1.8	Removing and installing outer door seal	79
2	Door components	87
2.1	Assembly overview - window regulator	87
2.2	Assembly overview - door handle and door lock	88
2.3	Assembly overview - lock cylinder	92
2.4	Assembly overview - window guides and window slot seals	93
2.5	Removing and installing inner door cover	95
2.6	Removing and installing window regulator motor	96
2.7	Removing and installing window regulator	98
2.8	Removing and installing lock cylinder	100
2.9	Removing and installing cap for lock cylinder	101
2.10	Removing and installing lock cylinder guide	102
2.11	Removing and installing door handle	103
2.12	Removing and installing door handle trim	105
2.13	Removing and installing trim strips on door handle	106
2.14	Removing and installing contact sensor for front exterior door handle G605/G606	106
2.15	Removing and installing door lock	107
2.16	Removing and installing mounting bracket	109
2.17	Removing and installing operating cable for door lock	111
2.18	Removing and installing operating cable for interior door handle	112
2.19	Removing and installing striker	114
2.20	Removing and installing outer window slot seal	114
3	Central locking system	117
3.1	Overview of fitting locations - central locking system	117
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	119
3.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	119
3.4	Removing and installing convenience system central control unit J393	120
3.5	Removing and installing interface control unit for vehicle location system J843	121
3.6	Removing and installing tank filler flap locking motor V155	121
58	- Rear doors, door components	124
1	Door	124
1.1	Assembly overview - door	124
1.2	Assembly overview - door arrester	125
1.3	Removing and installing door	126
1.4	Adjusting door	127
1.5	Adjusting striker	131
1.6	Removing and installing door arrester	131

1.7	Removing and installing inner door seal	132
1.8	Removing and installing outer door seal	133
2	Door components	142
2.1	Assembly overview - window regulator	142
2.2	Assembly overview - door handle and door lock	143
2.3	Assembly overview - housing	146
2.4	Assembly overview - window guides and window slot seals	147
2.5	Removing and installing inner door cover	149
2.6	Removing and installing window regulator motor	150
2.7	Removing and installing window regulator	152
2.8	Removing and installing housing	154
2.9	Removing and installing cap for housing	154
2.10	Removing and installing door handle	155
2.11	Removing and installing door handle trim	157
2.12	Removing and installing trim strips on door handle	157
2.13	Removing and installing contact sensor for rear exterior door handle G417/G418	158
2.14	Removing and installing door lock	159
2.15	Removing and installing mounting bracket	160
2.16	Removing and installing operating cable for door lock	162
2.17	Removing and installing operating cable for interior door handle	164
2.18	Removing and installing striker	165
2.19	Removing and installing outer window slot seal	166
60	- Sunroof	169
1	Sliding sunroof	169
1.1	Assembly overview - panoramic sliding sunroof	169
1.2	Assembly overview - sliding sunroof frame	170
1.3	Assembly overview - rear section of frame	173
1.4	Removing and installing sliding sunroof panel	174
1.5	Removing and installing rear sliding sunroof panel	177
1.6	Adjusting sliding sunroof panel	178
1.7	Removing and installing wind deflector	180
1.8	Removing and installing bearing for wind deflector	181
1.9	Renewing seals for glass panel (rear)	182
1.10	Renewing outer seal	185
1.11	Renewing inner seal	186
1.12	Removing and installing sliding sunroof adjustment control unit J245	188
1.13	Removing and installing sunroof roller blind control unit J394	188
1.14	Adapting sliding sunroof adjustment control unit J245	190
1.15	Adapting sunroof roller blind control unit J394	190
1.16	Removing and installing sunroof roller blind	191
1.17	Removing and installing rear section of frame	196
1.18	Removing and installing motor plate (rear) and cable for sunroof roller blind	199
1.19	Removing and installing motor plate (front)	203
1.20	Removing and installing slotted guide and cable for glass panel (front)	204
1.21	Lubricating guide rail	208
2	Water drain hoses	210
2.1	Cleaning water drain hoses	210
2.2	Removing and installing water drain hoses	210
63	- Bumpers	212
1	Front bumper	212
1.1	Assembly overview - bumper cover	212
1.2	Assembly overview - bumper carrier	216
1.3	Removing and installing lock carrier cover	218
1.4	Removing and installing bumper cover	219



1.5	Adjusting bumper cover	220
1.6	Removing and installing guides for bumper	221
1.7	Removing and installing air intake grille	222
1.8	Removing and installing closure plate for bumper cover	224
1.9	Removing and installing attachments	226
1.10	Removing and installing bumper carrier	228
1.11	Removing and installing bracket for bumper carrier	231
1.12	Removing and installing support piece for mounting for headlight housing	231
2	Rear bumper	233
2.1	Assembly overview - bumper cover	233
2.2	Removing and installing bumper cover	235
2.3	Removing and installing guides for bumper	239
2.4	Removing and installing attachments	240
2.5	Removing and installing bumper carrier	242
2.6	Removing and installing mounting for bumper carrier	243
64	- Glazing	245
1	Repair instructions	245
1.1	Minimum drying times for bonded windows	245
1.2	Repairing windows	245
1.3	Notes on installing flush-bonded windows	246
1.4	Cleaning off adhesive sealant	249
1.5	Re-sealing windows	249
2	Windscreen	250
2.1	Assembly overview - windscreen	250
2.2	Removing and installing windscreen	251
3	Rear window	259
3.1	Assembly overview - rear window	259
3.2	Removing and installing rear window	261
4	Side windows	269
4.1	Assembly overview - side window	269
4.2	Removing and installing side window	271
5	Door windows	273
5.1	Assembly overview - front door window	273
5.2	Assembly overview - rear door window	273
5.3	Removing and installing front door window	274
5.4	Removing and installing rear door window	276
66	- Exterior equipment	280
1	Radiator grille/front trim	280
1.1	Assembly overview - radiator grille	280
1.2	Removing and installing reinforcement strut	282
1.3	Removing and installing radiator grille	282
1.4	Removing and installing bracket for ambient temperature sensor G17	286
1.5	Removing and installing mounting bracket for parking aid sender	286
2	Spoilers	288
2.1	Assembly overview - spoiler	288
3	Strips/trim panels/extensions	289
3.1	Assembly overview - wheel arch covers	289
3.2	Assembly overview - heat shield	290
3.3	Assembly overview - seal for side member	292
3.4	Removing and installing water deflector strip	293
3.5	Removing and installing trim panel for B-pillar on door	294
3.6	Removing and installing trim panel for C-pillar on door	297
3.7	Removing and installing sill panel trim	297

3.8	Removing and installing trim cover for door	298
3.9	Renewing wheel arch cover (front)	300
3.10	Renewing wheel arch cover	302
4	Noise insulation	306
4.1	Assembly overview - noise insulation	306
4.2	Removing and installing noise insulation	310
5	Underbody cladding	311
5.1	Assembly overview - underbody cladding	311
5.2	Assembly overview - tunnel cross-piece	312
6	Roof strips/roof rails	314
6.1	Assembly overview - roof trim strip	314
6.2	Removing and installing roof rail	315
7	Exterior mirrors	318
7.1	Assembly overview - exterior mirror	318
7.2	Removing and installing mirror glass	320
7.3	Removing and installing mirror adjustment unit	321
7.4	Removing and installing mirror cover	321
7.5	Removing and installing exterior mirror	323
8	Wheel housing liners	325
8.1	Assembly overview - front wheel housing liner	325
8.2	Assembly overview - rear wheel housing liner	327
8.3	Assembly overview - wheel spoiler (front)	328
8.4	Removing and installing front wheel housing liner	329
9	Lettering and badges	331
9.1	Dimensions - lettering and badges on rear lid	331
9.2	Dimensions - lettering and badges on wings	333
9.3	Removing and installing front badges	335
9.4	Removing and installing lettering	337
10	Towing bracket	338
10.1	Assembly overview - bracket for manual operation	338
10.2	Removing and installing towing bracket	338
10.3	Removing and installing bracket for manual operation	340