

Contents

00 - Technical data	1
1 Identification	1
1.1 Identification of gearbox/transmission unit	1
2 Repair instructions	3
2.1 General repair instructions	3
30 - Clutch	11
1 Clutch mechanism	11
1.1 Assembly overview - clutch release mechanism	11
1.2 Servicing clutch release mechanism	15
2 Clutch	17
2.1 General notes on clutch	17
2.2 Assembly overview - clutch	22
2.3 Removing and installing clutch module	35
2.4 Removing and installing clutch	40
2.5 Resetting adjuster ring in pressure plate, LuK version	49
2.6 Renewing needle bearing/ball bearing for dual-mass flywheel	51
34 - Controls, housing	57
1 Transporting gearbox	57
2 Securing to engine and gearbox support	58
3 Dismantling and assembling gearbox	60
3.1 Schematic overview - gearbox	60
3.2 Assembly overview - gearbox	61
3.3 Assembly overview - gear cluster, reverse gear wheel, selector mechanism	66
3.4 Assembly overview - selector forks	68
3.5 Dismantling and assembling gearbox	70
3.6 Removing and installing selector shaft	94
4 Gearbox housing, clutch housing	97
4.1 Assembly overview - end cover	97
4.2 Assembly overview - gearbox cover	97
4.3 Assembly overview - gearbox housing	99
4.4 Servicing end cover	101
4.5 Servicing gearbox cover	103
4.6 Servicing gearbox housing	115
35 - Gears, shafts	120
1 Dismantling and assembling gears and shafts	120
1.1 Assembly overview - gear cluster	120
1.2 Dismantling and assembling gear cluster	122
2 Input shaft	134
2.1 Assembly overview - input shaft	134
2.2 Dismantling and assembling input shaft	139
2.3 Allocation of 3rd - 6th gear synchro-rings to locking collars	149
2.4 Checking 3rd - 6th gear synchro-rings for wear	151
3 Output shaft	153
3.1 Assembly overview - output shaft	153
3.2 Dismantling and assembling output shaft	159
39 - Final drive - differential	165
1 Oil seals	165
1.1 Overview of fitting locations - oil seals	165



1.2	Renewing right oil seal	167
1.3	Renewing left oil seal	168
1.4	Renewing input shaft oil seal	174
2	Final drive	177
2.1	Assembly overview - final drive	177
3	Differential	180
3.1	Assembly overview - differential	180
3.2	Removing and installing right flange shaft	182
3.3	Removing and installing left flange shaft	185
3.4	Checking and adjusting preload of ball bearing for left flange shaft	190
3.5	Renewing mounting bracket and ball bearing for left flange shaft	196
3.6	Removing and installing differential	199
3.7	Renewing cover for final drive	202
3.8	Dismantling and assembling differential	216
3.9	Adjusting differential	226