

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Safety precautions	2
2.1 Safety precautions when working on vehicle	2
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Notes on tow-starting and towing	3
3 Repair instructions	4
3.1 Rules for cleanliness	4
3.2 General notes	4
3.3 General repair instructions	5
3.4 Contact corrosion	7
4 Technical data	8
4.1 Allocation of gearbox to engine	8
4.2 Capacities	8
5 Transmission layout	10
5.1 Transmission layout - four-wheel drive	10
32 - Torque converter	11
1 Torque converter	11
1.1 Exploded view - torque converter	11
1.2 Identification of torque converter	12
1.3 Removing and installing torque converter	12
1.4 Draining torque converter	14
1.5 Checking torque converter	14
1.6 Removing and installing oil seal for torque converter	14
37 - Controls, housing	16
1 Selector mechanism	16
1.1 Exploded view - selector mechanism	16
1.2 Exploded view - selector lever handle	18
1.3 Exploded view - selector lever cable	19
1.4 Checking selector mechanism	19
1.5 Manual release from position P	21
1.6 Removing and installing selector mechanism	22
1.7 Dismantling and assembling selector mechanism	27
1.8 Removing and installing selector lever handle	30
1.9 Detaching selector lever boot from selector lever handle	33
1.10 Removing and installing selector lever position display Y26	33
1.11 Removing and installing selector lever cable	33
1.12 Checking and adjusting selector lever cable	38
1.13 Adjusting selector lever cable to basic setting	39
1.14 Renewing selector shaft oil seal	41
2 Removing and installing gearbox	44
2.1 Removing gearbox	44
2.2 Installing gearbox	53
2.3 Tightening torques for gearbox	59
3 Assembly mountings	61
3.1 Exploded view - assembly mountings	61
3.2 Removing and installing tunnel cross member	61
3.3 Removing and installing gearbox support with gearbox mounting	63
3.4 Removing and installing gearbox mounting	64



4	Transporting gearbox	65
5	Securing to engine and gearbox support	67
6	ATF	68
6.1	Checking ATF level	68
6.2	Draining and filling ATF	72
7	ATF circuit	76
7.1	Exploded view - ATF circuit	76
7.2	Cleaning ATF lines	77
38 - Gears, control		79
1	ATF system	79
1.1	Exploded view - ATF system	79
1.2	Removing and installing oil pan	81
1.3	Removing and installing ATF strainer	83
2	Mechatronic unit	85
2.1	Removing and installing mechatronic unit	85
2.2	Removing and installing wiring harness in gearbox	88
39 - Final drive - front differential		90
1	Final drive	90
1.1	Exploded view - final drive	90
1.2	Renewing O-ring on cover for front final drive	91
2	Gear oil	93
2.1	Checking gear oil level	93
2.2	Draining and filling gear oil	95
3	Oil seals	99
3.1	Renewing oil seal (left-side)	99
3.2	Renewing oil seal (right-side)	102
4	Differential	104
4.1	Removing and installing flange shaft (left-side)	104
4.2	Removing and installing flange shaft (right-side)	105
5	Centre differential	108
5.1	Exploded view - centre differential	108
5.2	Removing and installing centre differential	110
5.3	Renewing oil seal for flange shaft (rear)	114
5.4	Renewing ball bearing for flange shaft (rear)	116
5.5	Renewing ball bearing for centre differential	118
6	Gearbox control system	121
6.1	Overview of fitting locations - gearbox control system	121