

Contents

00 - Technical data	1
1 Identification	1
1.1 Identification of gearbox	1
2 Safety information	3
2.1 Safety precautions when working on vehicle	3
2.2 Safety precautions when working on vehicles with start/stop system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	4
2.4 Safety precautions when working on the subframe	4
2.5 Notes on tow-starting and towing	5
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 General notes	6
3.3 General repair instructions	7
3.4 Contact corrosion	9
4 Technical data	10
4.1 Capacities	10
4.2 Oil distribution	11
5 Overview - power transmission	13
5.1 Overview - power transmission, all-wheel drive	13
32 - Torque converter	14
1 Torque converter	14
37 - Controls, housing	15
1 Selector mechanism	15
1.1 Assembly overview - selector mechanism	15
1.2 Assembly overview - selector lever handle	17
1.3 Assembly overview - selector lever cable	18
1.4 Checking selector mechanism	20
1.5 Manual release from position P	23
1.6 Removing and installing selector mechanism	24
1.7 Dismantling and assembling selector mechanism	30
1.8 Removing and installing selector lever handle	36
1.9 Removing and installing selector lever position display Y26	49
1.10 Removing and installing selector lever cable	50
1.11 Checking and adjusting selector lever cable	55
1.12 Adjusting selector lever cable to basic setting	57
1.13 Renewing selector shaft oil seal	62
2 Removing and installing gearbox	66
2.1 Removing gearbox	66
2.2 Installing gearbox	137
2.3 Tightening torques for gearbox	148
3 Assembly mountings	151
3.1 Assembly overview - assembly mountings	151
3.2 Removing and installing tunnel cross member	151
3.3 Removing and installing gearbox support with gearbox mounting	154
3.4 Removing and installing gearbox mounting	155
4 Transporting gearbox	156
5 Securing to engine and gearbox support	158
6 ATF	160
6.1 Assembly overview - ATF drain and inspection plugs in gearbox	160



6.2	Checking ATF level	160
6.3	Draining and filling ATF	165
7	ATF circuit	170
7.1	Assembly overview - ATF circuit	170
7.2	Removing and installing ATF cooler - vehicles with 3.0 ltr. TDI biturbo engine	176
7.3	Removing and installing ATF filter	180
7.4	Cleaning ATF lines	181
7.5	Removing and installing ATF lines	182
38	Gears, control	191
1	ATF system	191
1.1	Removing and installing oil pan	191
2	Mechatronic unit	196
39	Final drive - front differential	197
1	Final drive	197
1.1	Assembly overview - final drive	197
1.2	Renewing O-ring on cover for front final drive	199
2	Gear oil	202
2.1	Assembly overview - gear oil drain and inspection plugs	202
2.2	Differences between separate and common oil systems	203
2.3	Checking gear oil level	203
2.4	Draining and filling gear oil	213
3	Oil seals	224
3.1	Renewing left oil seal	224
3.2	Renewing right oil seal	228
4	Differential	231
4.1	Removing and installing left flange shaft	231
4.2	Removing and installing right flange shaft	233
4.3	Renewing ball bearing for left flange shaft	237
5	Centre differential	241
5.1	Removing and installing centre differential	241
6	Transfer box	247
7	Gearbox control system	248
7.1	Overview of fitting locations - gearbox control system	248