

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Safety precautions	2
2.1 Safety precautions when working on high-voltage vehicles	2
2.2 Safety precautions when working on vehicle	6
2.3 Safety precautions when working on vehicles with start/stop system	7
2.4 Safety precautions when using testers and measuring instruments during a road test	7
2.5 Notes on tow-starting and towing	8
3 Repair instructions	9
3.1 Rules for cleanliness	9
3.2 General notes	9
3.3 General repair instructions	10
3.4 Contact corrosion	12
4 Technical data	13
4.1 Allocation of gearbox to engine	13
4.2 Capacities	13
5 Transmission layout	15
5.1 Transmission layout - four-wheel drive	15
32 - Torque converter	16
1 Torque converter	16
37 - Controls, housing	17
1 Selector mechanism	17
1.1 Exploded view - selector mechanism	17
1.2 Exploded view - selector lever handle	19
1.3 Exploded view - selector lever cable	20
1.4 Checking selector mechanism	21
1.5 Manual release from position P	23
1.6 Removing and installing selector mechanism	24
1.7 Dismantling and assembling selector mechanism	29
1.8 Removing and installing selector lever handle	32
1.9 Detaching selector lever boot from selector lever handle	35
1.10 Removing and installing selector lever position display Y26	35
1.11 Removing and installing selector lever cable	35
1.12 Checking and adjusting selector lever cable	40
1.13 Adjusting selector lever cable to basic setting	41
1.14 Renewing selector shaft oil seal	45
2 Removing and installing gearbox	48
2.1 Removing gearbox	48
2.2 Installing gearbox	61
2.3 Tightening torques for gearbox	70
3 Assembly mountings	72
3.1 Exploded view - assembly mountings	72
3.2 Removing and installing tunnel cross member	72
3.3 Removing and installing gearbox support with gearbox mounting	74
3.4 Removing and installing gearbox mounting	75
4 Transporting gearbox	76
5 Securing to engine and gearbox support	77
6 ATF	78



6.1	Exploded view - ATF drain and inspection plugs in gearbox	78
6.2	Checking ATF level	78
6.3	Draining and filling ATF	84
7	ATF circuit	88
7.1	Exploded view - ATF circuit	88
7.2	Removing and installing ATF filter	90
7.3	Cleaning ATF lines	91
7.4	Removing and installing ATF lines	92
38	Gears, control	93
1	ATF system	93
1.1	Removing and installing oil pan	93
2	Mechatronic unit	97
3	Electric drive motor	98
3.1	Exploded view - electric drive motor	98
3.2	General description - electric drive motor	99
3.3	Performing basic setting for electric drive motor	99
3.4	Removing and installing electric drive motor	100
3.5	Checking hub of electric drive motor	107
3.6	Renewing oil seal for electric drive motor	107
39	Final drive - front differential	109
1	Final drive	109
1.1	Exploded view - final drive	109
1.2	Renewing O-ring on cover for front final drive	111
2	Gear oil	113
2.1	Exploded view - gear oil drain and inspection plugs	113
2.2	Checking gear oil level	113
2.3	Draining and filling gear oil	117
3	Oil seals	124
3.1	Renewing oil seal (left-side)	124
3.2	Renewing oil seal (right-side)	127
4	Differential	129
4.1	Removing and installing flange shaft (left-side)	129
4.2	Removing and installing flange shaft (right-side)	130
4.3	Renewing ball bearing and mounting bracket for flange shaft (left-side)	133
5	Centre differential	136
6	Transfer box	137
7	Gearbox control system	138
7.1	Overview of fitting locations - gearbox control system	138