

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Identification of gearbox .....	1
<b>2 Safety information</b> .....	<b>2</b>
2.1 Safety precautions when working on vehicle .....	2
2.2 Safety precautions when working on vehicles with start/stop system .....	3
2.3 Safety precautions when using testers and measuring instruments during a road test .....	3
2.4 Safety precautions when working on the subframe .....	3
2.5 Notes on tow-starting and towing .....	4
<b>3 Repair instructions</b> .....	<b>5</b>
3.1 Rules for cleanliness .....	5
3.2 General notes .....	5
3.3 General repair instructions .....	6
3.4 Contact corrosion .....	8
3.5 Safety functions of gearbox control unit .....	8
<b>4 Technical data</b> .....	<b>9</b>
4.1 Allocation of gearbox to engine .....	9
4.2 Capacities .....	9
<b>30 - Clutch</b> .....	<b>11</b>
<b>1 Clutch</b> .....	<b>11</b>
1.1 Assembly overview - flywheel and dual clutch .....	11
1.2 Removing and installing flywheel .....	13
1.3 Removing dual clutch .....	13
1.4 Installing dual clutch .....	13
<b>34 - Controls, housing</b> .....	<b>14</b>
<b>1 Mechatronic unit</b> .....	<b>14</b>
1.1 Assembly overview - mechatronic unit .....	14
1.2 Removing and installing oil pan .....	17
1.3 Removing and installing mechatronic unit .....	20
<b>2 Selector mechanism</b> .....	<b>22</b>
2.1 Assembly overview - selector mechanism .....	22
2.2 Assembly overview - selector lever handle .....	24
2.3 Assembly overview - selector lever cable .....	26
2.4 Checking selector mechanism .....	28
2.5 Manual release from position P .....	31
2.6 Removing and installing selector mechanism .....	32
2.7 Dismantling and assembling selector mechanism .....	38
2.8 Removing and installing selector lever handle .....	44
2.9 Removing and installing selector lever position display Y26 .....	57
2.10 Removing and installing selector lever cable .....	58
2.11 Checking and adjusting selector lever cable .....	64
2.12 Adjusting selector lever cable to basic setting .....	66
2.13 Renewing selector shaft oil seal .....	71
<b>3 Removing and installing gearbox</b> .....	<b>74</b>
3.1 Removing gearbox .....	74
3.2 Installing gearbox .....	161
3.3 Tightening torques for gearbox .....	172
<b>4 Assembly mountings</b> .....	<b>177</b>
4.1 Assembly overview - assembly mountings .....	177
4.2 Removing and installing tunnel cross member .....	177



4.3	Removing and installing gearbox support with gearbox mounting	180
4.4	Removing and installing gearbox mounting	181
<b>5</b>	<b>Transporting gearbox</b>	<b>183</b>
<b>6</b>	<b>Securing to engine and gearbox support</b>	<b>184</b>
<b>7</b>	<b>ATF</b>	<b>185</b>
7.1	Assembly overview - drain, filler and inspection plugs	185
7.2	Checking ATF level	185
7.3	Draining and filling ATF	190
<b>8</b>	<b>ATF circuit</b>	<b>195</b>
8.1	Assembly overview - ATF circuit	195
8.2	Cleaning ATF lines	199
8.3	Removing and installing ATF lines	203
8.4	Removing and installing ATF filter	208
8.5	Removing and installing ATF filter housing and connecting piece for ATF lines	218
<b>35 - Gears, shafts</b>		<b>222</b>
<b>1</b>	<b>Input shaft</b>	<b>222</b>
1.1	Renewing ball bearing for input shaft	222
1.2	Renewing input shaft oil seal	222
<b>39 - Final drive - front differential</b>		<b>223</b>
<b>1</b>	<b>Final drive</b>	<b>223</b>
1.1	Assembly overview - final drive	223
<b>2</b>	<b>Gear oil</b>	<b>226</b>
2.1	Assembly overview - gear oil drain and inspection plugs	226
2.2	Checking gear oil level	226
2.3	Draining and filling gear oil	230
2.4	Removing and installing gearbox oil temperature sender 2 G754	234
<b>3</b>	<b>Oil seals</b>	<b>235</b>
3.1	Renewing left oil seal	235
3.2	Renewing right oil seal	235
<b>4</b>	<b>Differential</b>	<b>236</b>
4.1	Removing and installing left flange shaft	236
4.2	Removing and installing right flange shaft	236
<b>5</b>	<b>Centre differential</b>	<b>240</b>
5.1	Assembly overview - centre differential housing	240
5.2	Removing and installing centre differential housing	244
5.3	Removing and installing rear flange shaft, oil seal and ball bearing	257
5.4	Removing and installing rear splined shaft, oil seal and ball bearing	258
5.5	Renewing oil seal for rear splined shaft	258
5.6	Pressing vibration damper onto rear splined shaft	258
5.7	Servicing centre differential housing	258
<b>6</b>	<b>Gearbox control system</b>	<b>259</b>
6.1	Overview of fitting locations - gearbox control system	259
6.2	Guided Functions for gearbox	265