

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions when working on the high-voltage system .....	2
2.2 Safety precautions when working in the vicinity of high-voltage components .....	3
2.3 Safety precautions for all vehicles .....	3
<b>3 Repair instructions</b> .....	<b>4</b>
<b>10 - Removing and installing engine</b> .....	<b>5</b>
<b>1 Removing and installing engine</b> .....	<b>5</b>
1.1 Removing engine .....	5
1.2 Securing engine to engine and gearbox support .....	43
1.3 Installing engine .....	44
<b>2 Assembly mountings</b> .....	<b>50</b>
2.1 Exploded view - assembly mountings .....	50
2.2 Removing and installing engine mountings .....	52
2.3 Removing and installing torque reaction support and cross member .....	54
2.4 Supporting engine in installation position .....	56
<b>3 Engine cover panel</b> .....	<b>58</b>
<b>13 - Crankshaft group</b> .....	<b>59</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>59</b>
1.1 Exploded view - cylinder block (pulley end) .....	59
1.2 Removing and installing poly V-belt .....	59
1.3 Removing and installing tensioner for poly V-belt .....	59
1.4 Removing and installing vibration damper .....	59
1.5 Removing and installing bracket for ancillaries .....	60
<b>2 Cylinder block (gearbox end)</b> .....	<b>66</b>
<b>3 Crankshaft</b> .....	<b>67</b>
<b>4 Balance shaft</b> .....	<b>68</b>
<b>5 Pistons and conrods</b> .....	<b>69</b>
<b>15 - Cylinder head, valve gear</b> .....	<b>70</b>
<b>1 Timing chain cover</b> .....	<b>70</b>
1.1 Exploded view - timing chain cover .....	70
1.2 Removing and installing timing chain cover .....	70
1.3 Renewing oil seal for vibration damper .....	71
<b>2 Chain drive</b> .....	<b>72</b>
2.1 Exploded view - camshaft timing chains .....	72
2.2 Exploded view - drive chain for balance shaft .....	72
2.3 Removing and installing bearing saddle .....	72
2.4 Removing camshaft timing chain from camshafts .....	72
2.5 Removing and installing camshaft timing chain .....	72
2.6 Removing and installing drive chain for balance shaft .....	73
2.7 Checking valve timing .....	73
<b>3 Cylinder head</b> .....	<b>74</b>
3.1 Exploded view - cylinder head .....	74
3.2 Removing and installing cylinder head .....	74
3.3 Checking compression .....	78
<b>4 Valve gear</b> .....	<b>79</b>
4.1 Exploded view - valve gear .....	79



4.2	Removing and installing camshaft	79
4.3	Installing ball for slider	80
4.4	Removing and installing actuators for camshaft adjustment	80
4.5	Removing and installing camshaft control valve 1 N205	81
4.6	Removing and installing valve stem oil seals	81
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>82</b>
<b>17</b>	<b>Lubrication</b>	<b>83</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>83</b>
1.1	Exploded view - sump/oil pump	83
1.2	Engine oil	83
1.3	Removing and installing sump (bottom section)	83
1.4	Removing and installing oil pump	85
1.5	Removing and installing sump (top section)	85
1.6	Removing and installing oil level and oil temperature sender G266	85
<b>2</b>	<b>Engine oil cooler</b>	<b>86</b>
<b>3</b>	<b>Crankcase breather</b>	<b>87</b>
3.1	Exploded view - crankcase breather system	87
3.2	Removing and installing oil separator	87
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>89</b>
<b>19</b>	<b>Cooling</b>	<b>90</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>90</b>
1.1	Connection diagram - coolant hoses	90
1.2	Checking cooling system for leaks	96
1.3	Draining and filling cooling system	96
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>110</b>
2.1	Exploded view - coolant pump/thermostat	110
2.2	Exploded view - electric coolant pump	110
2.3	Exploded view - coolant valves	116
2.4	Removing and installing electric coolant pump	117
2.5	Removing and installing coolant pump	124
2.6	Removing and installing toothed belt for coolant pump	125
2.7	Removing and installing thermostat	125
2.8	Checking thermostat	125
2.9	Removing and installing coolant temperature sender G62	126
2.10	Removing and installing coolant valves	128
<b>3</b>	<b>Coolant pipes</b>	<b>133</b>
3.1	Exploded view - coolant pipes	133
3.2	Removing and installing coolant pipes	136
<b>4</b>	<b>Radiator/radiator fans</b>	<b>142</b>
4.1	Exploded view - radiator/radiator fans	142
4.2	Exploded view - auxiliary radiator	144
4.3	Removing and installing radiator	145
4.4	Removing and installing radiator cowl	154
4.5	Removing and installing radiator fan V7	158
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>160</b>
<b>1</b>	<b>Turbocharger</b>	<b>160</b>
1.1	Exploded view - turbocharger	160
1.2	Removing and installing turbocharger	160
1.3	Checking vacuum unit for turbocharger	163
<b>2</b>	<b>Charge air system</b>	<b>164</b>
2.1	Exploded view - charge air system	164

2.2	Exploded view - hose connections for charge air system	165
2.3	Removing and installing charge air cooler	165
2.4	Removing and installing charge pressure sender G31	169
2.5	Checking charge air system for leaks	169
<b>24</b>	<b>Mixture preparation - injection</b>	<b>170</b>
<b>1</b>	<b>Injection system</b>	<b>170</b>
1.1	Overview of fitting locations - injection system	170
1.2	Checking fuel system for leaks	182
<b>2</b>	<b>Vacuum system</b>	<b>183</b>
<b>3</b>	<b>Air cleaner</b>	<b>184</b>
3.1	Exploded view - air cleaner housing	184
3.2	Removing and installing air cleaner housing	185
<b>4</b>	<b>Intake manifold</b>	<b>187</b>
4.1	Exploded view - intake manifold	187
4.2	Removing and installing intake manifold	187
4.3	Removing and installing throttle valve module J338	196
4.4	Cleaning throttle valve module	197
4.5	Checking intake manifold change-over function	197
<b>5</b>	<b>Injectors</b>	<b>198</b>
<b>6</b>	<b>Senders and sensors</b>	<b>199</b>
6.1	Removing and installing intake air temperature sender G42	199
6.2	Removing and installing air mass meter G70	199
6.3	Removing and installing fuel pressure sender G247	199
6.4	Checking fuel pressure sender G247	199
<b>7</b>	<b>High-pressure pump</b>	<b>200</b>
<b>8</b>	<b>Lambda probe</b>	<b>201</b>
8.1	Exploded view - Lambda probe	201
8.2	Removing and installing Lambda probe	201
<b>9</b>	<b>Engine control unit</b>	<b>206</b>
9.1	Removing and installing engine/motor control unit J623	206
9.2	Wiring and component check	209
<b>26</b>	<b>Exhaust system</b>	<b>210</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>210</b>
1.1	Exploded view - silencers	210
1.2	Separating exhaust pipes/silencers	217
1.3	Removing and installing front silencers	219
1.4	Renewing tailpipes	221
1.5	Stress-free alignment of exhaust system	222
1.6	Checking exhaust system for leaks	225
<b>2</b>	<b>Emission control system</b>	<b>226</b>
2.1	Exploded view - emission control system	226
2.2	Removing and installing catalytic converter	226
2.3	Removing and installing exhaust flap control unit J883	232
<b>3</b>	<b>Secondary air system</b>	<b>234</b>
3.1	Exploded view - secondary air system	234
3.2	Removing and installing secondary air pump motor V101	235
3.3	Removing and installing secondary air inlet valve N112	235
3.4	Removing and installing sender 1 for secondary air pressure G609	236
<b>4</b>	<b>Exhaust manifold</b>	<b>237</b>
<b>28</b>	<b>Ignition system</b>	<b>238</b>
<b>1</b>	<b>Ignition system</b>	<b>238</b>



1.1	Exploded view - ignition system .....	238
1.2	Removing and installing ignition coils with output stages .....	238
1.3	Removing and installing knock sensor 1 G61 .....	238
1.4	Removing and installing Hall senders .....	238
1.5	Removing and installing engine speed sender G28 .....	239