



Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Securing engine to engine and gearbox support	21
1.3 Installing engine	21
2 Assembly mountings	29
2.1 Exploded view - assembly mountings	29
2.2 Supporting engine in installation position	29
2.3 Removing and installing engine mountings	30
3 Engine cover panel	33
13 - Crankshaft group	34
1 Cylinder block (pulley end)	34
1.1 Exploded view - cylinder block (pulley end)	34
1.2 Removing and installing poly V-belt	34
1.3 Removing and installing tensioner for poly V-belt	34
1.4 Removing and installing vibration damper	34
1.5 Removing and installing bracket for ancillaries	35
2 Cylinder block (gearbox end)	36
3 Crankshaft	37
4 Balance shaft	38
5 Pistons and conrods	39
15 - Cylinder head, valve gear	40
1 Timing chain cover	40
1.1 Exploded view - timing chain cover	40
1.2 Removing and installing timing chain cover	40
1.3 Renewing oil seal for vibration damper	40
2 Chain drive	41
3 Cylinder head	42
3.1 Exploded view - cylinder head	42
3.2 Removing and installing cylinder head	42
3.3 Checking compression	45
4 Valve gear	46
4.1 Exploded view - valve gear	46
4.2 Removing and installing camshaft	46
4.3 Installing ball for slider	48
4.4 Removing and installing actuators for camshaft adjustment	48
4.5 Removing and installing camshaft control valve 1 N205	48
4.6 Removing and installing valve stem oil seals	48
5 Inlet and exhaust valves	49
17 - Lubrication	50
1 Sump/oil pump	50
1.1 Exploded view - sump/oil pump	50
1.2 Engine oil	50



1.3	Removing and installing sump (bottom section)	50
1.4	Removing and installing oil pump	51
1.5	Removing and installing sump (top section)	51
1.6	Removing and installing oil level and oil temperature sender G266	51
2	Engine oil cooler	52
3	Crankcase breather	53
4	Oil filter/oil pressure switch	54
19	Cooling	55
1	Cooling system/coolant	55
1.1	Connection diagram - coolant hoses	55
1.2	Checking cooling system for leaks	57
1.3	Draining and filling cooling system	57
2	Coolant pump/thermostat assembly	64
2.1	Exploded view - coolant pump/thermostat	64
2.2	Exploded view - coolant temperature senders	64
2.3	Removing and installing coolant pump	65
2.4	Removing and installing toothed belt for coolant pump	66
2.5	Removing and installing actuator for engine temperature regulation N493	67
2.6	Removing and installing coolant temperature sender G62	67
2.7	Removing and installing radiator outlet coolant temperature sender G83	67
3	Coolant pipes	69
3.1	Exploded view - coolant pipes	69
3.2	Removing and installing coolant pipes	69
4	Radiator/radiator fans	73
4.1	Exploded view - radiator/radiator fans	73
4.2	Removing and installing radiator	74
4.3	Removing and installing radiator cowl	79
4.4	Removing and installing radiator fans	83
4.5	Removing and installing radiator fan control unit J293	84
21	Turbocharging/supercharging	85
1	Turbocharger	85
1.1	Exploded view - turbocharger	85
1.2	Removing and installing turbocharger	85
2	Charge air system	86
2.1	Exploded view - charge air system	86
2.2	Exploded view - hose connections for charge air system	87
2.3	Removing and installing charge air cooler	87
2.4	Removing and installing charge pressure sender G31	89
2.5	Checking charge air system for leaks	89
24	Mixture preparation - injection	91
1	Injection system	91
1.1	Overview of fitting locations - injection system	91
1.2	Checking fuel system for leaks	98
2	Air cleaner	99
2.1	Exploded view - air cleaner housing	99
2.2	Removing and installing air cleaner housing	100
3	Intake manifold	102
3.1	Exploded view - intake manifold	102
3.2	Removing and installing intake manifold	102
3.3	Removing and installing throttle valve module J338	105
3.4	Cleaning throttle valve module	105

3.5	Checking intake manifold change-over function	105
4	Injectors	106
4.1	Exploded view - fuel rail with injectors	106
4.2	Removing and installing fuel rail	106
4.3	Removing and installing injectors	106
4.4	Cleaning injectors	106
5	Senders and sensors	107
6	High-pressure pump	108
7	Lambda probe	109
8	Engine control unit	110
8.1	Removing and installing engine control unit J623	110
26	- Exhaust system	113
1	Exhaust pipes/silencers	113
1.1	Exploded view - silencers	113
1.2	Removing and installing front silencers	115
1.3	Separating centre and rear silencers	116
1.4	Stress-free alignment of exhaust system	117
1.5	Aligning tailpipes	118
1.6	Checking exhaust system for leaks	118
2	Emission control system	119
2.1	Exploded view - emission control system	119
2.2	Removing and installing catalytic converter	119
28	- Ignition system	122
1	Ignition system	122