

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety precautions	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the subframe	3
2.5 Safety precautions when working on the cooling system	3
2.6 Safety precautions when working on the ignition system	3
2.7 Safety precautions when working on the exhaust system	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Foreign particles in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of pipes, hoses and wiring	7
3.7 Installing radiators and condensers	7
3.8 Nuts, bolts	7
3.9 Identification plates	7
3.10 Use of impact wrenches	7
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing engine	9
1.2 Separating engine and gearbox	33
1.3 Securing engine to engine and gearbox support	41
1.4 Installing engine	45
2 Assembly mountings	55
2.1 Exploded view - assembly mountings	55
2.2 Removing and installing engine mountings	56
3 Engine cover panel	64
3.1 Removing and installing engine cover panel	64
13 - Crankshaft group	65
1 Cylinder block (pulley end)	65
1.1 Exploded view - poly V-belt drive	65
1.2 Removing and installing poly V-belts	68
1.3 Removing and installing poly V-belt tensioner	74
1.4 Removing and installing vibration damper	77
1.5 Removing and installing sealing flange (pulley end)	79
2 Cylinder block (gearbox end)	84
2.1 Exploded view - drive plate	84
2.2 Removing and installing drive plate	84
2.3 Removing and installing sender wheel	86
2.4 Checking sender wheel	86
2.5 Renewing crankshaft oil seal (gearbox end)	87
2.6 Renewing needle bearing in drive plate	90
3 Crankshaft	93
3.1 Exploded view - crankshaft	93
3.2 Crankshaft dimensions	98



3.3	Measuring axial clearance of crankshaft	98
3.4	Measuring radial clearance of crankshaft	99
4	Balance shaft	101
4.1	Exploded view - balance shaft	101
4.2	Removing and installing balance shaft	101
5	Pistons and conrods	104
5.1	Exploded view - pistons and conrods	104
5.2	Removing and installing pistons	107
5.3	Checking pistons and cylinder bores	108
5.4	Checking radial clearance of conrod bearings	110
15	Cylinder head, valve gear	111
1	Cylinder head	111
1.1	Exploded view - cylinder head	111
1.2	Removing and installing cylinder head	115
1.3	Removing and installing cylinder head cover	125
1.4	Checking compression	128
2	Timing chain cover	131
2.1	Exploded view - timing chain cover	131
2.2	Removing and installing timing chain cover	135
3	Chain drive	149
3.1	Exploded view - camshaft timing chains	149
3.2	Exploded view - drive chain for valve gear	153
3.3	Exploded view - drive chain for balance shaft and oil pump	155
3.4	Removing and installing camshaft timing chain	156
3.5	Removing camshaft timing chain from camshafts	159
3.6	Removing and installing drive chain for valve gear	177
3.7	Removing and installing drive chain for auxiliary drive	179
4	Valve gear	184
4.1	Exploded view - valve gear	184
4.2	Measuring axial clearance of camshaft	187
4.3	Measuring radial clearance of camshaft	188
4.4	Removing and installing camshaft	189
4.5	Checking hydraulic compensation elements	197
4.6	Removing and installing valve stem oil seals	199
5	Inlet and exhaust valves	210
5.1	Checking valve guides	210
5.2	Checking valves	211
5.3	Valve dimensions	211
17	Lubrication	213
1	Sump/oil pump	213
1.1	Exploded view - sump/oil pump	213
1.2	Engine oil	217
1.3	Removing and installing sump (bottom section)	217
1.4	Removing and installing sump (top section)	221
1.5	Removing and installing oil pump	225
1.6	Removing and installing oil level and oil temperature sender G266	225
1.7	Checking oil level	226
2	Engine oil cooler	227
2.1	Removing and installing engine oil cooler	227
3	Crankcase breather	230
3.1	Exploded view - crankcase breather system	230
3.2	Removing and installing oil separator	232

3.3	Removing and installing pressure control valve	233
3.4	Removing and installing oil drain valve	236
3.5	Removing and installing crankcase breather hoses	237
3.6	Removing and installing crankcase breather shut-off valve N548	238
4	Oil filter/oil pressure switches	241
4.1	Exploded view - oil filter housing/oil pressure switches	241
4.2	Removing and installing oil pressure switch F22	244
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	245
4.4	Checking oil pressure	246
4.5	Checking oil pressure switch F22/oil pressure switch for reduced oil pressure F378	246
4.6	Removing and installing oil filter housing	247
4.7	Removing and installing valve for oil pressure control N428	249
19 - Cooling		252
1	Cooling system/coolant	252
1.1	Connection diagram - coolant hoses	252
1.2	Checking cooling system for leaks	256
1.3	Draining and filling cooling system	258
2	Coolant pump/thermostat assembly	270
2.1	Exploded view - coolant pump/thermostat	270
2.2	Removing and installing coolant pump	271
2.3	Removing and installing thermostat	274
2.4	Removing and installing coolant temperature sender G62	275
2.5	Removing and installing temperature sender for engine temperature regulation G694	276
3	Coolant pipes	277
3.1	Exploded view - coolant pipes	277
3.2	Removing and installing coolant pipes	280
4	Radiators/radiator fans	297
4.1	Exploded view - radiators/radiator fans	297
4.2	Exploded view - radiator cowl and radiator fans	299
4.3	Exploded view - water radiator (left-side) for charge air cooling circuit, charge air cooling pump	300
4.4	Removing and installing radiator	301
4.5	Removing and installing radiator cowl	308
4.6	Removing water radiator (front) for charge air cooling circuit	313
4.7	Removing and installing water radiator (left-side) for charge air cooling circuit	316
4.8	Removing and installing radiator fans	320
4.9	Removing and installing charge air cooling pump V188	321
21 - Turbocharging/supercharging		324
1	Charge air system	324
1.1	Exploded view - charge air system	324
1.2	Removing and installing charge air cooler	325
1.3	Removing and installing charge pressure sender G31/G447	331
2	Supercharger	333
2.1	Exploded view - supercharger	333
2.2	Exploded view - drive unit	335
2.3	Removing and installing supercharger	336
2.4	Checking supercharger for leaks	342
2.5	Removing and installing drive unit and damper spring	345
2.6	Securing supercharger to engine and gearbox support	348
24 - Mixture preparation - injection		352
1	Injection system	352
1.1	Overview of fitting locations - injection system	352



1.2	Checking fuel system for leaks	363
2	Vacuum system	364
2.1	Connection diagram - vacuum system	364
2.2	Checking vacuum system	366
2.3	Removing and installing vacuum unit for actuating intake manifold flaps	366
3	Injectors	374
3.1	Removing and installing injectors	374
3.2	Cleaning injectors	379
4	Air cleaner	382
4.1	Exploded view - air cleaner housing	382
4.2	Removing and installing air cleaner housing	384
5	Intake manifold	387
5.1	Exploded view - intake manifold (bottom section) with fuel rail	387
5.2	Removing and installing intake manifold (bottom section) with fuel rail	391
5.3	Removing and installing throttle valve module J338	395
5.4	Cleaning throttle valve module	397
5.5	Removing and installing regulating flap control unit J808	399
6	Senders and sensors	400
6.1	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71	400
7	Engine control unit	402
7.1	Wiring and component check with test box V.A.G 1598/42	402
7.2	Removing and installing engine control unit J623	404
8	High-pressure pump	409
8.1	Exploded view - high-pressure pump	409
8.2	Removing and installing high-pressure pump	411
8.3	Removing and installing high-pressure pipe	414
9	Lambda probe	418
9.1	Exploded view - Lambda probe	418
9.2	Removing and installing Lambda probe	419
26	Exhaust system	424
1	Exhaust pipes/silencers	424
1.1	Exploded view - silencers	424
1.2	Separating exhaust pipes/silencers	428
1.3	Removing and installing front silencers	430
1.4	Removing and installing silencers	431
1.5	Stress-free alignment of exhaust system	433
1.6	Checking exhaust system for leaks	434
1.7	Aligning tailpipes	435
2	Emission control system	437
2.1	Removing and installing catalytic converter	437
2.2	Removing and installing exhaust flap control unit J883/J945	442
3	Secondary air system	444
3.1	Exploded view - secondary air system	444
3.2	Removing and installing secondary air pump motor V101	447
3.3	Removing and installing combination valve	449
3.4	Removing and installing sender 1 for secondary air pressure G609	454
3.5	Checking combination valve for correct operation and leaks	455
4	Exhaust manifolds	458
4.1	Exploded view - exhaust manifolds	458
4.2	Removing and installing exhaust manifold	460
28	Ignition system	465

1	Ignition system	465
1.1	Exploded view - ignition system	465
1.2	Test data - spark plugs	467
1.3	Removing and installing ignition coils	467
1.4	Removing and installing knock sensor	470
1.5	Removing and installing Hall senders	471
1.6	Removing and installing engine speed sender G28	473