

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	2
2 General notes	4
2.1 General notes on ignition system	4
3 Safety precautions	5
3.1 Safety precautions when working on the fuel system	5
3.2 Safety precautions when working on the fuel supply system	7
3.3 Safety precautions when working on vehicles with start/stop system	8
3.4 Safety precautions when using testers and measuring instruments during a road test	8
3.5 Safety precautions when working on the subframe	8
3.6 Safety precautions when working on the cooling system	9
3.7 Safety precautions when working on the ignition system	10
3.8 Safety precautions when working on the exhaust system	11
4 Repair instructions	12
4.1 Rules for cleanliness	12
4.2 Foreign particles in engine	12
4.3 Contact corrosion	12
4.4 Routing and attachment of pipes, hoses and wiring	13
4.5 Installing radiators and condensers	13
4.6 Checking vacuum system	13
4.7 Nuts, bolts	14
4.8 Identification plates	14
4.9 Use of impact wrenches	14
10 - Removing and installing engine	16
1 Removing and installing engine	16
1.1 Removing engine	16
1.2 Separating engine and gearbox	55
1.3 Securing engine to engine and gearbox support	66
1.4 Installing engine	70
2 Assembly mountings	85
2.1 Exploded view - assembly mountings	85
2.2 Removing and installing engine mountings	86
13 - Crankshaft group	92
1 Cylinder block (pulley end)	92
1.1 Exploded view - poly V-belt drive	92
1.2 Removing and installing poly V-belt	94
1.3 Removing and installing poly V-belt tensioner	95
1.4 Removing and installing vibration damper	96
1.5 Removing and installing sealing flange (pulley end)	96
2 Cylinder block (gearbox end)	100
2.1 Exploded view - drive plate	100
2.2 Removing and installing drive plate	100
2.3 Renewing crankshaft oil seal (gearbox end)	101
2.4 Renewing needle bearing in drive plate	103
3 Crankshaft	105
3.1 Exploded view - crankshaft	105
3.2 Crankshaft dimensions	108
3.3 Measuring axial clearance of crankshaft	108
3.4 Measuring radial clearance of crankshaft	109



4	Balance shaft	111
4.1	Exploded view - balance shaft	111
4.2	Removing and installing balance shaft	111
5	Pistons and conrods	113
5.1	Exploded view - pistons and conrods	113
5.2	Removing and installing pistons	115
5.3	Checking pistons and cylinder bores	117
5.4	Checking radial clearance of conrod bearings	119
15	- Cylinder head, valve gear	120
1	Cylinder head	120
1.1	Exploded view - cylinder head	120
1.2	Removing and installing cylinder head	123
1.3	Removing and installing cylinder head cover	142
1.4	Checking compression	146
2	Timing chain cover	151
2.1	Exploded view - timing chain cover	151
2.2	Removing and installing timing chain cover	153
3	Chain drive	162
3.1	Exploded view - camshaft timing chains	162
3.2	Exploded view - drive chain for valve gear	164
3.3	Exploded view - drive chain for balance shaft and oil pump	166
3.4	Removing and installing camshaft timing chain	166
3.5	Removing camshaft timing chain from camshafts	168
3.6	Removing and installing drive chain for valve gear	178
3.7	Removing and installing drive chain for auxiliary drive	179
4	Valve gear	183
4.1	Exploded view - valve gear	183
4.2	Measuring axial clearance of camshaft	186
4.3	Removing and installing camshaft	186
4.4	Checking hydraulic compensation elements	192
4.5	Removing and installing valve stem oil seals	192
5	Inlet and exhaust valves	201
5.1	Checking valve guides	201
5.2	Checking valves	202
5.3	Valve dimensions	203
17	- Lubrication	204
1	Sump/oil pump	204
1.1	Exploded view - sump/oil pump	204
1.2	Engine oil	207
1.3	Removing and installing sump (bottom section)	207
1.4	Removing and installing sump (top section)	209
1.5	Removing and installing oil pump	212
1.6	Removing and installing oil level and oil temperature sender G266	212
1.7	Checking oil level	212
2	Engine oil cooler	213
2.1	Removing and installing engine oil cooler	213
3	Crankcase breather	215
3.1	Exploded view - crankcase breather system	215
3.2	Removing and installing oil separator	216
3.3	Removing and installing pressure control valve	217
3.4	Removing and installing oil drain valve	218
3.5	Removing and installing crankcase breather shut-off valve N548	219

3.6	Removing and installing crankcase breather hoses	220
4	Oil filter/oil pressure switches	222
4.1	Exploded view - oil filter housing/oil pressure switch	222
4.2	Removing and installing oil pressure switch F22	223
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	225
4.4	Checking oil pressure	226
4.5	Removing and installing oil filter housing	226
4.6	Removing and installing valve for oil pressure control N428	228
4.7	Checking oil pressure switch F22 / oil pressure switch for reduced oil pressure F378	230
19	Cooling	231
1	Cooling system/coolant	231
1.1	Connection diagram - coolant hoses	231
1.2	Checking cooling system for leaks	234
1.3	Draining and filling cooling system	235
2	Coolant pump/thermostat assembly	243
2.1	Exploded view - coolant pump/thermostat	243
2.2	Exploded view - continued coolant circulation pump V51	244
2.3	Removing and installing continued coolant circulation pump V51	244
2.4	Removing and installing coolant pump	245
2.5	Removing and installing thermostat	247
2.6	Checking thermostat	248
2.7	Removing and installing coolant temperature sender G62	248
3	Coolant pipes	249
3.1	Exploded view - coolant pipes	249
3.2	Removing and installing coolant pipes	250
4	Radiator/radiator fans	258
4.1	Exploded view - radiator/radiator fans	258
4.2	Removing and installing radiator	259
4.3	Removing and installing radiator cowl	264
4.4	Removing and installing radiator fans	269
4.5	Removing and installing radiator fan control unit J293 / J671	270
24	Mixture preparation - injection	271
1	Injection system	271
1.1	Overview of fitting locations - injection system	271
1.2	Checking fuel system for leaks	282
2	Injectors	283
2.1	Removing and installing injectors	283
3	Air cleaner	287
3.1	Exploded view - air cleaner housing	287
3.2	Removing and installing air cleaner housing	288
4	Intake manifold	293
4.1	Exploded view - intake manifold	293
4.2	Exploded view - intake manifold (bottom section) with fuel rail	295
4.3	Removing and installing intake manifold (bottom section) with fuel rail	296
4.4	Removing and installing intake manifold (top section)	298
5	Senders and sensors	301
5.1	Removing and installing fuel pressure sender G247	301
6	Engine control unit	302
6.1	Wiring and component check with test box V.A.G 1598/42	302
6.2	Removing and installing engine control unit J623	304
7	High-pressure pump	308
7.1	Exploded view - high-pressure pump	308



7.2	Removing and installing high-pressure pump	310
7.3	Removing and installing high-pressure pipe	313
7.4	Checking fuel pressure and residual pressure (up to high-pressure pump)	314
8	Lambda probe	319
8.1	Exploded view - Lambda probe	319
8.2	Removing and installing Lambda probe	320
26	- Exhaust system	328
1	Exhaust pipes/silencers	328
1.1	Exploded view - silencers	328
1.2	Removing and installing front silencer	331
1.3	Removing and installing silencers	332
1.4	Renewing tailpipes	333
1.5	Stress-free alignment of exhaust system	334
1.6	Checking exhaust system for leaks	335
1.7	Aligning tailpipe	335
2	Emission control system	336
2.1	Removing and installing catalytic converter	336
3	Secondary air system	344
3.1	Exploded view - secondary air system	344
3.2	Removing and installing secondary air pump motor V101	345
3.3	Removing and installing combination valve	347
3.4	Checking combination valve for correct operation and leaks	354
3.5	Removing and installing sender 1 for secondary air pressure G609	359
4	Exhaust manifolds	361
4.1	Exploded view - exhaust manifold	361
4.2	Removing and installing exhaust manifolds	362
28	- Ignition system	368
1	Ignition system	368
1.1	Exploded view - ignition system	368
1.2	Test data - spark plugs	369
1.3	Removing and installing ignition coils	369
1.4	Removing and installing knock sensor	371
1.5	Removing and installing Hall senders	372
1.6	Removing and installing engine speed sender G28	373