



Contents

24 - Mixture preparation - injection	1
1 Safety precautions	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions for vehicles with start/stop system	2
1.4 Safety precautions when working on the fuel system	3
1.5 Safety precautions when working on the ignition system	3
1.6 Warning instructions when working on vehicles with high-voltage system	4
1.7 Reducing pressure in high-pressure section of injection system	8
1.8 Checking vacuum system	11
2 Injection system	13
2.1 Technical data	13
2.2 Overview of fitting locations - injection system (CDNC, CDNB, CADA, CAEB and CDZA)	13
2.3 Overview of fitting locations - injection system (CPMA)	23
2.4 Overview of fitting locations - injection system (vehicles with hybrid drive - CHJA)	34
3 Air cleaner	45
3.1 Exploded view - air cleaner	45
3.2 Removing and installing engine cover panel	46
3.3 Removing and installing air filter element	46
3.4 Removing air cleaner housing	48
4 Intake manifold	52
4.1 Exploded view - intake manifold (CDNC, CDNB, CADA, CAEB, CDZA and CHJA)	52
4.2 Exploded view - fuel rail (CDNC, CDNB, CADA, CAEB, CDZA and CHJA)	54
4.3 Exploded view - intake manifold (CPMA)	56
4.4 Exploded view - fuel rail (CPMA)	59
4.5 Removing and installing intake manifold (CDNC, CDNB, CADA, CAEB and CDZA)	61
4.6 Removing and installing intake manifold (vehicles with hybrid drive - CHJA)	65
4.7 Removing and installing fuel rail (CDNC, CDNB, CADA, CAEB, CDZA and CHJA)	70
4.8 Removing and installing intake manifold (top section, CPMA)	71
4.9 Removing and installing intake manifold (bottom section, CPMA)	75
4.10 Removing and installing fuel rail (CPMA)	77
4.11 Removing and installing cold-start valve N17 (CPMA)	78
4.12 Removing and installing throttle valve module J338	79
4.13 Cleaning throttle valve module J338	80
4.14 Checking intake manifold change-over function	81
5 High-pressure pump	83
5.1 Exploded view - high-pressure pump	83
5.2 Removing and installing high-pressure pump	84
6 Injectors	87
6.1 Removing and installing injectors	87
6.2 Cleaning injectors	90
7 Senders and sensors	92
7.1 Removing and installing air mass meter G70	92
7.2 Removing and installing fuel pressure sender G247	92
7.3 Checking fuel pressure sender G247	94
7.4 Checking residual pressure in fuel system (up to high-pressure pump)	96
7.5 Checking dual non-return valve	98
8 Lambda probes	100
8.1 Overview - Lambda probes - (engine codes CDNC, CDNB, CADA, CAEB, CDZA and CPMA)	100
8.2 Overview - Lambda probes for vehicles with hybrid drive (engine code CHJA)	105

9	Engine control unit	110
9.1	Wiring and component check with test box V.A.G 1598/42	110
9.2	Wiring and component check with isolator boxes VAS 6606 for vehicles with hybrid drive (engine code CHJA)	112
9.3	Renewing engine control unit J623	113
28	- Ignition system	117
1	General notes and safety precautions	117
1.1	General notes on ignition system	117
1.2	Safety precautions	117
2	Ignition system	119
2.1	Test data	119
2.2	Exploded view - ignition system	120
2.3	Removing and installing ignition coils with output stages	120
2.4	Removing knock sensor 1 G61	122
2.5	Removing and installing engine speed sender G28	123