

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel supply system	1
1.2 Reducing pressure in high-pressure section of injection system	2
1.3 Safety precautions when working on vehicles with start/stop system	3
1.4 Safety precautions when using testers and measuring instruments during a road test	4
1.5 Safety precautions when working on the ignition system	4
2 Repair instructions	5
2.1 Rules for cleanliness	5
2.2 General notes	5
2.3 General repair instructions	6
2.4 Checking fuel system for leaks	6
2.5 Checking vacuum system	6
24 - Mixture preparation - injection	8
1 Injection system	8
1.1 Overview of fitting locations - injection system	8
2 Air cleaner	17
2.1 Exploded view - air cleaner	17
2.2 Removing and installing air cleaner housing	18
3 Intake manifold (bottom section), fuel rail with injectors	21
3.1 Exploded view - intake manifold (bottom section), fuel rail, injector	21
3.2 Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	24
3.3 Removing and installing throttle valve module J338	25
3.4 Removing and installing regulating flap control unit J808	27
3.5 Removing and installing intake manifold (bottom section) with fuel rail	27
3.6 Removing and installing injectors	30
3.7 Cleaning injectors	33
4 High-pressure pump	35
4.1 Exploded view - high-pressure pump	35
4.2 Removing and installing high-pressure pipe	36
4.3 Removing and installing high-pressure pump	38
5 Lambda probes	42
5.1 Overview - Lambda probes	42
5.2 Removing and installing Lambda probe G39 / G130	43
5.3 Removing and installing Lambda probe G108 / G131	44
6 Engine control unit	47
6.1 Wiring and component check with test box V.A.G 1598/42	47
6.2 Removing and installing engine control unit	49
28 - Ignition system	53
1 Ignition system	53
1.1 Test data	53
1.2 Exploded view - ignition system	54
1.3 Removing and installing ignition coils	54
1.4 Removing and installing knock sensors G61 / G66	56
1.5 Removing and installing Hall senders G40 / G163	57
1.6 Removing and installing engine speed sender G28	58