

## Contents

<b>24 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 General notes on self-diagnosis	1
1.2 Safety precautions	1
1.3 Rules for cleanliness when working on the injection system	3
1.4 Important: Required procedure prior to opening high-pressure injection system	3
1.5 Checking for leaks in fuel system	4
1.6 Checking vacuum system	5
<b>2 Injection system</b>	<b>6</b>
2.1 Technical data	6
2.2 Overview of fitting locations	6
2.3 Air cleaner - exploded view	17
2.4 Removing and installing air filter element	18
2.5 Removing air cleaner housing (bottom section)	20
2.6 Intake manifold (top section) - exploded view	23
2.7 Intake manifold (bottom section) with fuel rail - exploded view	25
2.8 Removing and installing intake manifold (top section)	26
2.9 Removing and installing intake manifold (bottom section) with fuel rail	28
2.10 Removing and installing fuel pressure sender G247	30
2.11 Checking fuel pressure and residual pressure (up to high-pressure pump)	30
2.12 High-pressure pump - exploded view	35
2.13 Removing and installing high-pressure pump	36
2.14 Removing and installing injectors	40
2.15 Removing and installing high-pressure pipes	44
2.16 Lambda probes - overview	45
2.17 Removing and installing Lambda probe G39 before catalytic converter - bank 1 (right-side)	46
2.18 Removing and installing Lambda probe after catalytic converter G130 - bank 1 (right-side)	48
2.19 Removing and installing Lambda probe 2 G108 before catalytic converter - bank 2 (left-side)	50
2.20 Removing and installing Lambda probe 2 after catalytic converter G131 - bank 2 (left-side)	52
<b>3 Engine control unit</b>	<b>55</b>
3.1 Wiring and component check with test box V.A.G 1598/42	55
3.2 Removing and installing engine control unit J623	56
<b>28 - Ignition system</b>	<b>60</b>
<b>1 General notes and safety precautions</b>	<b>60</b>
1.1 General notes on ignition system	60
1.2 Safety precautions	60
<b>2 Servicing ignition system</b>	<b>62</b>
2.1 Test data	62
2.2 Ignition system - exploded view	62
2.3 Removing and installing ignition coils	63
2.4 Removing and installing knock sensors	65
2.5 Removing and installing Hall sender	66
2.6 Removing and installing engine speed sender G28	67