

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Engine number/engine data | 1 |
| 2 Safety information | 2 |
| 2.1 Safety precautions when working on the fuel system | 2 |
| 2.2 Safety precautions when working on vehicles with start/stop system | 3 |
| 2.3 Safety precautions when using testers and measuring instruments during a road test | 3 |
| 2.4 Safety precautions when working on the subframe | 4 |
| 2.5 Safety precautions when working on the cooling system | 4 |
| 2.6 Safety precautions when working on the exhaust system | 4 |
| 3 Repair instructions | 6 |
| 3.1 Rules for cleanliness | 6 |
| 3.2 General notes | 6 |
| 3.3 General repair instructions | 7 |
| 3.4 Nuts, bolts | 7 |
| 3.5 Identification plates | 8 |
| 3.6 Use of impact wrenches | 8 |
| 3.7 Foreign material in engine | 9 |
| 3.8 Contact corrosion | 9 |
| 3.9 Routing and attachment of pipes, hoses and wiring | 9 |
| 3.10 Installing radiators and condensers | 9 |
| 10 - Removing and installing engine | 10 |
| 1 Removing and installing engine | 10 |
| 1.1 Removing engine | 10 |
| 1.2 Securing engine to engine and gearbox support | 34 |
| 1.3 Installing engine | 35 |
| 2 Assembly mountings | 43 |
| 2.1 Assembly overview - assembly mountings | 43 |
| 2.2 Removing and installing engine mountings | 43 |
| 2.3 Supporting engine in installation position | 45 |
| 3 Engine cover panel | 48 |
| 3.1 Removing and installing engine cover panel | 48 |
| 13 - Crankshaft group | 49 |
| 1 Cylinder block (pulley end) | 49 |
| 1.1 Assembly overview - poly V-belt drive | 49 |
| 1.2 Assembly overview - sealing flange (pulley end) | 51 |
| 1.3 Removing and installing poly V-belt | 53 |
| 1.4 Removing and installing poly V-belt tensioner | 55 |
| 1.5 Removing and installing vibration damper | 57 |
| 1.6 Removing and installing bracket for ancillaries | 58 |
| 1.7 Renewing crankshaft oil seal (pulley end) | 61 |
| 1.8 Removing and installing sealing flange (pulley end) | 63 |
| 2 Cylinder block (gearbox end) | 68 |
| 2.1 Assembly overview - cylinder block (gearbox end) | 68 |
| 2.2 Removing and installing drive plate | 69 |
| 2.3 Removing and installing sealing flange (gearbox end) | 70 |
| 2.4 Renewing needle bearing in drive plate | 81 |
| 3 Crankshaft | 84 |
| 3.1 Assembly overview - crankshaft | 84 |
| 3.2 Crankshaft dimensions | 85 |



| | | |
|---|---|------------|
| 3.3 | Measuring axial clearance of crankshaft | 86 |
| 3.4 | Measuring radial clearance of crankshaft | 87 |
| 3.5 | Pulling spur gear off crankshaft and shrink-fitting new spur gear | 87 |
| 4 | Pistons and conrods | 91 |
| 4.1 | Assembly overview - pistons and conrods | 91 |
| 4.2 | Measuring piston projection at TDC | 97 |
| 4.3 | Piston and cylinder dimensions | 99 |
| 4.4 | Checking radial clearance of conrod bearings | 99 |
| 15 - Cylinder head, valve gear | | 100 |
| 1 | Cylinder head | 100 |
| 1.1 | Assembly overview - cylinder head | 100 |
| 1.2 | Assembly overview - cylinder head cover | 103 |
| 1.3 | Removing and installing cylinder head | 105 |
| 1.4 | Removing and installing cylinder head cover | 113 |
| 1.5 | Checking compression | 115 |
| 2 | Toothed belt drive | 118 |
| 2.1 | Assembly overview - toothed belt | 118 |
| 2.2 | Removing and installing toothed belt | 120 |
| 3 | Valve gear | 135 |
| 3.1 | Assembly overview - valve gear | 135 |
| 3.2 | Measuring axial clearance of camshaft | 137 |
| 3.3 | Measuring radial clearance of camshaft | 138 |
| 3.4 | Removing and installing camshaft oil seal | 139 |
| 3.5 | Removing and installing camshaft | 141 |
| 3.6 | Removing and installing valve stem oil seals | 149 |
| 4 | Inlet and exhaust valves | 160 |
| 4.1 | Reworking valve seats | 160 |
| 4.2 | Checking valve guides | 160 |
| 4.3 | Checking valves | 161 |
| 4.4 | Valve dimensions | 161 |
| 17 - Lubrication | | 162 |
| 1 | Sump/oil pump | 162 |
| 1.1 | Assembly overview - sump/oil pump | 162 |
| 1.2 | Engine oil | 168 |
| 1.3 | Removing and installing sump | 168 |
| 1.4 | Removing and installing oil pump | 173 |
| 1.5 | Removing and installing oil level and oil temperature sender G266 | 174 |
| 2 | Engine oil cooler | 176 |
| 2.1 | Removing and installing engine oil cooler | 176 |
| 3 | Oil filter/oil pressure switches | 178 |
| 3.1 | Exploded view - oil filter housing/oil pressure switch | 178 |
| 3.2 | Removing and installing oil pressure switch F1 | 180 |
| 3.3 | Checking oil pressure and oil pressure switch | 181 |
| 3.4 | Removing and installing oil supply line | 183 |
| 3.5 | Removing and installing oil filter housing | 185 |
| 3.6 | Checking oil level | 187 |
| 4 | Balance shaft module | 188 |
| 4.1 | Removing and installing balance shaft module | 188 |
| 19 - Cooling | | 195 |
| 1 | Cooling system/coolant | 195 |
| 1.1 | Connection diagram - coolant hoses | 195 |
| 1.2 | Checking cooling system for leaks | 197 |

| | | |
|---|--|------------|
| 1.3 | Draining and filling cooling system | 199 |
| 2 | Coolant pump/thermostat assembly | 206 |
| 2.1 | Assembly overview - coolant pump/thermostat | 206 |
| 2.2 | Removing and installing pump for exhaust gas recirculation cooler V400 | 206 |
| 2.3 | Removing and installing coolant pump | 208 |
| 2.4 | Removing and installing thermostat | 210 |
| 2.5 | Removing and installing 4/2-way valve with thermostat | 212 |
| 2.6 | Removing and installing coolant temperature sender G62 | 214 |
| 2.7 | Removing and installing radiator outlet coolant temperature sender G83 | 215 |
| 3 | Radiator/radiator fans | 217 |
| 3.1 | Exploded view - radiator/radiator fans | 217 |
| 3.2 | Removing and installing radiator cowl with radiator fans | 219 |
| 3.3 | Removing and installing radiator cowl | 226 |
| 3.4 | Removing and installing radiator fan control unit J293 | 232 |
| 3.5 | Removing and installing radiator fans | 234 |
| 21 - Turbocharging/supercharging | 235 | |
| 1 | Turbocharger | 235 |
| 1.1 | Exploded view - turbocharger | 235 |
| 1.2 | Removing and installing turbocharger | 237 |
| 2 | Charge air system | 243 |
| 2.1 | Assembly overview - charge air system | 243 |
| 2.2 | Removing and installing charge air cooler | 245 |
| 2.3 | Removing and installing charge pressure sender G31 | 249 |
| 2.4 | Checking charge air system for leaks | 249 |
| 23 - Mixture preparation - injection | 253 | |
| 1 | Injection system | 253 |
| 1.1 | Overview - fuel system | 253 |
| 1.2 | Overview of fitting locations - injection system | 255 |
| 1.3 | Exploded view - fuel system | 265 |
| 1.4 | Filling and bleeding fuel system | 268 |
| 1.5 | Checking fuel system for leaks | 269 |
| 1.6 | Checking fuel pressure (low pressure) system | 269 |
| 2 | Vacuum system | 270 |
| 2.1 | Checking vacuum system | 270 |
| 3 | Injectors/high-pressure reservoir (rail) | 271 |
| 3.1 | Checking injectors | 271 |
| 3.2 | Performing adaptation of correction values for injectors | 271 |
| 3.3 | Checking for injectors sticking open | 272 |
| 3.4 | Measuring return flow rate of injectors with engine running | 275 |
| 3.5 | Checking return flow rate of injectors at starter cranking speed | 278 |
| 3.6 | Checking pressure retention valve in fuel return line | 280 |
| 3.7 | Removing and installing injectors | 281 |
| 3.8 | Removing and installing high-pressure pipes | 287 |
| 3.9 | Removing and installing high-pressure reservoir (rail) | 290 |
| 4 | Air filter | 294 |
| 4.1 | Assembly overview - air filter housing | 294 |
| 4.2 | Removing and installing air filter housing | 296 |
| 5 | Intake manifold | 301 |
| 5.1 | Exploded view - intake manifold | 301 |
| 5.2 | Removing and installing intake manifold | 301 |
| 6 | Senders and sensors | 306 |
| 6.1 | Removing and installing fuel pressure regulating valve N276 | 306 |



| | | |
|------------------------------------|--|------------|
| 6.2 | Checking fuel pressure regulating valve N276 | 308 |
| 6.3 | Removing and installing fuel pressure sender G247 | 310 |
| 6.4 | Removing and installing air mass meter G70 | 312 |
| 6.5 | Removing and installing exhaust gas pressure sensor 1 G450 | 313 |
| 7 | Engine control unit | 315 |
| 7.1 | Wiring and component check with test box V.A.G 1598/42 | 315 |
| 7.2 | Removing and installing engine/motor control unit J623 | 317 |
| 8 | High-pressure pump | 322 |
| 8.1 | Removing and installing high-pressure pump | 322 |
| 8.2 | Performing first fuel filling after installing high-pressure pump | 324 |
| 9 | Lambda probe | 326 |
| 9.1 | Assembly overview - Lambda probe | 326 |
| 9.2 | Removing and installing Lambda probe | 327 |
| 26 - Exhaust system | 329 | |
| 1 | Exhaust pipes/silencers | 329 |
| 1.1 | Exploded view - silencers | 329 |
| 1.2 | Removing and installing front exhaust pipe | 333 |
| 1.3 | Separating exhaust pipes/silencers | 334 |
| 1.4 | Renewing tailpipes | 335 |
| 1.5 | Stress-free alignment of exhaust system | 336 |
| 1.6 | Checking exhaust system for leaks | 338 |
| 2 | Emission control system | 339 |
| 2.1 | Removing and installing particulate filter | 339 |
| 3 | Exhaust gas temperature regulation | 344 |
| 3.1 | Assembly overview - exhaust gas temperature regulation | 344 |
| 3.2 | Removing and installing exhaust gas temperature sender | 345 |
| 4 | Exhaust gas recirculation | 350 |
| 4.1 | Assembly overview - exhaust gas recirculation system | 350 |
| 4.2 | Removing and installing exhaust gas recirculation valve N18 | 351 |
| 4.3 | Removing and installing exhaust gas recirculation cooler | 352 |
| 4.4 | Removing and installing vacuum unit for exhaust gas recirculation cooler | 353 |
| 4.5 | Cleaning exhaust gas recirculation system | 356 |
| 5 | Exhaust manifold | 362 |
| 5.1 | Exploded view - exhaust manifold | 362 |
| 5.2 | Removing and installing exhaust manifold | 362 |
| 28 - Glow plug system | 364 | |
| 1 | Glow plug system | 364 |
| 1.1 | Removing and installing glow plug | 364 |
| 1.2 | Checking glow plug | 366 |
| 1.3 | Removing and installing Hall sender G40 | 367 |
| 1.4 | Removing and installing engine speed sender G28 | 368 |