

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine identification number/engine data	1
2 Safety precautions	3
2.1 Safety precautions when working on the fuel system	3
2.2 Safety precautions when using testers and measuring instruments during a road test	4
2.3 Safety precautions when working on the subframe	4
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the injection and glow plug system	5
2.6 Safety precautions when working on the exhaust system	5
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 Contact corrosion	7
3.3 Routing and attachment of pipes, hoses and wiring	8
3.4 Installing radiators and condensers	8
3.5 Notes on injection and glow plug system	8
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing engine	9
1.2 Separating engine and gearbox	27
1.3 Securing engine to engine and gearbox support	33
1.4 Installing engine	38
2 Assembly mountings	44
2.1 Exploded view - assembly mountings	44
2.2 Removing and installing engine mountings	45
3 Engine cover panel	50
3.1 Removing and installing engine cover panel	50
13 - Crankshaft group	51
1 Cylinder block (pulley end)	51
1.1 Exploded view - poly V-belt drive	51
1.2 Exploded view - sealing flange (pulley end)	55
1.3 Removing and installing poly V-belt	56
1.4 Removing and installing tensioner for poly V-belt	58
1.5 Removing and installing idler roller (left-side) for poly V-belt	58
1.6 Removing and installing vibration damper	58
1.7 Removing and installing bracket for ancillaries	59
1.8 Renewing crankshaft oil seal (pulley end)	59
1.9 Removing and installing sealing flange (pulley end)	60
2 Cylinder block (gearbox end)	63
2.1 Exploded view - drive plate	63
2.2 Removing and installing drive plate	63
2.3 Renewing crankshaft oil seal (gearbox end)	64
2.4 Renewing needle bearing in drive plate	66
2.5 Checking sender wheel	68
3 Crankshaft	70
3.1 Exploded view - crankshaft	70
3.2 Crankshaft dimensions	72
3.3 Measuring axial clearance of crankshaft	72
3.4 Measuring radial clearance of crankshaft	73
4 Balance shaft	74

4.1	Exploded view - balance shaft	74
4.2	Removing and installing balance shaft	74
5	Pistons and conrods	77
5.1	Exploded view - pistons and conrods	77
5.2	Measuring piston projection at TDC	80
5.3	Piston and cylinder dimensions	82
5.4	Checking radial clearance of conrod bearings	82
15 - Cylinder head, valve gear		83
1	Cylinder head	83
1.1	Exploded view - cylinder head	83
1.2	Exploded view - cylinder head cover	85
1.3	Removing and installing cylinder head	86
1.4	Removing and installing cylinder head cover	97
1.5	Checking compression	105
2	Timing chain cover	108
2.1	Exploded view - timing chain cover	108
2.2	Removing and installing timing chain cover	110
3	Chain drive	118
3.1	Exploded view - camshaft timing chains	118
3.2	Exploded view - drive chain for valve gear	120
3.3	Exploded view - drive chain for balance shaft and oil pump	121
3.4	Removing and installing camshaft timing chain	122
3.5	Removing camshaft timing chain from camshafts	129
3.6	Removing and installing drive chain for valve gear	138
3.7	Removing and installing drive chain for auxiliary drive	139
4	Toothed belt drive	144
4.1	Exploded view - toothed belt for high-pressure pump	144
4.2	Removing and installing toothed belt for high-pressure pump	146
5	Valve gear	155
5.1	Exploded view - valve gear	155
5.2	Measuring axial clearance of camshaft	157
5.3	Measuring radial clearance of camshaft	158
5.4	Removing and installing camshaft oil seal	159
5.5	Removing and installing camshaft	160
5.6	Checking hydraulic valve compensation elements	175
5.7	Removing and installing valve stem oil seals	177
6	Inlet and exhaust valves	184
6.1	Machining valve seats	184
6.2	Checking valve guides	184
6.3	Checking valves	185
6.4	Valve dimensions	185
17 - Lubrication		186
1	Sump/oil pump	186
1.1	Exploded view - sump/oil pump	186
1.2	Engine oil	190
1.3	Checking oil level	190
1.4	Removing and installing sump (bottom section)	190
1.5	Removing and installing sump (top section)	192
1.6	Removing and installing oil pump	194
1.7	Removing and installing oil level and oil temperature sender G266	195
2	Engine oil cooler	196
2.1	Exploded view - engine oil cooler	196
2.2	Removing and installing engine oil cooler	198

2.3	Removing and installing mounting plate for engine oil cooler, pressure control valve and oil filter housing	198
3	Crankcase breather	200
3.1	Removing and installing pressure control valve for crankcase breather system	200
4	Oil filter/oil pressure switches	201
4.1	Checking oil pressure switch F22 / oil pressure switch for reduced oil pressure F378	201
4.2	Removing and installing oil pressure switch F22	201
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	202
4.4	Checking oil pressure	203
4.5	Removing and installing oil filter housing	204
4.6	Removing and installing valve for oil pressure control N428	205
19 - Cooling	207	
1	Cooling system/coolant	207
1.1	Connection diagram - coolant hoses	207
1.2	Checking cooling system for leaks	210
1.3	Draining and filling cooling system	212
2	Coolant pump/thermostat assembly	219
2.1	Exploded view - coolant pump	219
2.2	Exploded view - pump for exhaust gas recirculation cooler V400	220
2.3	Removing and installing coolant pump	220
2.4	Removing and installing pump for exhaust gas recirculation cooler V400	222
2.5	Removing and installing hose connection with thermostat	223
2.6	Removing and installing coolant temperature sender G62	224
2.7	Removing and installing radiator outlet coolant temperature sender G83	226
3	Coolant pipes	227
3.1	Exploded view - coolant pipes	227
3.2	Removing and installing coolant pipes	230
4	Radiator/radiator fans	244
4.1	Exploded view - radiator/radiator fans	244
4.2	Removing and installing radiator	245
4.3	Removing and installing radiator cowl	250
4.4	Removing and installing radiator fans	254
4.5	Removing and installing radiator fan control unit J293 / J671	255
21 - Turbocharging/supercharging	257	
1	Turbocharger	257
1.1	Exploded view - turbocharger	257
1.2	Removing and installing turbocharger	259
1.3	Removing and installing turbocharger 1 control unit J724	265
1.4	Removing and installing intermediate flange	275
2	Charge air system	276
2.1	Exploded view - charge air system	276
2.2	Removing and installing charge air cooler	277
2.3	Removing and installing charge pressure sender G31	281
23 - Mixture preparation - injection	282	
1	Injection system	282
1.1	Overview - fuel system	282
1.2	Overview of fitting locations - injection system	286
1.3	Exploded view - fuel system	296
1.4	Filling and bleeding fuel system	299
1.5	Checking fuel system for leaks	300
2	Vacuum system	301
2.1	Checking vacuum system	301

3	Injectors/high-pressure reservoir (rail)	302
3.1	Checking injectors	302
3.2	Performing adaption of correction values for injectors	302
3.3	Checking for injectors sticking open	303
3.4	Checking return flow rate of injectors with engine running	305
3.5	Checking return flow rate of injectors at starter cranking speed	309
3.6	Checking pressure retention valve in fuel return line	312
3.7	Checking restrictor in fuel return line	313
3.8	Removing and installing injectors	313
3.9	Removing and installing high-pressure pipes	318
4	Air cleaner	320
4.1	Exploded view - air cleaner housing	320
4.2	Removing and installing air cleaner housing	322
5	Intake manifold	327
5.1	Exploded view - intake manifold	327
5.2	Removing and installing intake manifold (top section)	328
5.3	Removing and installing intake manifold (bottom section)	330
6	Senders and sensors	335
6.1	Checking fuel pressure regulating valve N276	335
6.2	Removing and installing fuel pressure regulating valve N276	337
6.3	Removing and installing fuel pressure sender G247	340
6.4	Removing and installing air mass meter G70	344
6.5	Removing and installing exhaust gas pressure sensor 1 G450	344
7	Engine control unit	346
7.1	Wiring and component check with test box V.A.G 1598/42	346
7.2	Removing and installing engine control unit J623	348
8	High-pressure pump	352
8.1	Exploded view - high-pressure pump	352
8.2	Removing and installing high-pressure pump	355
8.3	Performing first fuel filling after installing high-pressure pump	357
9	Lambda probe	359
9.1	Exploded view - Lambda probe	359
9.2	Removing and installing Lambda probe	360
26 - Exhaust system		361
1	Exhaust pipes/silencers	361
1.1	Exploded view - silencers	361
1.2	Removing and installing front exhaust pipe	365
1.3	Separating exhaust pipes/silencers	367
1.4	Renewing tailpipes	368
1.5	Stress-free alignment of exhaust system	368
1.6	Checking exhaust system for leaks	369
1.7	Aligning tailpipes	369
2	Emission control system	371
2.1	Removing and installing particulate filter	371
3	Exhaust gas temperature control	373
3.1	Exploded view - exhaust gas temperature control	373
3.2	Removing and installing exhaust gas temperature sender	374
4	Exhaust gas recirculation	377
4.1	Exploded view - exhaust gas recirculation system	377
4.2	Removing and installing exhaust gas recirculation cooler	378
4.3	Removing and installing exhaust gas recirculation control motor V338	381
4.4	Removing and installing exhaust gas recirculation temperature sensor G98	381
5	Exhaust manifolds	383

5.1	Exploded view - exhaust manifold	383
5.2	Removing and installing exhaust manifolds	384
5.3	Removing and installing intermediate pipes	386
28 - Glow plug system	389	
1	Glow plug system	389
1.1	Removing and installing glow plug	389
1.2	Checking glow plug	390
1.3	Removing and installing engine speed sender G28	391